

Berzerk  
Stern Electronics, 1980

Berzerk  
Option Switch Settings

-----  
-----  
Option switches are located on the ZPU-1000 board. There are 5 banks of 8-pos DIP switches.

1	2	3	4	5	6	7	8	Option
-----								
-----								
								Location F2 (#3-6 not used)
								-----
On	On					On		Signature Analysis mode
							On	Extra man at 5,000
							On	Extra man at 10,000
								Location F3 (#3-6 not used)
								-----
On								Switch test
	On							Crosshatch pattern
						Off	Off	English coinage
						Off	On	French coinage
						On	Off	German coinage
						On	On	Spanish coinage
								Location F4,F5,F6 (#4-8 not used)
								-----
Off	Off	Off	Off					1 Coin 1 Credit
On	Off	Off	Off					1 Coin 2 Credits
Off	On	Off	Off					1 Coin 3 Credits
On	On	Off	Off					1 Coin 4 Credits
Off	Off	On	Off					1 Coin 5 Credits
On	Off	On	Off					1 Coin 6 Credits
Off	On	On	Off					1 Coin 7 Credits
On	On	On	Off					1 Coin 10 Credits
Off	Off	Off	On					1 Coin 14 Credits
On	Off	Off	On					2 Coins 1 Credit
Off	On	Off	On					2 Coins 3 Credits
On	On	Off	On					2 Coins 5 Credits
Off	Off	On	On					2 Coins 7 Credits
On	Off	On	On					4 Coins 3 Credits
Off	On	On	On					4 Coins 5 Credits
On	On	On	On					4 Coins 7 Credits

Note: F4 controls coin mech #1, F5 controls coin mech #2 and F6 controls #3.

Miscellaneous Notes

-----  
The game switches are also numbered from 1 to 40. Bank F2 switch #1 is switch #1. Bank F3 switch #1 is switch #9. Bank F4 switch #1 is switch #17,



17	18	19	20	21	22	23	24
----- Coin Mech #1 -----							
Bank							
F4							
-----							
25	26	27	28	29	30	31	32
----- Coin Mech #2 -----							
Bank							
F5							
-----							
33	34	35	36	37	38	39	40
----- Coin Mech #3 -----							
Bank							
F6							

-----

# VFB Switch Status

On when	On when	On when	On when	On when			
joystick	joystick	joystick	joystick	fire			
left	right	up	down	pressed			
-----							
On when	On when				On if	On if	On if
start 1	start 2				coin	coin	coin

