
 Name Of Game: Goalie Ghost Manuf: Bally SENTE

 Typed By: James R. Twine Email: jtwine@prodigy.com

Notes:

- 1) Facing the board, with edge connectors to the left, DIP switch #1 is at the upper left (H-1) and DIP switch #2 is to the right of DIP switch #1 (G-1).
 - 2) A "*" indicates factory settings.
-

Option	(DIP Swtich #1)	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
Timed Game - 2:30		OFF	OFF	OFF					
Timed Game - 2:00	*	OFF	ON	OFF					
Timed Game - 1:30		OFF	OFF	ON					
Timed Game - 1:15		OFF	ON	ON					
21 Point Game		ON	OFF	OFF					
15 Point Game	*	ON	ON	OFF					
11 Point Game		ON	OFF	ON					
9 Point Game		ON	ON	ON					
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
Not Used					X	X	X	X	
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
Attract Mode Music Off									
OFF									
Attract Mode Music On									
ON									

Option	(DIP Swtich #2)	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
1 Coins 1 Credit		OFF	OFF						
1 Coin 2 Credits		OFF	ON						

2 Coins 1 Credit	ON	OFF					
Free Play	ON	ON					

1 Or 2 Players/Credit *		OFF					
1 Player/Credit		ON					

Not Used			X	X	X	X	
X							

