

MX-5000

Typed in by Tim Lindquist

Dip Switch 1:

COIN 1 SWITCH SET:

4, 3, 2, 1, coin, play

OFF OFF OFF OFF 1 1
 OFF ON 1 2
 ON OFF 1 3
 ON ON 1 4
OFF ON OFF OFF 1 5
 OFF ON 1 6
 ON OFF 1 7
 ON ON 2 1
ON OFF OFF OFF 2 3
 OFF ON 2 5
 ON OFF 3 1
 ON ON 3 2
ON ON OFF OFF 3 4
 OFF ON 4 1
 ON OFF 4 3
 ON ON FREE PLAY

COIN 2 SWITCH SET:

8, 7, 6, 5, coin, play

OFF OFF OFF OFF 1 1
 OFF ON 1 2
 ON OFF 1 3
 ON ON 1 4
OFF ON OFF OFF 1 5
 OFF ON 1 6
 ON OFF 1 7
 ON ON 2 1
ON OFF OFF OFF 2 3
 OFF ON 2 5
 ON OFF 3 1
 ON ON 3 2
ON ON OFF OFF 3 4
 OFF ON 4 1
 ON OFF 4 3
 ON ON INVALID

Dip Switch 2:

1, 2, NUMBER OF PLAYER'S LIFE

OFF OFF 1
ON OFF 2
OFF ON 3
ON ON 5

3, CHANGE OF TABLE OR UP-RIGHT

OFF TABLE
ON UP-RIGHT

4, 5, BONUS LIFE

OFF OFF 30000 70000 Every 70000
ON ON 40000 80000 Every 80000
OFF ON 30000 only
ON OFF 40000 only

6, 7, GAME DIFFICULTY

OFF OFF EASY
ON OFF NORMAL
OFF ON DIFFICULT
ON ON VERY DIFFICULT

8, SOUND IN ATTRACT MODE

OFF SOUND OFF
ON SOUND ON

Dip Switch 3:

1, VIDEO SCREEN FLIP

OFF NORMAL
ON UPSIDE DOWN

2, SINGLE/DUAL CONTROL UPRIGHT

OFF SINGLE UPRIGHT CONTROL
ON DUAL UPRIGHT CONTROL

3, CHANGE OF MODE

OFF GAME
ON CHECK

4, NOT USED
