

This document has been downloaded from:



The largest resource for amusement machines
documentation on the world wide web!



FLIPPERSPILL.COM

Major Title Manual

3. コネクター表

CONNECTOR

1. FOR 2 LEVERS

CONFORMING JAMMA STANDARD (3.96MM PITCH)

SOLDER SIDE			PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
MISINSERTION-PREVENTING KEY	H	7	MISINSERTION-PREVENTING KEY
COIN COUNTER B	J	8	COIN COUNTER A
GND	K	9	GND
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
GREEN	N	12	RED
SYNC	P	13	BLUE
SERVICE SW	R	14	GND
	S	15	
COIN B	T	16	COIN A
(2P START)	U	17	1P START
	V	18	
	W	19	
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SHOT	Z	22	1P SHOT
2P SELECT	a	23	1P SELECT
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND


DIP SW 2

		S W							
		1	2	3	4	5	6	7	8
FLIP PICTURE	NO	OFF					ALWAYS OFF		
	YES	ON							
* CABINET TYPE	TABLE		OFF						
	UPRIGHT		ON						
COIN MODE.	MODE 1			OFF					
	MODE 2			ON					
DIFFICULTY	NORMAL				OFF				
	HARD				ON				
FREEZE PICTURE	NO					OFF			
	YES					ON			
* CONTROL PANEL	2 LEVERS							OFF	
	4 LEVERS							ON	
DIAGNOSTIC TEST	NO								OFF
	YES								ON


N.B. In the freeze picture mode, press 2P-start button to freeze and 1P-start button to restart the game.

* CABINET TYPE & CONTROL PANEL

TABLE • 2 LEVERS
(OFF • OFF)

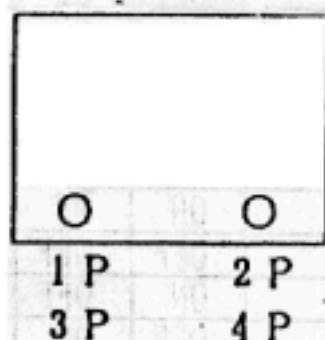


UPRIGHT • 2 LEVERS
(ON • OFF)

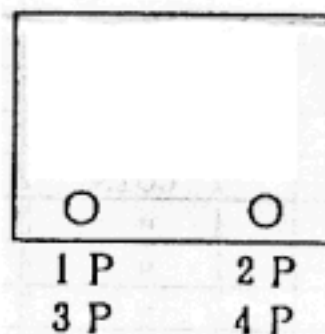


PLEASE REFER TO PAGE 5
FOR THE CONNECTOR FOR
2 LEVERS.

TABLE • 4 LEVERS
(OFF • ON)
3 P 4 P

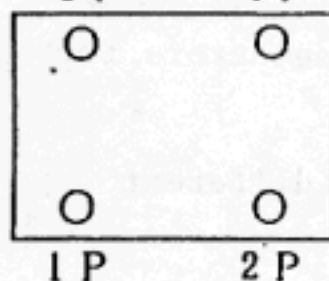

UPRIGHT • 4 LEVERS
(ON • ON)

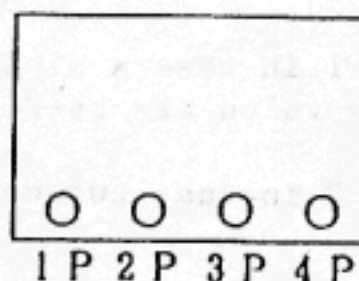

PLEASE REFER TO PAGE 6
FOR THE CONNECTOR FOR
4 LEVERS.

2. FOR 4 LEVERS

SOLDER SIDE			PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+ 5 V	C	3	+ 5 V
+ 5 V	D	4	+ 5 V
	E	5	
+ 1 2 V	F	6	+ 1 2 V
MISINSERTION-PREVENTING KEY	H	7	MISINSERTION-PREVENTING KEY
COIN COUNTER B	J	8	COIN COUNTER A
GND	K	9	GND
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
GREEN	N	12	RED
SYNC	P	13	BLUE
SERVICE SW	R	14	GND
	S	15	
COIN B	T	16	COIN A
(2 P START)	U	17	1 P START
3 P SHOT	V	18	1 P SHOT
3 P SELECT	W	19	1 P SELECT
3 P LEFT	X	20	1 P LEFT
3 P RIGHT	Y	21	1 P RIGHT
4 P SHOT	Z	22	2 P SHOT
4 P SELECT	a	23	2 P SELECT
4 P LEFT	b	24	2 P LEFT
4 P RIGHT	c	25	2 P RIGHT
	d	26	
GND	e	27	GND
GND	f	28	GND

2. ディップスイッチ表

DIP SWITCHES

DIP SW1

				S								W							
				1	2	3	4	5	6	7	8								
NUMBER OF PLAYER				2	OFF	OFF													
				1	ON	OFF													
				3	OFF	ON													
				4	ON	ON													
SOUND IN DEMO				YES				OFF											
				NO				ON											
									OFF										
								OFF											
									OFF										
COIN MODE	MODE 2 3 OF DIP SW 2 ON	A	1 COIN 1 PLAY					OFF	OFF										
			2 COINS 1 "					ON	OFF										
			3 " 1 "					OFF	ON										
			5 " 1 "					ON	ON										
		B	1 COIN 2 PLAYS									OFF	OFF						
			1 " 3 "									ON	OFF						
			1 " 5 "									OFF	ON						
			1 " 6 "									ON	ON						
	MODE 1 3 OF DIP SW 2 OFF		1 " 1 PLAY					OFF	OFF	OFF	OFF								
			2 COINS 1 "					ON	OFF	OFF	OFF								
			3 " 1 "					OFF	ON	OFF	OFF								
			4 " 1 "					ON	ON	OFF	OFF								
			5 " 1 "					OFF	OFF	ON	OFF								
			6 " 1 "					ON	OFF	ON	OFF								
			1 COIN 2 PLAYS					OFF	ON	ON	OFF								
			1 " 3 "					ON	ON	ON	OFF								
			1 " 4 "					OFF	OFF	OFF	ON								
			1 " 5 "					ON	OFF	OFF	ON								
			1 " 6 "					OFF	ON	OFF	ON								
			2 COINS 3 "					ON	ON	OFF	ON								
			3 " 2 "					OFF	OFF	ON	ON								
			5 " 3 "					ON	OFF	ON	ON								
			8 " 3 "					OFF	ON	ON	ON								
								ON	ON	ON	ON								

N.B.

- 1) Select Coin Mode 1 in case a single coin selector or two selectors for coins of the same value are used.
- 2) Select Coin Mode 2 in case two coin selectors of coins of different values are used.