Typed by Franklin Bowen (mjrhavoc@clark.net) 3/18/96 Thanks to Pauline at Video Connections who faxed them to me!

Wish I knew what the ** on switch 8 means.

Make Trax switch settings

(DETAIL B) SWITCH NUMBER

ADJUSTMENT	1	2	3	4	 5	 6	7	**8
*RECOMMENDED 1 PLAY/2 COINS 2 PLAYS/1 COIN *1 PLAY/1 COIN FREE PLAY	OFF OFF ON OFF ON	ON OFF OFF ON ON	===== ON			==== OFF	ON	===== OFF
6 BRUSHES 5 BRUSHES 4 BRUSHES *3 BRUSHES FIRST PATTERN EASY *FIRST PATTERN DIFFICULT			OFF ON OFF ON	OFF OFF ON ON	OFF ON			
*WARP HOLE DISABLED WARP HOLE ENABLED						OFF ON		
TABLE GAME UPRIGHT							OFF ON	