

MAPPY  
OPTION SWITCH SETTINGS

Posted with permission by [Bally/Midway/Williams/NAMCO/whomever]

dip switch A (5B)

	SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7
SW#8							
Difficulty level							
A (default, easiest)	OFF	OFF					
B	ON	OFF					
C	OFF	ON					
D (hardest)	ON	ON					

	SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7
SW#8							
Sounds							
provide sound during attract (default)						OFF	
do not make sound during attract						ON	

	SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7
SW#8							
Round change							
Normal operation (default)						OFF	
Rack advance (see below)						ON	

	SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7
SW#8							
Freeze video							
Normal (default)							
OFF							
Freeze							
ON							

Notes:

Switches 3 through 5 inclusive must always be OFF.

The Round Change setting allows you to advance through rounds, not picking up points, while it is set to rack advance. To resume playing, turn it off and it will continue from the beginning of the next rack.

The defaults mentioned are the factory recommended settings.

dip switch B (5E)

	SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7
SW#8							
Coins per credit - coin switch number 1							
1 coin, 1 credit (default)	OFF	OFF	OFF				
1 coin, 2 credits	ON	OFF	OFF				
1 coin, 3 credits	OFF	ON	OFF				

1 coin, 6 credits	ON	ON	OFF
2 coins, 1 credit	OFF	OFF	ON
2 coins, 3 credits	ON	OFF	ON
3 coins, 1 credit	OFF	ON	ON
3 coins, 2 credits	ON	ON	ON

SW#1 SW#2 SW#3 SW#4 SW#5 SW#6 SW#7

SW#8

Bonus mice

1, 2, 3 mouse start	5 mouse start
------------------------	------------------

1st Mappy 20000	1st Mappy 30000			
2nd Mappy 70000	2nd Mappy 80000	OFF	OFF	OFF
1st Mappy 20000	1st Mappy 30000			
2nd Mappy 60000	2nd Mappy 100000	ON	OFF	OFF
1st Mappy 20000	1st Mappy 30000			
2nd Mappy 80000	2nd Mappy 120000	OFF	ON	OFF
1st Mappy 30000	1st Mappy 30000			
2nd Mappy 100000	2nd Mappy never	ON	ON	OFF
1st Mappy 20000	1st Mappy 40000			
2nd Mappy never	2nd Mappy never	OFF	OFF	ON
1st Mappy 20000	1st Mappy 30000			
and every 70000	and every 100000	ON	OFF	ON
1st Mappy 20000	1st Mappy 40000			
and every 80000	and every 120000	OFF	ON	ON
1st Mappy never	1st Mappy never	ON	ON	ON

SW#1 SW#2 SW#3 SW#4 SW#5 SW#6 SW#7

SW#8

Starting mouse count

3 (default)	OFF
OFF	
5	ON
OFF	
1	OFF
ON	
2	ON
ON	

Notes:

The defaults mentioned are the factory recommended settings.

I don't work for anyone in the coin-op industry, and I don't take responsibility for anything you may do with the above information. For example, if you manage to ground the flyback transformer on the

monitor with your body while trying to change switch settings, your survivors have to blame it on your own klutziness, as I never told you to do that, and I never suggested it would be a good thing to try.