

Mega Zone Switch Settings
Konami/Interlogic, 1983

Mega Zone
Option Switch Settings

DIP Switch No. 1 Settings							
1	2	3	4	5	6	7	8 Option

				Coin Switch No. 1	
				1 Coin	1 Credit*
Off	Off	Off	Off	1 Coin	2 Credits
On	Off	Off	Off	1 Coin	3 Credits
Off	On	Off	Off	1 Coin	4 Credits
On	On	Off	Off	1 Coin	5 Credits
Off	Off	On	Off	1 Coin	6 Credits
On	Off	On	Off	1 Coin	7 Credits
Off	On	On	Off	2 Coins	1 Credit
On	On	On	Off	2 Coins	3 Credits
Off	Off	Off	On	2 Coins	5 Credits
On	Off	Off	On	3 Coins	1 Credit
Off	On	Off	On	3 Coins	2 Credits
On	On	Off	On	3 Coins	3 Credits
Off	Off	On	On	4 Coins	1 Credit
On	Off	On	On	4 Coins	1 Credit
Off	On	On	On	Free Play	
On	On	On	On		

				Coin Switch No. 2	
				1 Coin	1 Credit*
Off	Off	Off	Off	1 Coin	2 Credits
On	Off	Off	Off	1 Coin	3 Credits
Off	On	Off	Off	1 Coin	4 Credits
On	On	Off	Off	1 Coin	5 Credits
Off	Off	On	Off	1 Coin	6 Credits
On	Off	On	Off	1 Coin	7 Credits
Off	On	On	Off	2 Coins	1 Credit
On	On	On	Off	2 Coins	3 Credits
Off	Off	Off	On	2 Coins	5 Credits
On	Off	Off	On	3 Coins	1 Credit
Off	On	Off	On	3 Coins	2 Credits
On	On	Off	On	3 Coins	3 Credits
Off	Off	On	On	4 Coins	1 Credit
On	Off	On	On	4 Coins	1 Credits
Off	On	On	On	Void	
On	On	On	On		

1	2	3	4	5	6	7	8	Option
---	---	---	---	---	---	---	---	--------

DIP Switch No. 2 Settings								
1	2	3	4	5	6	7	8	Option

								Number of Lives

Off	Off							3*
On	Off							4
Off	On							5
On	On							Unlimited
								Game Type

		Off						Cocktail Table
		On						Upright
								Bonus Life

								First Second Every
		Off	Off					20,000 70,000 70,000
		On	Off					20,000 80,000 80,000*
		Off	On					30,000 90,000 90,000
		On	On					30,000 100,000 100,000
								Difficulty of the Game

				Off	Off			Easy
				On	Off			Normal*
				Off	On			Difficult
				On	On			Very Difficult
								Sound in Attractive Mode

						Off	Off	
						On	On*	

1	2	3	4	5	6	7	8	Option

* indicated recommended settings