

Name Of Game: Mini Golf

Manuf: Bally SENTE

Typed By: James R. Twine

Email: jtwine@prodigy.com

Notes:

- 1) Facing the board, with edge connectors to the left, DIP switch #1 is at the upper left (H-1) and DIP switch #2 is to the right of DIP switch #1 (G-1).
 - 2) A "*" indicates factory settings.
- -----

Option	(DIP Swtich #1)	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Disable Add-A-Coin	*	OFF							
Enable Add-A-Coin		ON							
Not Used			X	X	X	X	X	X	
Attract Mode Music Off									
Attract Mode Music On									

Option	(DIP Swtich #2)	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Free Play		ON	ON						
1 Coin 1 Credit	*	OFF	ON						
1 Coin 2 Credits		ON	OFF						
2 Coins 1 Credit		OFF	OFF						
No Bonus Coins	*			ON	ON	ON			
2 Coins Adds 1 Coin				OFF	ON	ON			
3 Coins Adds 1 Coin				ON	OFF	ON			

4 Coins Adds 1 Coin			OFF	OFF	ON		
4 Coins Adds 2 Coins			ON	ON	OFF		
5 Coins Adds 1 Coin			OFF	ON	OFF		
5 Coins Adds 2 Coins			ON	OFF	OFF		
5 Coins Adds 3 Coins			OFF	OFF	OFF		

L. Coin Multiplies By 1 *						ON	
L. Coin Multiplies By 2						OFF	

R. Coin Multiplies By 1 *						ON	
R. Coin Multiplies By 4						OFF	
R. Coin Multiplies By 5						ON	
R. Coin Multiplies By 6						OFF	

