

From: Marc Levy <mal@hocpa.ho.att.co>  
Subject: Re: Switch settings for Mr. Do?  
Date: Thursday, March 14, 1996 4:13PM

> Anyone out here know the switch settings for Mr. Do?  
Sure! Just happen to have the right here!

(I have been pulling my hair out to fix my Mr. Do! PCB!)

for PCB 8201

Dip Switch A  
+-----+

| Number of Mr. Do's | SW1 | SW2 |
|--------------------|-----|-----|
| 3                  | OFF | OFF |
| 4                  | OFF | ON  |
| 5                  | ON  | OFF |
| 6                  | ON  | ON  |

|            |     |
|------------|-----|
| Game Style | SW3 |
| Table      | Off |
| Upright    | On  |

|                             |     |
|-----------------------------|-----|
| Ease or Hardness of "EXTRA" | SW4 |
| Easy to win                 | OFF |
| Hard to win                 | ON  |

|                               |     |
|-------------------------------|-----|
| Ease or Hardness of "SPECIAL" | SW5 |
| Easy to Win                   | OFF |
| Hard to win                   | ON  |

|                          |     |                                  |
|--------------------------|-----|----------------------------------|
| Automatic Screen Reneral | SW6 | (What the hell does this mean?!) |
| Can                      | OFF |                                  |
| Cannot                   | ON  |                                  |

|                          |     |     |
|--------------------------|-----|-----|
| Ease or Hardness of Game | SW7 | SW8 |
| 1 (Average)              | OFF | OFF |
| 2                        | OFF | ON  |
| 3                        | ON  | OFF |
| 4 (Hard)                 | ON  | ON  |

Dip Switch B (Coin and Credit)  
+-----+

Left Side Chute

| Coin | Credit | SW1 | SW2 | SW3 | SW4 |
|------|--------|-----|-----|-----|-----|
| 1    | 1      | OFF | OFF | OFF | OFF |
| 1    | 2      | OFF | OFF | OFF | ON  |
| 1    | 3      | OFF | OFF | ON  | OFF |
| 1    | 4      | OFF | OFF | ON  | ON  |
| 1    | 5      | OFF | ON  | OFF | OFF |
| 2    | 1      | OFF | ON  | OFF | ON  |
| 2    | 3      | OFF | ON  | ON  | OFF |
| 3    | 1      | OFF | ON  | ON  | ON  |

(Ya! 75 Cents for 1 play!!)

|      |      |      |     |     |     |                                |
|------|------|------|-----|-----|-----|--------------------------------|
| 3    | 2    | ON   | OFF | OFF | OFF | (A real bargain!)              |
| 4    | 1    | ON   | OFF | OFF | ON  | (A EMPTY ARCADE!! Get a life!) |
| FREE | FREE | FREE | ON  | ON  | ON  | ON                             |

All other combo's of switches are 1 coin 1 credit.

For the right side shoot, it is the same but SW5=SW1, SW6=SW2, and so on!

Good luck!