

MISS PACMAN

WIRING

<u>SOLDER SIDE</u>			<u>PARTS SIDE</u>
GND	A	1	GND
GND	B	2	GND
GND	C	3	GND
SPEAKER	D	4	SPEAKER
+12V	E	5	+12V
1P UP	F	6	
2P UP	H	7	
	J	8	
+5V	K	9	+5V
	L	10	1P DOWN
	M	11	2P DOWN
2P START	N	12	
1P START	P	13	COIN
1P RIGHT	R	14	
1P LEFT	S	15	RED
BLUE	T	16	2P RIGHT
GREEN	U	17	2P LEFT
SYNC	V	18	

DIP-SW SETTING

SW	1.	2.	3.	4.	5.	6.	7.	8.
COINAGE	OFF	ON						1 C-1 P
	OFF	OFF						2 -1
	ON	OFF						1 -2
	ON	ON						FREE PLAY
NO. OF PACKMAN			ON	ON				1
			OFF	ON				2
			ON	OFF				3
			OFF	OFF				5
BONUS POINTS					OFF	OFF		NO BONUS
					ON	ON		10,000 POINTS
					OFF	ON		15,000
					OFF	ON		20,000
TEST						ON		TEST 1
						ON		TEST 2



FLIPPERSPILL.COM