

Name Of Game: Off The Wall

Manuf: Bally SENTE

Typed By: James R. Twine

Email: jtwine@prodigy.com

Notes:

- 1) Facing the board, with edge connectors to the left, DIP switch #1 is at the upper left (H-1) and DIP switch #2 is to the right of DIP switch #1 (G-1).
- 2) A "*" indicates factory settings.

Option	(DIP Swtich #1)	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Not Used		X	X	X	X	X	X	X	
Attract Mode Music Off									
OFF									
Attract Mode Music On	*								
ON									

Option	(DIP Swtich #2)	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
1 Coins 1 Credit		OFF	OFF						
1 Coin 2 Credits		OFF	ON						
2 Coins 1 Credit		ON	OFF						
Free Play		ON	ON						
1 Or 2 Players/Credit	*			OFF					
1 Player/Credit				ON					

```
| -
----|
Not Used      |      |      |      | X  | X  | X  | X  |
X  |
-----
-
-----
```