

R A S T A N S A G A

DIP SW 1.		1	2	3	4	5	6	7	8
TABLE TYPE		OFF			OFF				
UP-RIGHT TYPE		ON			OFF				
SCREEN REVERSE			ON		OFF				
SCREEN NORMAL			OFF		OFF				
TEST MODE				ON	OFF				
NOT TEST MODE				OFF	OFF				
PLAY CHARGE (COIN 1)									
1coin 1play					OFF				
1coin 2play					OFF				
2coin 1play					OFF				
2coin 3play					OFF				
PLAY CHARGE (COIN 2)									
1coin 1play					OFF			OFF	OFF
1coin 2play					OFF			ON	OFF
2coin 1play					OFF			OFF	ON
2coin 3play					OFF			ON	ON
DIP SW 2.									
DIFFICULTY B		OFF	OFF						
A		ON	OFF						
C		OFF	ON						
D		ON	ON						
* Easy(A)--->Difficult(D)									
BONUS POINT				OFF	OFF				OFF
100000				ON	OFF				OFF
150000				OFF	ON				OFF
200000				OFF	ON				OFF
250000				ON	ON				OFF
NUMBER OF PLAYER									
3						OFF			
4						ON			
5						OFF	OFF		
6						ON	ON		
CONTINUE PLAY								OFF	OFF
NOT CONTINUE PLAY								ON	ON

Solder Side	Parts Side
1 GND	GND
2 GND	GND
3 +5V	+5V
4 +5V	+5V
5 -5V	-5V
6 +12V (+13V)	+12V (+13V)
7 POST	POST
8 COIN COUNTER 1	COIN COUNTER 1
9 COIN LOCKOUT 1	COIN LOCKOUT 1
10 SPEAKER OUT(+)	SPEAKER OUT(+)
11	
12 VIDEO G	VIDEO R
13 VIDEO SYNC	VIDEO B
14 SERVICE SW	VIDEO GND
15 TILT SW	
16 (COIN 2)	COIN 1
17 SELECT-2	SELECT-1
18 2P UP	1P UP
19 2P DOWN	1P DOWN
20 2P LEFT	1P LEFT
21 2P RIGHT	1P RIGHT
22 2P SWORD BUTTON	1P SWORD BUTTON
23 2P JUMP BUTTON	1P JUMP BUTTON
24	
25	
26	
27 GND	GND
28 GND	GND

= THIS GAME : 8 Way Lever 2 Button =

This document has been downloaded from: