

# Rush'n'Attack (Konami) DIP Switch Settings

Typed in by Jim Maricondo (jmaricon@nyx.cs.du.edu)

Dip Switch 1:

COIN 1 SWITCH SET:

```
    4,  3,  2,  1, coin, play
-----
OFF OFF OFF OFF 1 1
      OFF ON  1 2
      ON  OFF 1 3
      ON  ON  1 4
OFF ON  OFF OFF 1 5
      OFF ON  1 6
      ON  OFF 1 7
      ON  ON  2 1
ON  OFF OFF OFF 2 3
      OFF ON  2 5
      ON  OFF 3 1
      ON  ON  3 2
ON  ON  OFF OFF 3 4
      OFF ON  4 1
      ON  OFF 4 3
      ON  ON  FREE PLAY
```

COIN 2 SWITCH SET:

```
    8,  7,  6,  5, coin, play
-----
OFF OFF OFF OFF 1 1
      OFF ON  1 2
      ON  OFF 1 3
      ON  ON  1 4
OFF ON  OFF OFF 1 5
      OFF ON  1 6
      ON  OFF 1 7
      ON  ON  2 1
ON  OFF OFF OFF 2 3
      OFF ON  2 5
      ON  OFF 3 1
      ON  ON  3 2
ON  ON  OFF OFF 3 4
      OFF ON  4 1
      ON  OFF 4 3
      ON  ON  INVALID
```

Dip Switch 2:

```
    1,  2, NUMBER OF PLAYER'S LIFE
-----
OFF OFF 2
ON  OFF 3
OFF ON  5
ON  ON  7
```

3, CHANGE OF TABLE OR UP-RIGHT

-----  
OFF TABLE  
ON UP-RIGHT

4, 5, BONUS SET FIRST, SECOND, THIRD

-----  
OFF OFF 30000 70000 Every 70000  
ON OFF 40000 80000 Every 80000  
OFF ON 50000 100000 Every 100000  
ON ON 50000 200000 Every 200000

6, 7, GAME DIFFICULTY

-----  
OFF OFF EASY  
ON OFF NORMAL  
OFF ON DIFFICULT  
ON ON VERY DIFFICULT

8, SOUND IN ATTRACT MODE

-----  
OFF SOUND OFF  
ON SOUND ON

Dip Switch 3:

1, VIDEO SCREEN FLIP

-----  
OFF NORMAL  
ON UPSIDE DOWN

2, SINGLE/DUAL CONTROL UPRIGHT

-----  
OFF SINGLE UPRIGHT CONTROL  
ON DUAL UPRIGHT CONTROL

Switches 3 & 4 are not used.