



取扱説明書

This document has been downloaded from:



FLIPPERSPILL.COM





取扱説明書

注意事項 Technical information

(1)電源

Required Power Capacity

+5V 5A or more

+12V 1A or more

(2)Output

R— analog, positive

G— analog, positive

B— analog, positive

SYNC— H-V complexed, negative

あそびかた Play Instruction

半田面 SOLDER SIDE			部品面 COMPONENT SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER2	J	8	COIN COUNTER1
	K	9	
SP(-)	L	10	SP(+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
START SW 2	U	17	START SW 1
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P PUSH 1	Z	22	1P PUSH 1
2P PUSH 2	a	23	1P PUSH 2
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	i	28	GND

JAMMA仕様

◎操作

4方向レバー・2ボタン

4-WAY LEVER AND 2 BUTTONS ARE USED.

4方向レバー
4-WAY LEVER
左へ歩く ←○→ 右へ歩く
WALK LEFT ↓ WALK RIGHT
伏せる
LIE DOWN

主人公の移動
HERO'S MOTION

ボタン1
PUSH 1



爆弾を投げる
BOMB THROWING

ボタン2
PUSH 2



ジャンプ
JUMP UP

◎規定時間内に敵を全滅させるとステージクリア。

IN CASE OF YOUR DISAPPEARING ALL ENEMIES DURING THE FIXED TIME, ONE STAGE IS FINISHED.

◎主人公は爆発に触れた時のみミスになる。敵に触れてもミスにならない。

HEROES ARE DISAPPEARED AT TOUCH WITH BOMB ONLY. THEIR TOUCH WITH ENEMIES ARE FREE.

◎アイテム ITEMS

野菜とくだもの：100点～4000点

VEGETABLES & FRUITS:

100 TO 4,000 POINTS.

ショートケーキ：8個集めると1up
SHORTCAKE: WHEN YOU TAKE

8 PCS OF SHORTCAKES,

YOU HAVE ONE MORE HERO.

ひまわり：主人公のスピードアップ

SUNFLOWER: INCREASES

MOVING SPEED OF HERO

チューリップ：爆弾のパワーアップ

TULIP: INCREASES BOMB'S

POWER

ゆり：一定時間無敵

LILY: MAKES HERO INVINCIBLE

FOR A FIXED TIME.

あさがお：画面全爆

MORNING GLORY: BLOWS ALL

ENEMIES AWAY IN A MOMENT.

ディップスイッチ DIP SWITCH

SABOTEN BOMBERS

DIP SWITCH 1		1	2	3	4	5	6	7	8
プレイヤー数 PLAYER'S NUMBER	3	OFF	OFF						
	2	ON	OFF						
	4	OFF	ON						
	1	ON	ON						
難易度 DIFFICULTY	普通 NORMAL					OFF	OFF		
	易しい EASY					ON	OFF		
	難しい HARD					OFF	ON		
	非常に難しい HARDEST					ON	ON		
表示語 LANGUAGE	日本語 JAPANESE							OFF	
	英語 ENGLISH							ON	
画面反転 SCREEN F/F	無し NO								OFF
	有り YES								ON
出荷時の設定 SETTING AT MAKER'S DELIVERY		OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

DIP SWITCH 2		1	2	3	4	5	6	7	8
COIN SW 1	1 COIN 1 PLAY	OFF	OFF	OFF					
	1 COIN 2 PLAY	ON	OFF	OFF					
	1 COIN 3 PLAY	OFF	ON	OFF					
	1 COIN 4 PLAY	ON	ON	OFF					
	2 COINS 1 PLAY	OFF	OFF	ON					
	3 COINS 1 PLAY	ON	OFF	ON					
	4 COINS 1 PLAY	OFF	ON	ON					
	FREE PLAY	ON	ON	ON					
COIN SW 2	1 COIN 1 PLAY				OFF	OFF	OFF		
	1 COIN 2 PLAY				ON	OFF	OFF		
	1 COIN 3 PLAY				OFF	ON	OFF		
	1 COIN 4 PLAY				ON	ON	OFF		
	2 COINS 1 PLAY				OFF	OFF	ON		
	3 COINS 1 PLAY				ON	OFF	ON		
	4 COINS 1 PLAY				OFF	ON	ON		
	FREE PLAY				ON	ON	ON		
デモ時のサウンド DEMONSTRATION SOUND	有り YES							OFF	
	無し NO							ON	
出荷時の設定 SETTING AT MAKER'S DELIVERY		OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF