

* From: ung@filenet.com (Bill Ung)

"Scramble" Dip Switch Settings

SW #1	SW #2	Rockets	SW #3	Cabinet
-----	-----	-----	-----	-----
OFF	OFF	Unlimited	OFF	Table
OFF	ON	5	ON	Up Right
ON	OFF	4		
ON	ON	3		

SW #4	SW #5	Coins/Play	SW #6
-----	-----	-----	-----
OFF	OFF	4	Unused
OFF	ON	3	
ON	OFF	1	
ON	ON	2	

DIP Switch Location:

On my system, there is a two-board set. Looking at the board with the edge connector, component-side up and edge connector at the top-left; the DIP switch is located in the upper-left quadrant of the board. The switches are in a vertical formation, SW #1 at the top and SW #6 at the bottom. ON is towards the right and OFF is towards the left.

Volume Control Location:

With the board in the same orientation, the volume control is accessible through the hole in the large metal heatsink located on the right-hand side of the board. Turn clockwise to increase volume.