




# PC 596-909 Sound Generator

## Sound Volume Adjustments:

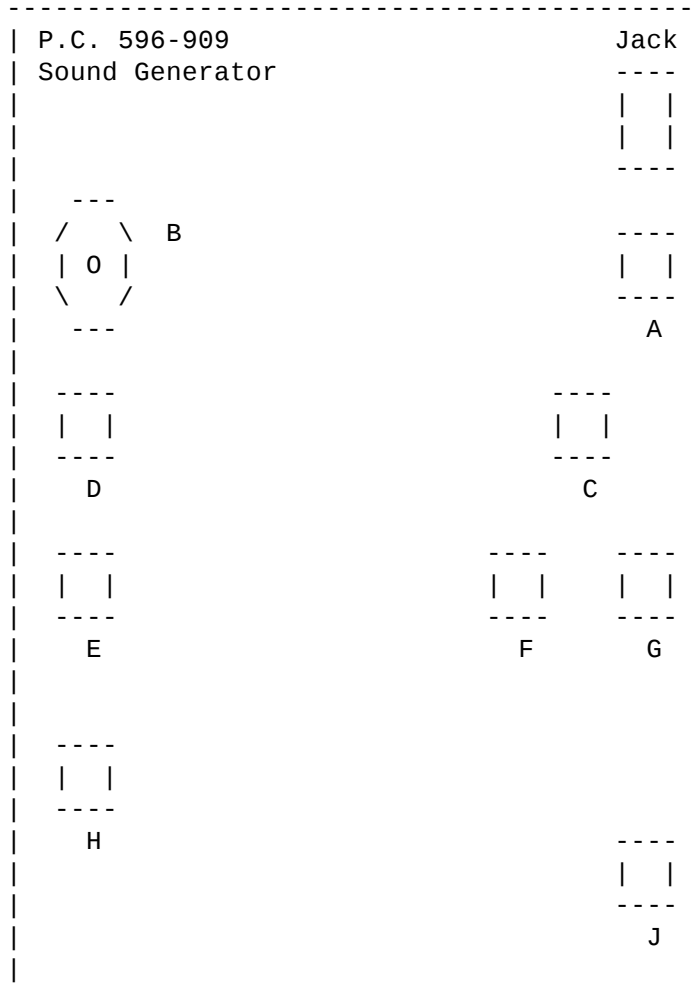

Note: CW and CCW are defined as viewed from pot face.

- A. Sonar Volume Control: to increase volume, rotate pot CCW
- B. Master Volume Control: to increase all volumes, rotate pot CW
- C. Sonar Rate Control: to increase pulse rate, rotate pot CCW
- D. Torpedo Volume Control: to increase volume, rotate pot CW
- E. Dive Sound Volume Control: to increase volume, rotate pot CW
- F. Sonar Tone Control: to raise sonar pitch, rotate pot CCW
- G. Ship Hit Explosion Volume: to increase volume, rotate pot CCW
- H. Dive Tone Control: to vary tone, rotate pot as desired
- J. Mine Explosion Volume Control: to increase volume, rotate pot CCW