

# Dip Switch settings

Coin/Credit Option Switch Settings				DIP SW #1				
Option		1	2	3	4	5	6	7
8								
1 Coin 1 Credit	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 Coin 2 Credit	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 Coin 3 Credit	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 Coin 4 Credit	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 Coin 5 Credit	OFF	OFF	ON	OFF	OFF	OFF	ON	ON
1 Coin 6 Credit	ON	OFF	ON	OFF	ON	OFF	ON	ON
2 Coin 1 Credit	OFF	ON	ON	OFF	OFF	ON	ON	ON
3 Coin 1 Credit	ON	ON	ON	OFF	ON	ON	ON	ON
4 Coin 1 Credit	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
2 Coin 3 Credit	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
2 Coin 1 Credit								
4 Coin 2 Credit								
5 Coin 3 Credit								
6 Coin 4 Credit	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
2 Coin 1 Credit								
4 Coin 3 Credit	ON	ON	OFF	ON	ON	ON	OFF	OFF
1 Coin 1 Credit								
2 Coin 2 Credit								
3 Coin 3 Credit								
4 Coin 4 Credit								
5 Coin 6 Credit	OFF	OFF	ON	ON	OFF	OFF	ON	ON
1 Coin 1 Credit								
2 Coin 2 Credit								
3 Coin 3 Credit								
4 Coin 5 Credit	ON	OFF	ON	ON	ON	OFF	ON	ON

```

-----
-----
1 Coin  1 Credit
2 Coin  3 Credit  OFF      ON      ON      ON      OFF      ON      ON
ON
-----

```

```

-----
Free Play      ON      ON      ON      ON      ON      ON      ON
ON
-----
-----

```

```

Option Switch Settings          DIP SW #2

Option          1      2      3      4      5      6      7
8
-----

```

```

-----
1 C to start      OFF
-----

```

```

-----
2 C to start      ON
(1 C to cont)
-----

```

```

-----
Advertise      OFF      OFF
Sound          ON      ON
-----

```

```

-----
Number      3          OFF      OFF
Of          4          ON      OFF
Players     5          OFF      ON
           2          ON      ON
-----

```

```

-----
Game      Normal          OFF      OFF
Difficulty Easy          ON      OFF
           Hard          OFF      ON
           Hardest       ON      ON
-----

```

```

-----
Timer      3:00
OFF      OFF
           3:30
ON      OFF
           2:40
OFF      ON
           2:20
ON      ON
-----
-----

```