


e. Shootout

SOLDER SIDE		PIN NUMBERS		COMPONENT SIDE	
2P CONTROL	DOWN	A	1	1P CONTROL	DOWN
2P CONTROL	UP	B	2	1P CONTROL	UP
2P CONTROL	LEFT	C	3	1P CONTROL	LEFT
2P CONTROL	RIGHT	D	4	1P CONTROL	RIGHT
		E	5		
		F	6		
		H	7		
		J	8	SERVICE SWITCH	
2P CONTROL	SHOOT	K	9	1P CONTROL	SHOOT
2P CONTROL	JUMP	L	10	1P CONTROL	JUMP
2P START SWITCH		M	11	1P START SWITCH	
COIN SWITCH 2		N	12	COIN SWITCH 1	
COIN COUNTER 2		P	13	COIN COUNTER 1	
VIDEO BLUE		R	14	VIDEO GREEN	
VIDEO SYNC		S	15	VIDEO RED	
		T	16		
SPEAKER (-)		U	17	SPEAKER (+)	
- 5 VOLTS		V	18	+ 12 VOLTS	
+ 5 VOLTS		W	19	+ 5 VOLTS	
+ 5 VOLTS		X	20	+ 5 VOLTS	
GROUND		Y	21	GROUND	
GROUND		Z	22	GROUND	

HARNESS CONNECTOR, EMI FILTER PCB: DE-0209-0

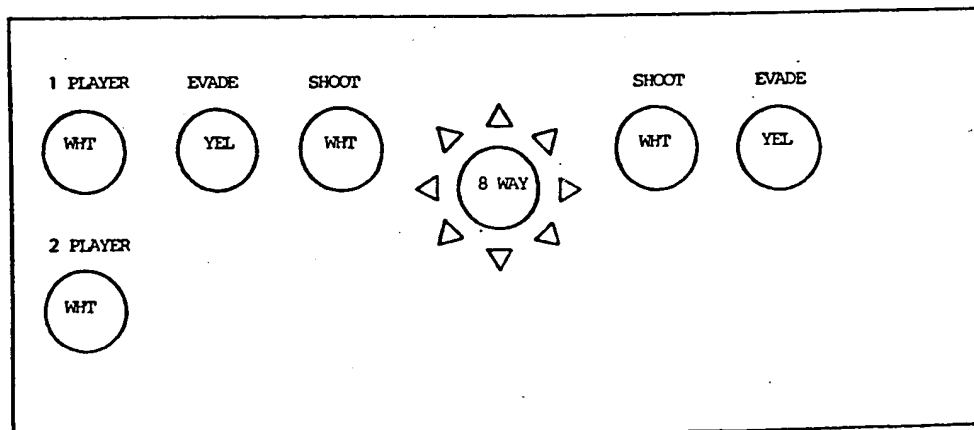

CONTROL PANEL LAYOUT

This document has been downloaded from:



FLIPPERSPILL.COM

e. Shootout (continued)

OPTION TABLES

DIPSWITCH		1	2	3	4	5	6	7	8
COIN 1	1 COIN = 1 CREDIT:	OFF	OFF						
	1 COIN = 2 CREDIT:	ON	OFF						
	1 COIN = 3 CREDIT:	OFF	ON						
	2 COIN = 1 CREDIT:	ON	ON						
COIN 2	1 COIN = 1 CREDIT:			OFF	OFF				
	1 COIN = 2 CREDIT:			ON	OFF				
	1 COIN = 3 CREDIT:			OFF	ON				
	2 COIN = 1 CREDIT:			ON	ON				
NOT USED						OFF			
ATTRACT MODE		NO:					OFF		
SOUND		YES:					ON		
CABINET STYLE		TABLE:						OFF	
		UPRIGHT:						ON	
MODE		PLAY:							OFF
		FREEZE:							ON

DIPSWITCH 2		1	2	3	4	5	6	7	8
NUMBER OF LIVES	THREE:	OFF	OFF						
	FIVE:	ON	OFF						
	ONE:	OFF	ON						
	INFINITE:	ON	ON						
BONUS	20K & EVERY 70K:			OFF	OFF				
LIVES	30K & EVERY 80K:			ON	OFF				
	40K & EVERY 90K:			OFF	ON				
	70K ONLY			ON	ON				
DIFFICULTY LEVELS	EASY:					OFF	OFF		
	NORMAL:					ON	OFF		
	HARD:					OFF	ON		
	VERY HARD:					ON	ON		
NOT USED								OFF	OFF