

Sky Shark

Dip Switch Settings

- Dip Switch 1

12345678

| | |
|----|------------------------|
| 0 | Cocktail Table |
| 1 | Upright |
| 0 | Normal Screen |
| 1 | Invert Screen |
| 0 | Normal Game |
| 1 | Test Pattern |
| 0 | Attract Mode Sound Off |
| 1 | Attract Mode Sound On |
| | Coin A |
| 00 | 1 Coin - 1 Play |
| 01 | 1 Coin - 2 Play |
| 10 | 2 Coin - 1 Play |
| 11 | 1 Coin - 2 Play |
| | Coin B |
| 00 | 1 Coin - 1 Play |
| 01 | 1 Coin - 2 Play |
| 10 | 2 Coin - 1 Play |
| 11 | 1 Coin - 2 Play |

- Dip Switch 2

12345678

| | |
|----|-----------------------------|
| | Degree of Difficulty |
| 00 | Normal |
| 01 | Difficult |
| 10 | Easy |
| 11 | Very Difficult |
| | Bonus Score |
| 00 | 50,000 and 150,000 |
| 01 | 50,000 |
| 10 | 70,000 and 200,000 |
| 11 | 100,000 |
| | Number of Fighters per Game |
| 00 | 3 |
| 01 | 1 |
| 10 | 5 |
| 11 | 2 |
| 0 | Normal Game |
| 1 | Dip Switch Display |
| 0 | Continue Play Off |
| 1 | Continue Play On |

Bert! rfloyd@julian.uwo.ca