
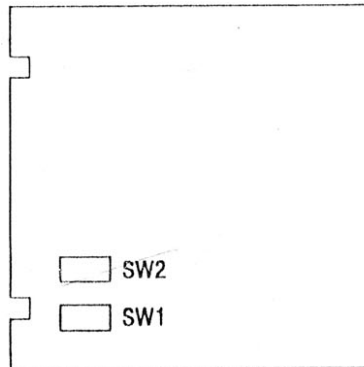


SOLDER SIDE	NO.	NO.	PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
2-P START	U	17	1-P START
2-P UP	V	18	1-P UP
2-P DOWN	W	19	1-P DOWN
2-P LEFT	X	20	1-P LEFT
2-P RIGHT	Y	21	1-P RIGHT
2-P SW 1 BUTTON	Z	22	1-P SW 1 BUTTON
2-P SW 2 BUTTON	a	23	1-P SW 2 BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

SPLASH

HOW TO OPERATE

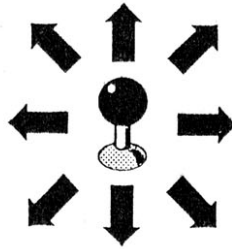

SW1	1	2	3	4	5	6	7	8
1 COIN 1 CREDITS	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN 3 CREDITS	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN 4 CREDITS	ON	OFF	ON	OFF	ON	ON	ON	OFF
1 COIN 5 CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN 6 CREDITS	ON	OFF	ON	OFF	ON	ON	ON	OFF
1 COIN 7 CREDITS	OFF	ON	ON	OFF	ON	ON	ON	OFF
1 COIN 8 CREDITS	ON	ON	ON	OFF	ON	ON	ON	OFF
1 COIN 9 CREDITS	OFF	ON	ON	OFF	ON	ON	ON	OFF
1 COIN 10 CREDITS	ON	ON	ON	OFF	ON	ON	ON	OFF
1 COIN 11 CREDIT	OFF	ON	OFF	OFF	ON	OFF	OFF	ON
1 COIN 12 CREDIT	ON	OFF	OFF	ON	ON	OFF	OFF	ON
1 COIN 13 CREDIT	OFF	ON	OFF	ON	ON	ON	OFF	ON
1 COIN 14 CREDIT	ON	ON	OFF	ON	ON	ON	OFF	ON
1 COIN 15 CREDITS	ON	ON	ON	ON	ON	ON	ON	ON
FREE PLAY	ON	ON	ON	ON	ON	ON	ON	ON
	COIN A				COIN B			

SW2	1	2	3	4	5	6	7	8
DIFFICULTY LEVEL	NORMAL	OFF						
	HARD	OFF	OFF					
	EASY	ON	ON					
	HARDEST	ON	ON					
NUMBER OF PLAYERS	3		OFF	OFF				
	2		ON	ON				
ADVERTISE SOUND	YES				OFF			
	NO				ON			
GIRLS	Total					OFF		
	Partial					ON		
TEST	NO							OFF
	YES							ON