

SPY HUNTER SW. SETTINGS  
=====

gkam@newbridge.com

DIP SW. 1 (@ B3 on Sound I/O board)  
-----

sw 1-9: Not used  
sw 10: 0 = Norm. operation  
      1 = Freeze video

DIP SW. 3 (@ D14 on Sound I/O board)  
-----

sw 1: 1 = sound i/o diagnostic mode  
      0 = normal mode  
sw 2: 1 = RAM/ROM test mode  
      0 = normal mode  
sw 3: 1 = oscillator test mode  
      0 = normal mode  
sw 4: 1 = filter test mode  
      0 = normal mode

Note: - if sw 1 is 0, all other switches are ineffective.  
      - during RAM/ROM test, "fast" yellow LED flash = bad ROM,  
          "slow" = bad RAM  
      - for other settings, see self-test mode.