"STRAHL" DIP SW INSTRUCTION

	DIP S	W-1			1	2	3	4	5	6	7	8
COIN-1	1	Coin	1	Play	OFF	OFF	OFF	G)				
	1			Play	ON	OFF	OFF					
	1	Coin	3	Play	OFF	ON	OFF					
	1	Coin	4	Play	ON	ON	OFF					
	2	Coin	1	Play	OFF	OFF	ON					
	3	Coin	1	Play	ON	OFF	ON					
	4	Coin	1	Play	OFF	ON	ON					
	5	Coin	1	Play	ON	ON	ON					
COIN-2	1	Coin	1	Play				OFF	OFF	OFF		
	1							ON	OFF	OFF		
	1	Coin						OFF	ON	OFF		
	1	Coin	4	Play				ON	ON	OFF		
	2	Coin	1	Play				OFF	OFF	ON		
	3	Coin	1	Play				ON	OFF	ON		
	4	Coin	1	Play				OFF	ON	ON		
	5	Coin	1	Play				ON	ON	ON		
SCREEN FLIP Up Down								OFF				
											ON	15
DEMO SO	DEMO SOUND			Off								OFF
				On				a				ON

DIP S	1	2	3	4	5	6	7	8	
PLAYER	3	OFF	OFF		: 47			35.1	
	2	ON OFF	OFF ON						
	4 5	ON	ON						
GAME LEVEL Normal				OFF	OFF				
	Easy			ON	OFF				
	Hard			OFF	ON				
	Hardest			ON	ON				
EXTEND	100000, 100000						OFF	OFF	
	50000, 100000						ON	OFF	
	100000, 200000						OFF	ON	
	None						ON	ON	118



This document has been downloaded from:

