

Howdy

These are the DIP switch settings and volume potentiometer information for the Stratovox PCB, transcribed directly from the original manual. Note, I do not guarantee their accuracy and if your board goes up in smoke because you followed this list or your dog runs away or anything else, IT IS NOT MY FAULT! If you have any questions, you can reach me (Jason Dante Bardis) at jasonbar@engineering.ucsb.edu

DIP SWITCH SETTINGS

SWITCH 1...SETS THE NUMBER OF PHOTON ROCKETS

OFF...3 PHOTON ROCKETS

ON...5 PHOTON ROCKETS

SWITCH 2...CONTROLS THE NUMBER OF ASTRONAUTS FROM FRAME TO FRAME

OFF...REMAINS THE SAME AS THE PREVIOUS FRAME

ON...10 ASTRONAUTS RESET

SWITCHES 3&4...SETS WHICH FRAME 2 ATTACKING GROUPS OF UFOs START TO APPEAR

FRAME NUBMER	SWITCH 3	SWITCH 4	
2	OFF	OFF	CONSERVATIVE
3	ON	OFF	
4	OFF	ON	
5	ON	ON	LIBERAL

SWITCH 5...CONTROLS THE NUMBER OF ASTRONAUTS THAT ARE KIDNAPPED BY ATTACKING UFOs (WHEN SWITCH 2 IS SET AT OFF).

OFF...LIBERAL

ON...CONSERVATIVE

SWITCH 6...CONTROLS SCREEN INVERSION

OFF...INVERSION

ON...NO INVERSION

NOTE: THIS SWITCH MUST BE LEFT IN THE ON POSITION.

SWITCH 7...CONTROLS SCREEN DIRECTION

OFF...NORMAL DIRECTION

ON...REVERSED DIRECTION

NOTE: THIS SWITCH MUST BE LEFT IN THE OFF POSITION.

SWITCH 8...CONTROLS VOICE IN THE ATTRACT MODE

OFF...VOICE IS NOT HEARD

ON...VOICE IS HEARD

VOLUME POTS:

POT FOR ADJUSTING THE VOLUME OF THE VOICE. CCW IS UP.

(LOCATED NEAREST TO EDGE)

POT FOR ADJUSTING THE TOTAL SOUNDS. CW IS UP.

(LOCATED BETWEEN THE OTHER 2 POTS)

POT FOR ADJUSTING THE EXPLOSION SOUNDS OF THE PHOTON ROCKETS. CW

IS UP.

(LOCATED FARTHEST FROM EDGE)