I just bought Super Sprint and the nifty manual came with it, so I I'd post the switch settings for anyone that is interested... SUPER SPRINT DIP SWITCH SETTINGS (Note: Accounting Information and High Score erasing are available from the self-test mode. The self-test switch is located on the audio board near the coin mech.) From the manual: Coin and Credit Option Settings Settings of 8-Toggle Switch on Super Sprint CPU PCB (at 6/7A) 2 3 4 5 6 7 8 Option _____ Coins per Credit _____ Off Off 1 Coin 1 Credit* Off On 2 Coins 1 Credit On Off 3 Coins 1 Credit On On 4 Coins 1 Credit All Coin Mechanisms Off Off Off 1 Coin counts as 1 Coin* Off Off On 1 Coin counts as 2 Coins Off On Off 1 Coin counts as 3 Coins Off On On 1 Coin counts as 4 Coins On Off Off 1 Coin counts as 5 Coins On Off On 1 Coin counts as 6 Coins 1 Coin counts as 7 Coins On On Off On On On 1 Coin counts as 8 Coins Bonus Adder Off Off Off No Bonus Adder* Off Off On 2 Coins Give 1 Extra Coin Off On Off 4 Coins Give 1 Extra Coin Off On On 4 Coins Give 2 Extra Coins On Off Off 5 Coins Give 1 Extra Coin On Off On 3 Coins Give 1 Extra Coin On On On Free Play ______ * Manufacturer's recommended settings Game Option Settings

Settings of 8-Toggle Switch on Super Sprint CPU PCB (at 5/6A) 1 2 3 4 5 6 7 8 Option

Drone Difficulty

_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_

Off		Off Off	Off	Off	Easy Medium* Medium Hard Hard Track Hazard Difficulty Easy Medium* Medium Hard Hard Number of Wrenches to Customize Car
Off	_				
On	Off				4
On	On				5

* Manufacturer's recommended settings