

\*\*\* SWIMMER Switch Settings \*\*\*

1983 Centuri/Tehkan

DIP A (8 switches)

	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
1 Coin/1 Play							off	off
1 Coin/2 Play							on	off
1 Coin/3 Play							off	on
1 Coin/6 Play							on	on
1 Coin/1 Play					off	off		
2 Coin/1 Play					on	off		
1 Coin/2 Play					off	on		
1 Coin/3 Play					on	on		
10,000 Point - 1 extra				off	off			
20,000 Point - 1 extra				on	off			
30,000 Point - 1 extra				off	on			
No Extra			on	on				
3 Swimmers	off	off						
4 Swimmers	on	off						
5 Swimmers	off	on						
Free Play	on	on						

DIP B (4 switches)

	SW1	SW2	SW3	SW4
Cocktail Table		off		
Upright		on		
No Attract Sound		off		
With Attract Sound			on	
Beginner (easy)				off off
Normal				off on
Hard			on	on

Enjoy,  
9/7/97 Gary Heller