

DIP SWITCH SETTINGS

DIP SWITCH 1

(V'BALL)

1	2	3	4	5	6	7	8	
								● 難度 Degree of Difficulty
OFF	OFF							普通 Normal
ON	OFF							やさしい Easy
OFF	ON							ややむずかしい Less than difficult
ON	ON							むずかしい Difficult

DIP SWITCH 2

1	2	3	4	5	6	7	8	
								● Coin-1
OFF	OFF	OFF						1 Coin - 1 Play
ON	OFF	OFF						1 Coin - 2 Play
OFF	ON	OFF						1 Coin - 3 Play
ON	ON	OFF						1 Coin - 4 Play
OFF	OFF	ON						1 Coin - 5 Play
ON	OFF	ON						2 Coin - 1 Play
OFF	ON	ON						3 Coin - 1 Play
ON	ON	ON						4 Coin - 1 Play
								● Coin-2
			OFF	OFF	OFF			1 Coin - 1 Play
			ON	OFF	OFF			1 Coin - 2 Play
			OFF	ON	OFF			1 Coin - 3 Play
			ON	ON	OFF			1 Coin - 4 Play
			OFF	OFF	ON			1 Coin - 5 Play
			ON	OFF	ON			2 Coin - 1 Play
			OFF	ON	ON			3 Coin - 1 Play
			ON	ON	ON			4 Coin - 1 Play
								● Screen Invert
						OFF		Normal
						ON		Invert
								● Sound for Demonstration
							OFF	可 Sound
							ON	不可 Not sound

