

Here is yet another set of switch settings. I also have the manuals.
Contact me if interested in getting a copy.

--Dave Holcomb

holcomb@csugrad.cs.vt.edu

dholcomb@microsoft.com

----- CUT HERE

```
|-----|
|-----|
|
|                               Venture
|
|                               Exidy 1981
|
|                               DIP Switch Settings
|-----|
|-----|
|  Function      :      | SW#1 SW#2 SW#3 SW#4 SW#5 SW#6
| SW#7 SW#8 |
|-----|
|-----|
|  Coinage:      |
|
|    2 Plays - 1 Coin      |      Off  Off
Off |
|    1 Play  - 1 Coin      |      On   Off
Off |
|    1 Play  - 2 Coin      |      Off  On
Off |
|    1 Play  - 20 pence /  |      On   On
On  |
|    3 Plays - 50 pence    |
|
|  Type of Coins:      |
|
|    U.S. and other      |
Off |
|    English coins      |
On  |
|  Number of Turns:      |
|
|    2 Bows and arrows (=turns)      |      On
On  |
|    3 Bows and arrows      |      Off
On  |
|    4 Bows and arrows      |      On
Off |
|    5 Bows and arrows      |      Off
Off |
|  Bonus Bow:      |
|
|    20,000 points      |      On   On
|
|    30,000 points      |      Off  On
|
|    40,000 points      |      On   Off
```

	50,000 points		Off	Off

Function	Switch #
-----	-----
Pence/U.S. and other	8
Number of Turns	7,6
Number of Coins	5,4
Bonus Points	3,2
not used	1