

This document has been downloaded from:



The largest resource for amusement machines
documentation on the world wide web!



FLIPPERSPILL.COM

OPERATOR'S MANUAL

SONICWINGS™

ソニックウィングス

AERO FIGHTERS™

取扱説明書

Power Supply	DC+5V DC+12V
Monitor	Vertical Screen
Game Style	2-Player Simultaneous



VIDEOSYSTEM Co.,Ltd.


CONNECTOR DIAGRAM

SOLDER SIDE	NO.	NO.	PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
2-P START	U	17	1-P START
2-P UP	V	18	1-P UP
2-P DOWN	W	19	1-P DOWN
2-P LEFT	X	20	1-P LEFT
2-P RIGHT	Y	21	1-P RIGHT
2-P SW 1 BUTTON	Z	22	1-P SW 1 BUTTON
2-P SW 2 BUTTON	a	23	1-P SW 2 BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

HOW TO PLAY

- アメリカ、日本、スウェーデン、イギリスそれぞれ2人のパイロットの中から1人選び、ボタンで決定します。
- フルパワー時のみ弾数制限があります。
- 自分の国を除く7つのステージをクリアするとエンディングです。
- Choose your player from U.S.A., JAPAN, SWEDEN and U.K.
- Full power for limited time.
- Game is over when you clear seven stages.

CONTROL PANEL

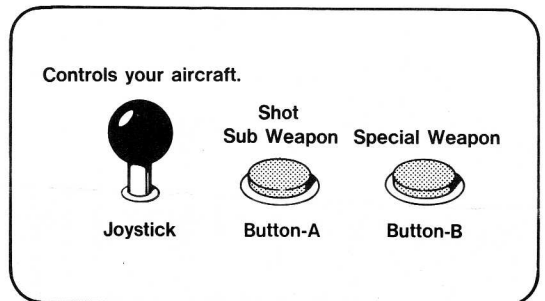

DIP-SWITCH 1

		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
Coin Slot	● SAME ● INDIVIDUAL	* OFF ON							
Coin 1	● 1 COIN = 1 CREDIT ● 2 COINS = 1 CREDIT ● 3 COINS = 1 CREDIT ● 1 COIN = 2 CREDITS ● 1 COIN = 3 CREDITS ● 1 COIN = 4 CREDITS ● 1 COIN = 5 CREDITS ● 1 COIN = 6 CREDITS		* OFF ON OFF ON OFF ON OFF ON	* OFF OFF ON ON OFF OFF ON ON	* OFF OFF OFF ON ON ON ON				
Coin 2	● 1 COIN = 1 CREDIT ● 2 COINS = 1 CREDIT ● 3 COINS = 1 CREDIT ● 1 COIN = 2 CREDITS ● 1 COIN = 3 CREDITS ● 1 COIN = 4 CREDITS ● 1 COIN = 5 CREDITS ● 1 COIN = 6 CREDITS					* OFF ON OFF ON OFF ON OFF ON	* OFF OFF ON ON OFF OFF ON ON	* OFF OFF OFF ON ON ON ON	
Continue Coin	● NORMAL (START = 1 COIN CONTINUE = 1 COIN) ● CONTINUE (START = 2 COINS CONTINUE = 1 COIN)								* OFF ON

■ Continue Coin が CONTINUE の時は、DIP[2]～[7]の設定が無視されます。

■ With Continue "ON", two coins to play and one coin to continue, and other COIN/CREDIT option disabled.

■ [1]～[8]が全て ON の時は、FREE PLAY mode になります。

■ FREE PLAY mode : Have [1]～[8] switches ON.

DIP-SWITCH 2

		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
Screen Revers	● Normal ● Invert	* OFF ON							
Demo Sound	● OFF ● ON		OFF * ON						
Difficulty	● Normal ● Easy ● Hard ● Super Hard			* OFF ON OFF ON	* OFF OFF ON ON				
Fighters	● 3 ● 1 ● 2 ● 4					* OFF ON OFF ON	* OFF OFF ON ON		
Extend Player	● 200,000 ● 300,000							* OFF ON	
Test Mode	● OFF ● ON								* OFF ON

■ Demo Sound が OFF の時は、コイン待ちデモの時に音が鳴らないようになります。

■ When DEMO-SOUND is "OFF", there will be no sound during demonstration mode.

* 出荷時の設定

* INDICATES FACTORY SETTING.



ビデオシステム 株式会社 〒606 京都市左京区下鴨松ノ木町35-1 TEL.075(723)0358(代) FAX.075(723)0368

OFFICE : 35-1 Matsunoki-cho, Shimogamo, Sakyo-ku, Kyoto, Japan. 606.

TEL : 075-723-0358 FAX : 075-723-0368