

This document has been downloaded from:




The largest resource for amusement machines  
documentation on the world wide web!



**FLIPPERSPILL.COM**



# *CAPTAIN AMERICA* *and The AVENGERS*

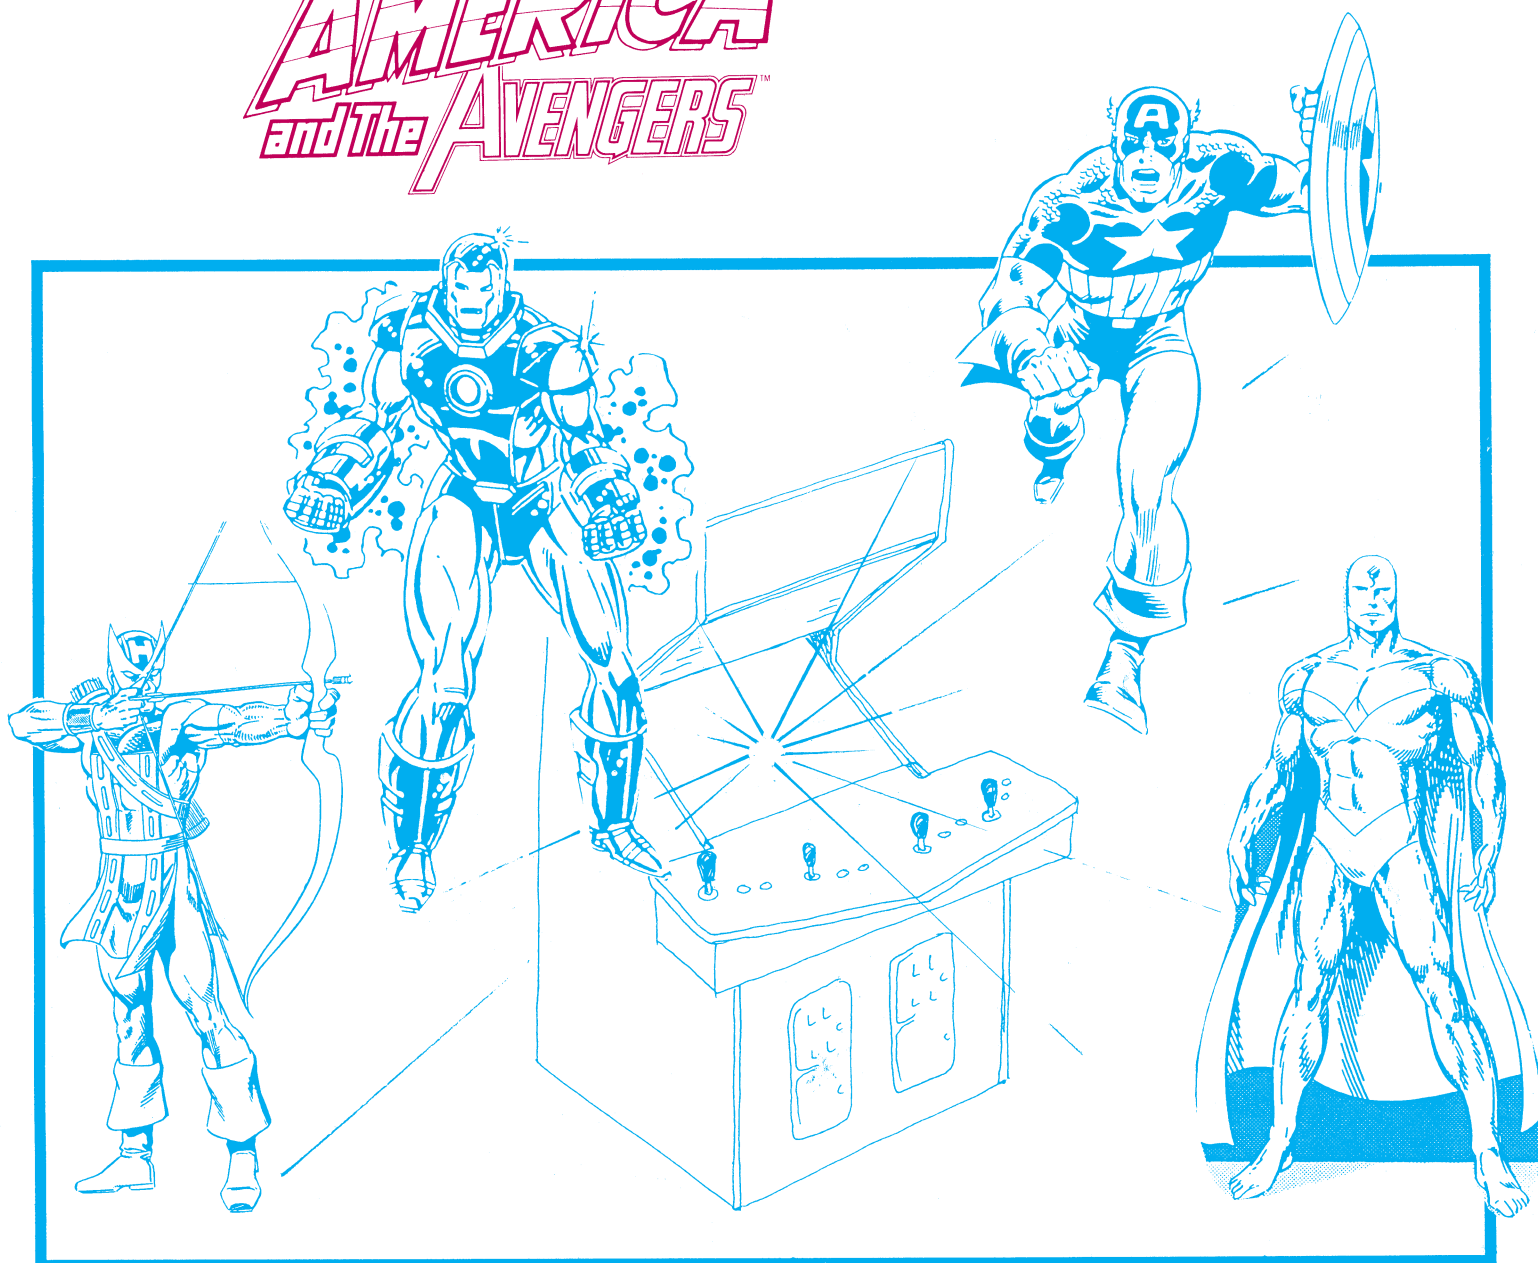

## Owner's Manual

---

1850 Little Orchard Street, San Jose, Ca. 95125-1045 (408) 286-7080 Fax (408) 971-0722  
Customer Service (800) 634-7270

P/N 780-0210-00  
Rev. 1.0 8/15/91





## Owner's Manual

No part of this publication may be reproduced by any mechanical, photographic or electronic process, or in the form of a phonographic recording, nor may it be stored in a retrieval system, transmitted or otherwise copied for public or private use, without permission from the publisher.

The game play, all graphic designs, this technical manual, its accompanying schematic diagrams, and the display manual are protected by the U.S. Copyright Act of 1976.

This Act provides for substantial penalties for violating federal copyright laws. Courts can impound infringing articles while legal action is pending. If infringers are convicted courts can order destruction of the infringing articles.

In addition, the Act provides for payment of statutory damages of up to \$50,000 per infringing transaction in certain cases. Infringers may also have to pay cost and attorneys' fees and face an imprisonment of up to five years as well as fines of up to \$250,000 in the case of individuals and up to \$500,000 in the case of corporations.

DATA EAST Corporation will aggressively enforce its copyrights against infringers. We will use all legal means to immediately halt any manufacture, distribution, or operation of a copy of any games made by us. Anyone who purchases such copies risks forfeiting such a game.

Published by:  
DATA EAST CORPORATION  
1850 Little Orchard Street  
San Jose, CA 95125  
(408) 286-7080 Phone  
(408) 291-0722 Fax

Printed in the U.S.A. Produced by Data East Technical Publications Department.

Copyright © 1991 by Marvel Entertainment Group, Inc. All Rights Reserved.

Captain America and the Avengers™ are registered trademarks of Marvel Entertainment Group and are used with permission.

TABLE OF CONTENTS

Operation & Installation

DISCLAIMERS AND SAFETY GUIDE .....1

GAME SPECIFICATIONS .....3

GAME DESCRIPTION .....3

INSPECTION & SET-UP .....6

DIP SWITCH CHARTS .....7

Operation & Installation

Appendix A — Replacement Parts

REPLACEMENT PARTS LIST .....11

APPENDIX A  
Replacement Parts

Appendix B — Wiring Diagrams

INTERCONNECT DIAGRAM 1 .....15

INTERCONNECT DIAGRAM 2 .....16

APPENDIX B  
Wiring Diagrams





## Operation & Installation

---



## DISCLAIMERS & SAFETY GUIDE

The following safety precautions apply to all game operators and service personnel. Specific warnings and cautions will be found in this manual whenever they apply.

### **WARNING**

#### **Properly Ground the Game**

Players may receive an electrical shock if this game is not properly grounded! To avoid electrical shock, do not plug in the game until it has been inspected and properly grounded. This game should only be plugged into a grounded three-wire outlet. If you have only a two-wire outlet, we recommend you hire a licensed electrician to install a three-wire grounded outlet. If the coin door is not properly grounded, players may receive an electrical shock! After servicing any part on the doors, check that the grounding wire is firmly secured to the inside of the control panel. After you have verified this, lock up the game.

#### **AC Power Connection**

Before you plug in the game, be sure that the game's power supply can accept the AC line voltage in your location. The line voltage requirements are contained within this manual.

#### **Disconnect Power During Repairs**

To avoid electrical shock, disconnect the game from the AC power before removing or repairing any part of the game. The power supply capacitors retain energy for a period of time even after AC power is removed. Use care when working near them or on any circuitry connected to them.

#### **Use the Proper Fuses**

To avoid electrical shock, use replacement fuses which are specified in the parts list for this game. Replacement fuses must match those replaced in fuse type, voltage rating, and current rating. In addition, the fuse cover must be in place during game operation.

**CAUTION****Properly Attach All Connectors**

Make sure that the connectors on each printed circuit board (PCB) are properly plugged in. The connectors are keyed to fit only one way. If they do not slip into place easily, do not force them. If you reverse a connector, you may damage your game and void your warranty.

## **NOTICE REGARDING NON-DATA EAST PARTS**

**WARNING**

Use of non-DATA EAST parts or modifications of any DATA EAST game circuitry may adversely affect the safety of your game, and may cause injury to you and your players.

**Note:** This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of Federal Communications Commission (FCC) Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area or modification to this equipment is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference. If you suspect interference from a DATA EAST game at your location, check the following:

All ground wires in the game are properly connected as shown in the game wiring diagram.

The power cord is properly plugged into a grounded three wire outlet.

GAME SPECIFICATIONS

| Characteristic    | Specifications                              |
|-------------------|---------------------------------------------|
| Power consumption | 250 VA , 110 V RMS                          |
| Temperature       | +5 to +50 degrees C (+37 to +122 degrees F) |
| Humidity          | Not to exceed 95% relative                  |
| Line Voltage      | 102 to 132 VAC(U.S. games)                  |
| Width             | 40"                                         |
| Depth             | 36"                                         |
| Height            | 72"                                         |
| Weight            | 300 lbs.                                    |

Table 1-1 Game Specifications

GAME DESCRIPTION

Congratulations! You have just purchased a video game which stars Marvel™ superhero characters. Captain America and the other Avengers have been popular comic book characters for many years. Now, in your new game these characters have been brought to life, and for just a coin or two (or two hundred!) your customers can live the adventures of Captain America, Iron Man™, Vision™ or Hawkeye™. A few other Avenger characters show up briefly in the game, notably Wonder Man™, Sub-Mariner™, and Quicksilver™.

During the game, players meet many well known super villians from the pages of the Avenger’s comic books. In the game, Red Skull™ is the Avenger’s chief nemesis. In a plot to rule the world he has used a mind-control device to enslave various super villians to serve him.

The player must skillfully operate the Avenger of his choice to battle his way through such formidable foes as Ultron™, Mandarin™, Grim Reaper™, Whirlwind™, Living Laser™, Klaw™, and even Jugger-naut™ and a Sentinal™. Red Skull™ and his right hand man, Crossbones™, are the last enemies the players must meet and defeat.

The game has 5 stages, including a few “shooting” sections in which the Avengers must fly, either under their own power or with small “skysleds”, and fire their weapons at attacking enemies.

## HOW TO PLAY

Captain America and The Avengers is simple to play and is similar in many respects to other popular coin-op games. It is a 4 player game, with each coin slot corresponding to a specific Avenger. The player selects the Avenger he wishes to play and controls his Avenger with an 8-way joystick and 2 buttons.

The following basic instructions are printed on the game's control panel.

### **CAPTAIN AMERICA and THE AVENGERS**

- 1-4 players
- Insert coin(s) in the slot that goes with the Avenger of your choice, press Start/Attack to start.
- CONTROLS:



8-way joystick



 
Start/Attack




Jump

More detailed Instructions on how to control the Avenger's movements and actions are illustrated on the next page. These instructions appear on the underlay card.

## HOW TO PLAY



 **Walk.** Hold the joystick in the direction you wish to walk. All Avengers.




**Run left or right.** Tap joystick twice (not too rapidly) in the direction you wish to run. All Avengers.



**Ram or power-slide.** When running (see above), press S/A (Start/Attack) button to bash into enemies. All Avengers ram except Hawkeye, who power-slides.



 **Close-range attack.** Move close to an enemy and press S/A button repeatedly. Note: characters must be lined up on the horizontal axis to hit each other. All Avengers.



**Fire Weapon.** Press both S/A and Jump buttons at the same time. Each Avenger has a different projectile attack.




**Pick up enemies and certain objects and throw them.** Use joystick to move Avenger under and into enemy/object, press S/A the moment you make contact. Press S/A again to throw the enemy or object. All Avengers.



**Jump.** Press Jump button. Use joystick to control movement direction to some extent in mid-jump. All Avengers.



**Diving attack.** Press jump and then immediately press S/A. All Avengers.

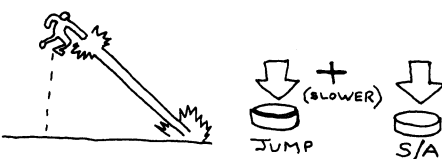

**Jump and attack.** Press Jump then press S/A near apex of jump. Cap and Hawkeye perform a kicking attack, Iron Man and Vision fire repulsors or lasers at an angle.



**Defense against enemy projectiles.** Hold S/A button down. All Avengers. Note: Vision's defense is to become immaterial.

## INSPECTION AND SET-UP

### WARNING

Do not plug in the game until you have completed the following inspection steps.

### CAUTION

**Before You Power Up,** inspect the game cabinet as follows:

1. Examine the exterior of the cabinet for dents, chips, or broken parts.
2. Unlock and open the coin door and rear service door.
3. Ensure that all plug-in connectors inside the rack are firmly plugged in. Do not force connectors together. The connectors are keyed so they fit only in the proper orientation. A reversed edge connector can damage a printed-circuit board (PCB) and will void your warranty.
4. Ensure that all plug-in integrated circuits on the Main PCB are firmly plugged into their sockets.
5. Inspect the power cord for any cuts or dents in the insulation.
6. Inspect the power supply. Make sure that the correct fuses are installed. Check that the harness is plugged in correctly and that the fuse block cover is mounted in place. Check that the green ground wires are connected.
7. Inspect other major sub-assemblies, such as the printed circuit boards, speaker, ticket drive, coin door, etc. Make sure that they are mounted securely and that the ground wires are connected.
8. If the above steps have been completed and all game functions are working properly then you can power up the game.

## OPERATOR SELECTABLE OPTIONS

| DIP SWITCH 1    |                      |                |     |     |     |     |     |     |     |                            |
|-----------------|----------------------|----------------|-----|-----|-----|-----|-----|-----|-----|----------------------------|
| FUNCTION        |                      | SWITCH SETTING |     |     |     |     |     |     |     | REMARKS                    |
|                 |                      | 1              | 2   | 3   | 4   | 5   | 6   | 7   | 8   |                            |
| GAME CHARGE     | 1COIN=1CREDIT        | OFF            | OFF | OFF |     |     |     |     |     | COIN/CREDIT<br>COIN MECH 1 |
|                 | 1COIN=2CREDIT        | ON             | OFF | OFF |     |     |     |     |     |                            |
|                 | 1COIN=3CREDIT        | OFF            | ON  | OFF |     |     |     |     |     |                            |
|                 | 1COIN=4CREDIT        | ON             | ON  | OFF |     |     |     |     |     |                            |
|                 | 1COIN=5CREDIT        | OFF            | OFF | ON  |     |     |     |     |     |                            |
|                 | 1COIN=6CREDIT        | ON             | OFF | ON  |     |     |     |     |     |                            |
|                 | 2COIN=1CREDIT        | OFF            | ON  | ON  |     |     |     |     |     |                            |
|                 | 3COIN=1CREDIT        | ON             | ON  | ON  |     |     |     |     |     |                            |
| GAME CHARGE     | 1COIN=1CREDIT        |                |     |     | OFF | OFF | OFF |     |     | COIN/CREDIT<br>COIN MECH 2 |
|                 | 1COIN=2CREDIT        |                |     |     | ON  | OFF | OFF |     |     |                            |
|                 | 1COIN=3CREDIT        |                |     |     | OFF | ON  | OFF |     |     |                            |
|                 | 1COIN=4CREDIT        |                |     |     | ON  | ON  | OFF |     |     |                            |
|                 | 1COIN=5CREDIT        |                |     |     | OFF | OFF | ON  |     |     |                            |
|                 | 1COIN=6CREDIT        |                |     |     | ON  | OFF | ON  |     |     |                            |
|                 | 2COIN=1CREDIT        |                |     |     | OFF | ON  | ON  |     |     |                            |
|                 | 3COIN=1CREDIT        |                |     |     | ON  | ON  | ON  |     |     |                            |
| SCREEN ROTATION | NORMAL               |                |     |     |     |     |     | OFF |     |                            |
|                 | REVERSE              |                |     |     |     |     |     | ON  |     |                            |
| CONTINUE COIN   | 1COIN START/1CONTIN. |                |     |     |     |     |     |     | OFF |                            |
|                 | 2COIN START/1CONTIN. |                |     |     |     |     |     |     | ON  |                            |

Table 1 Dip Switch 1 Settings

| DIP SWITCH 2       |                     |                |     |     |     |     |     |     |     |         |
|--------------------|---------------------|----------------|-----|-----|-----|-----|-----|-----|-----|---------|
| FUNCTION           |                     | SWITCH SETTING |     |     |     |     |     |     |     | REMARKS |
|                    |                     | 1              | 2   | 3   | 4   | 5   | 6   | 7   | 8   |         |
| NUMBER OF LIVES    | 1                   | OFF            | ON  |     |     |     |     |     |     |         |
|                    | 2                   | ON             | ON  |     |     |     |     |     |     |         |
|                    | 3                   | OFF            | OFF |     |     |     |     |     |     |         |
|                    | 4                   | ON             | OFF |     |     |     |     |     |     |         |
| GAME DIFFICULTY    | NORMAL              |                |     | OFF | OFF |     |     |     |     |         |
|                    | EASY                |                |     | ON  | OFF |     |     |     |     |         |
|                    | HARD                |                |     | OFF | ON  |     |     |     |     |         |
|                    | HARDEST             |                |     | ON  | ON  |     |     |     |     |         |
| COIN SWITCHES      | 1 OR 2 SWITCH INPUT |                |     |     |     | OFF |     |     |     |         |
|                    | 1-4 SWITCH INPUT    |                |     |     |     | ON  |     |     |     |         |
| MODE SELECT        | 2-PLAYER MODE       |                |     |     |     |     | OFF |     |     |         |
|                    | 4-PLAYER MODE       |                |     |     |     |     | ON  |     |     |         |
| CONTINUE MODE      | YES                 |                |     |     |     |     |     | OFF |     |         |
|                    | NO                  |                |     |     |     |     |     | ON  |     |         |
| ATTRACT MODE SOUND | YES                 |                |     |     |     |     |     |     | OFF |         |
|                    | NO                  |                |     |     |     |     |     |     | ON  |         |

Table 2 Dip Switch 2 Settings





## Replacement Parts

---



## REPLACEMENT PARTS LIST

|                                                             |             |
|-------------------------------------------------------------|-------------|
| Control Panel Assembly, Avengers                            | 510-0236-00 |
| 1. Control Panel Overlay                                    | 800-0064-00 |
| 2. Harness, Control Panel                                   | 036-0318-00 |
| 3. Harness, Control Panel                                   | 036-0318-02 |
| 4. Pushbutton Assembly, Red                                 | 180-0024-02 |
| 5. Pushbutton Assembly, Blue                                | 180-0024-06 |
| 6. Switch (for Pushbutton Assemblies)                       | 180-0017-00 |
| 7. Joystick                                                 | 450-0015-51 |
| 8. Control Panel Base                                       | 366-0099-00 |
| 9. Control Panel Top                                        | 366-0100-00 |
| 10. Control Panel Retainer                                  | 535-0196-00 |
| 11. Hook, Latch (part of Latch from cabinet)                | 355-0005-00 |
| Cabinet Parts                                               |             |
| 1. Marquee Plex                                             | 830-0059-00 |
| 2. Decal, Left Side, Avengers                               | 820-0071-01 |
| 3. Decal, Right Side, Avengers                              | 820-0071-02 |
| 4. Label Set, Coin Door, Avengers                           | 406-0488-00 |
| 5. Underlay, Monitor, Avengers                              | 810-0057-00 |
| 6. Bezel, Black 25"                                         | 380-0005-00 |
| 7. Plex, Clear, Monitor                                     | 660-0014-03 |
| 8. Retainer, Plex, Top                                      | 535-0195-00 |
| 9. Retainer, Plex, Bottom                                   | 535-0201-00 |
| 10. Printed Circuit Board Assembly                          | 510-0237-00 |
| 11. Power Supply                                            | 001-0016-00 |
| 12. Isolation Transformer, Monitor                          | 010-0009-00 |
| 13. Coin Door Assembly<br>(Coin Controls Mfg. P/N 10-4993-) | 510-0232-00 |
| 14. Plastic Cash Box                                        | 545-0045-00 |
| 15. Cover, Plastic Cash Box                                 | 535-0233-00 |
| 16. Service Panel Assembly                                  | 515-0105-00 |
| A. Coin/Ticket Counter                                      | 090-0002-00 |
| B. Potentiometer, Volume Control                            | 123-0008-11 |
| C. Switch, Pushbutton, Red (Test)                           | 180-0024-02 |
| D. Switch (for Pushbutton Assembly)                         | 180-0017-00 |
| E. Harness, Service Panel                                   | 036-0321-00 |
| F. Plate, Service Panel                                     | 535-0232-01 |
| 17. Speaker, 5 x 7, 16 ohm                                  | 031-0007-00 |
| 18. Bulb, Incandescent, 40 W (Marquee)                      | 165-0004-01 |
| 19. Socket, Lamp (for 40 W Bulb)                            | 170-0002-00 |

## REPLACEMENT PARTS LIST (Con't)

|                                    |             |
|------------------------------------|-------------|
| 20. Harness, Marquee Lamp          | 036-0319-00 |
| 21. Harness, Speaker               | 036-0273-00 |
| 22. Harness, Monitor               | 036-0277-00 |
| 23. Harness, Main (JAMMA)          | 036-0320-00 |
| 24. On/Off Switch Assembly         | 515-0084-00 |
| A. Switch Mounting Plate           | 535-0082-00 |
| B. Switch, Toggle                  | 180-0023-00 |
| C. Harness, Switch Plate           | 036-0278-00 |
| 25. Fish Paper, Power Shield       | 660-0003-00 |
| 26. Leg Levelers, 3/8 x 1-1/4 Long | 400-0003-00 |
| 27. Hinge (for Control Panel)      | 390-0002-00 |
| 28. Latch (for Control Panel)      | 355-0005-00 |




## Wiring Diagrams

---





INTERCONNECT DIAGRAM 1

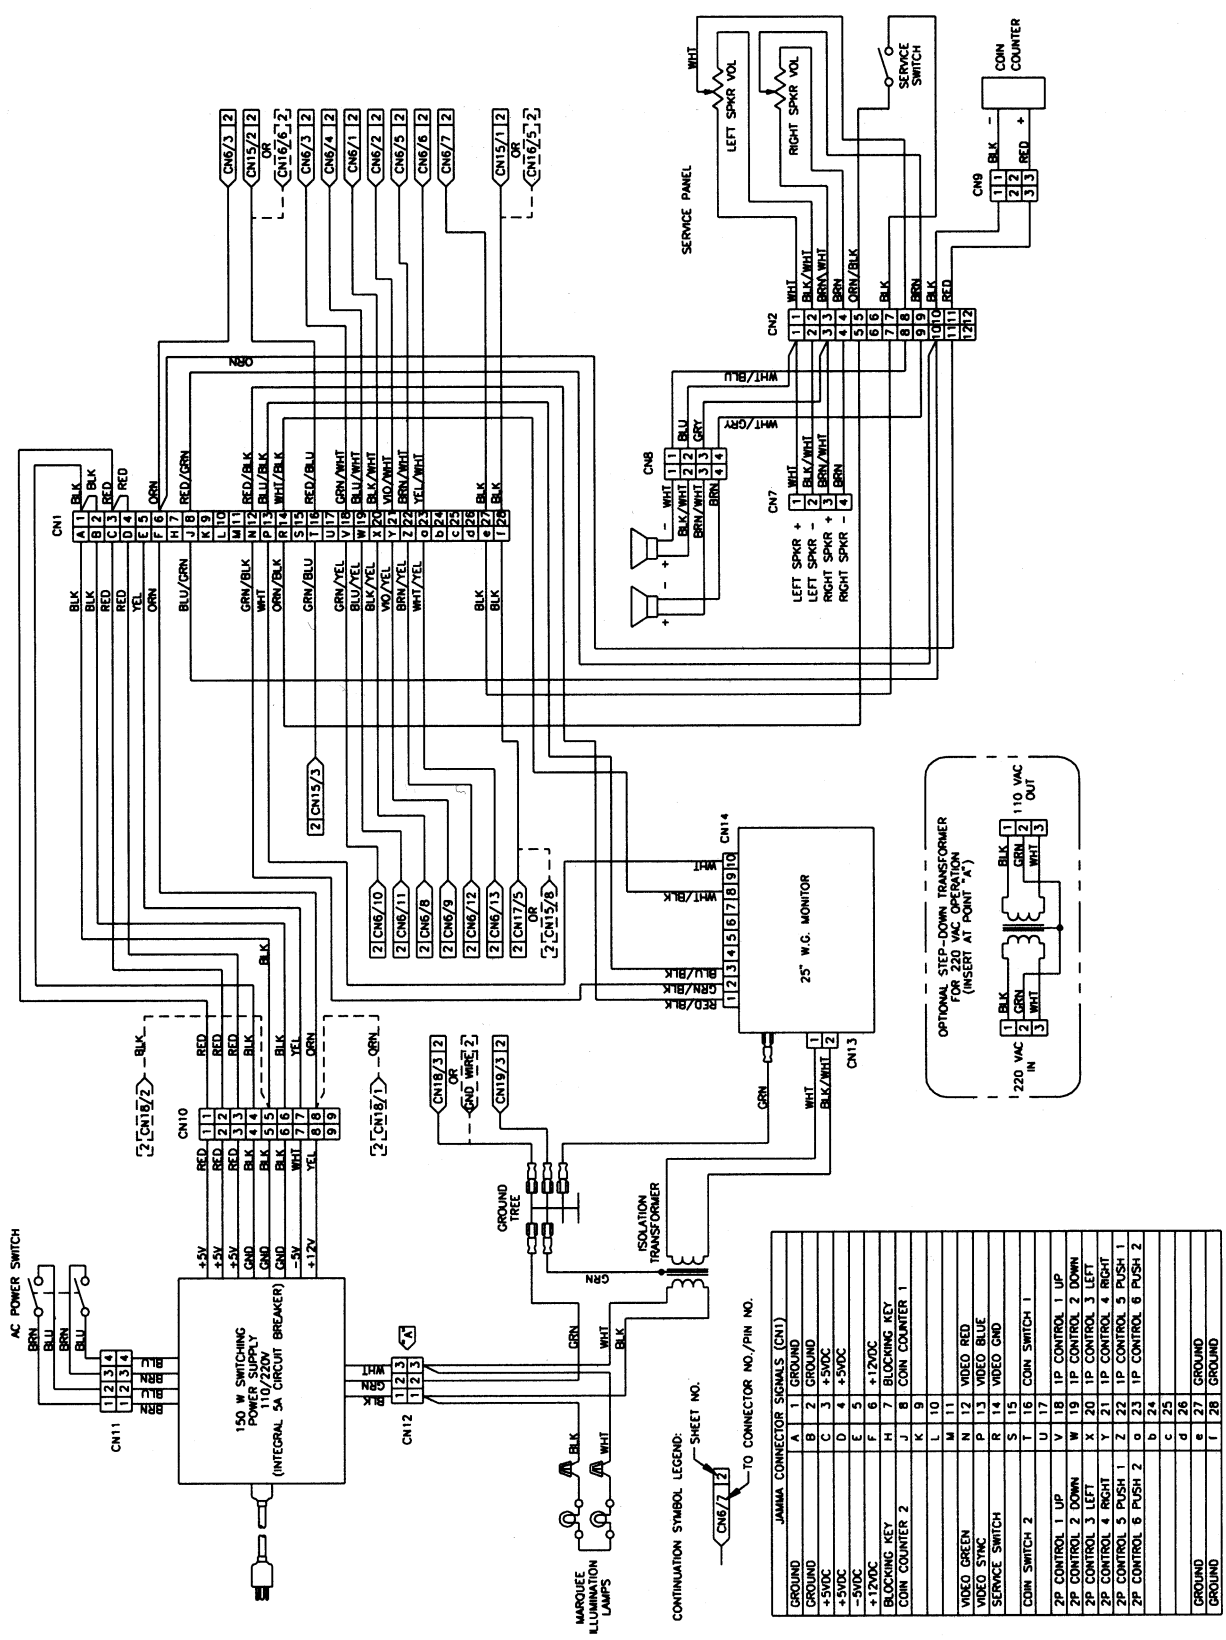

| JAMMA CONNECTOR SIGNALS (CN1) |                     |
|-------------------------------|---------------------|
| A 1                           | GROUND              |
| B 2                           | GROUND              |
| C 3                           | +5VDC               |
| D 4                           | +5VDC               |
| E 5                           | -5VDC               |
| F 6                           | +12VDC              |
| G 7                           | BLOCKING KEY        |
| H 8                           | COIN COUNTER 2      |
| J 9                           | COIN COUNTER 1      |
| K 10                          |                     |
| L 11                          | VIDEO GREEN         |
| M 12                          | VIDEO RED           |
| N 13                          | VIDEO BLUE          |
| P 14                          | VIDEO GND           |
| R 15                          | SERVICE SWITCH      |
| S 16                          | COIN SWITCH 1       |
| T 17                          | COIN SWITCH 2       |
| U 18                          | 1P CONTROL 1 UP     |
| V 19                          | 1P CONTROL 1 DOWN   |
| W 20                          | 1P CONTROL 3 LEFT   |
| X 21                          | 1P CONTROL 3 RIGHT  |
| Y 22                          | 1P CONTROL 5 PUSH 1 |
| Z 23                          | 1P CONTROL 5 PUSH 2 |
| a 24                          |                     |
| b 25                          |                     |
| c 26                          | GROUND              |
| d 27                          | GROUND              |
| e 28                          | GROUND              |
| f 29                          | GROUND              |
| g 30                          | GROUND              |

## INTERCONNECT DIAGRAM 2

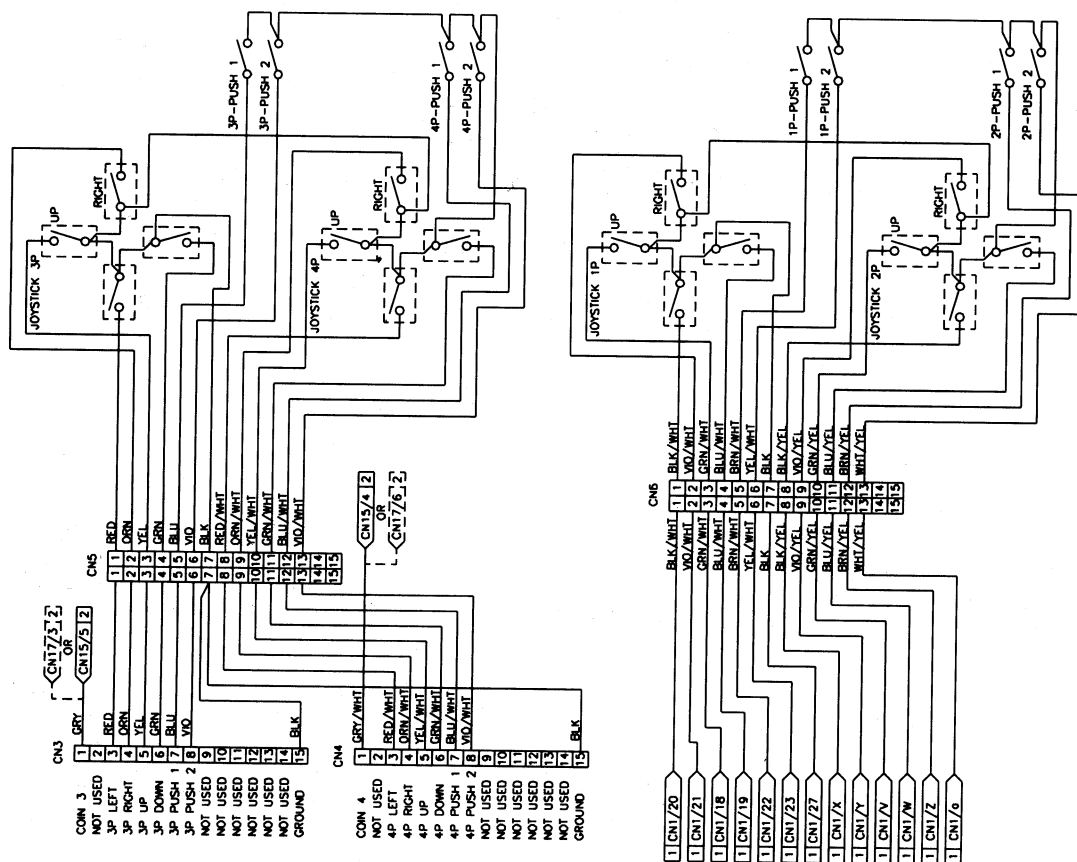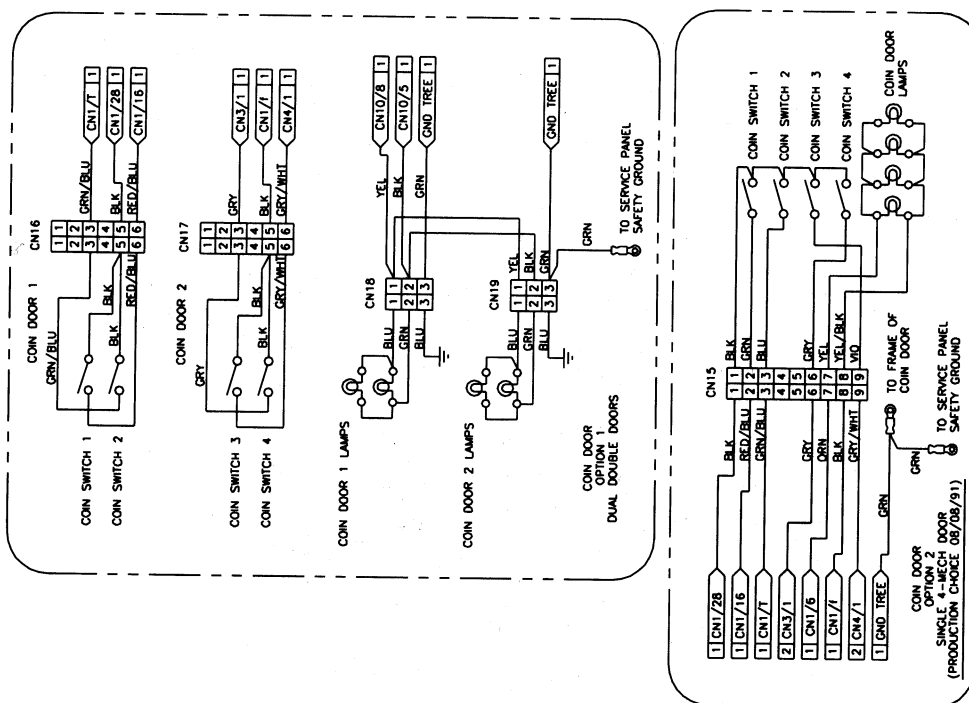

CONTINUATION SYMBOL LEGEND:

 SHEET NO. TO CONNECTOR NO./PIN NO.





## WARRANTY INFORMATION

DATA EAST USA, INC, ("Seller"), warrants to the original purchaser ("Buyer"), of its products that the items listed below are free from defects in material and workmanship under normal use and service for the period specified:

GAME LOGIC PRINTED CIRCUIT BOARD(S)      90 DAYS

No other parts of the Seller's products are warranted.

Warranty periods are effective from date of initial shipment from Seller to Buyer. Seller's sole liability shall be, at its option, to repair or replace products which are returned to Seller during the warranty period specified, provided:

1. Seller is notified promptly upon discovery by buyer that stated products are defective.
2. Such products are properly packaged and then returned freight pre-paid, to a place specified by seller.

This warranty does not apply to products damaged during shipment and/or due to improper handling, or due to improper installation or usage, or alteration. In no event shall Seller be liable for any anticipated profits, loss of profits, loss of use, accidental or consequential damages, or any other losses incurred by the customer in connection with the purchase of a Data East USA, Inc. product.

Except as specifically provided in a written contract between seller and buyer, there are no other warranties, expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose.

Data East USA, Inc.  
1850 Little Orchard Dr.  
San Jose, CA 95125  
Tele: (408) 286-7080  
Fax: (408) 971-0722



We've Got It All.