

This document has been downloaded from:



The largest resource for amusement machines
documentation on the world wide web!



FLIPPERSPILL.COM

■ CAPTAIN TOMADAY SOFT DIP ■

SOFT DIP SCREEN

CAPTAIN TOMADAY	
DIFFICULTY	LEVEL4
CONTINUE	WITH
DEMO SOUND	WITH
LEVEL DISP	WITH
CREDIT DISP	WITH
INSTRUCTION	WITH
WIN COUNT	3

【SETTING】

- ① Use Joystick to move cursor to the desired items.
- ② Press A or B button to change the setting.

【 DIFFICULTY 】	DIFFICULTY SETTING
LEVEL1 ⇒ 2 ⇒ 3 ⇒ 4 ⇒ 5 ⇒ 6 ⇒ 7 ⇒ 8	
【 CONTINUE 】	WITH OR WITHOUT CONTINUE PLAY
WITH ⇒ WITHOUT	
【 DEMO SOUND 】	WITH OR WITHOUT DEMO SOUND
WITH ⇒ WITHOUT	
【 LEVEL DISPLAY 】	WITH OR WITHOUT LEVEL DISPLAY
WITHOUT ⇒ WITH	
【 CREDIT DISPLAY 】	WITH OR WITHOUT CREDIT DISPLAY
WITH ⇒ WITHOUT	
【 HOW TO PLAY 】	WITH OR WITHOUT HOW TO PLAY SCREEN
WITH ⇒ WITHOUT	

SETTING UP THE SOFT DIP ON THE MULTI VIDEO SYSTEM

1. TURN POWER ON.
2. PUSH THE TEST BUTTON INSIDE THE CABINET.
3. THE FOLLOWING SCREEN WILL APPEAR.

MOVE LEFT JOYSTICK UP/DOWN TO MOVE THE POINTER TO "SETTING UP THE SOFT DIP". PRESS "A" BUTTON TO SET.

HARDWARE TEST
SETTING UP THE HARD DIP
SETTING UP THE SOFT DIP
BOOKKEEPING
SETTING UP THE CODE NUMBER
SETTING UP THE CALENDAR
EXIT

THE FOLLOWING SCREEN WILL BE DISPLAYED:

CABINET SET UP
SLOT 1 (GAME TITLE)
SLOT 2 (GAME TITLE)
SLOT 3 (GAME TITLE)
SLOT 4 (GAME TITLE)
SLOT 5 (GAME TITLE)
SLOT 6 (GAME TITLE)

4. SELECT THE GAME TITLE YOU WANT AND PRESS "A" BUTTON TO VIEW THE SOFT DIP SETTING OF EACH INDIVIDUAL GAME.