

This document has been downloaded from:



The largest resource for amusement machines  
documentation on the world wide web!



**FLIPPERSPILL.COM**



# **CROWNS GOLF**



Dear Customer:

Crowns Golf is played in two ways: For 25¢ the player can elect to play a hole at a time and keep on playing for as long as he manages to keep his score below 4 over par. For \$1.25 the player can play 9 holes (1/2 round).

During our testing period we learned that the average playing time was 4 1/2 minutes. In spite of this seemingly long length of time, the results in the cash box were very pleasing, as the game consistently earned enough money to make it a viable product for you to purchase.

Because of our concern for length of time, we felt that we could charge the player 50¢ a hole and consequently increase the earning potentials of the game.

The game we are shipping you will be set at 50¢ per player, \$1.50 for 1/2 round. However, should you elect to set your test piece at 25¢, all the options and all the materials needed are included.

Please make note that Kitco's address is now: 700 Chase Ave., Elk Grove Village, IL 60007. Telephone: 312-228-0451.

Thank you for your order.

Sincerely,

KITCO

Howard Rubin

## CROWN'S GOLF SELF-TESTING INSTRUCTIONS

- ① Set the DIP SW #7 on the PCB to the "ON" position after turning the power off.

After setting DIP SW #7 to the "ON" position, turn the power on and the following will appear on the screen..

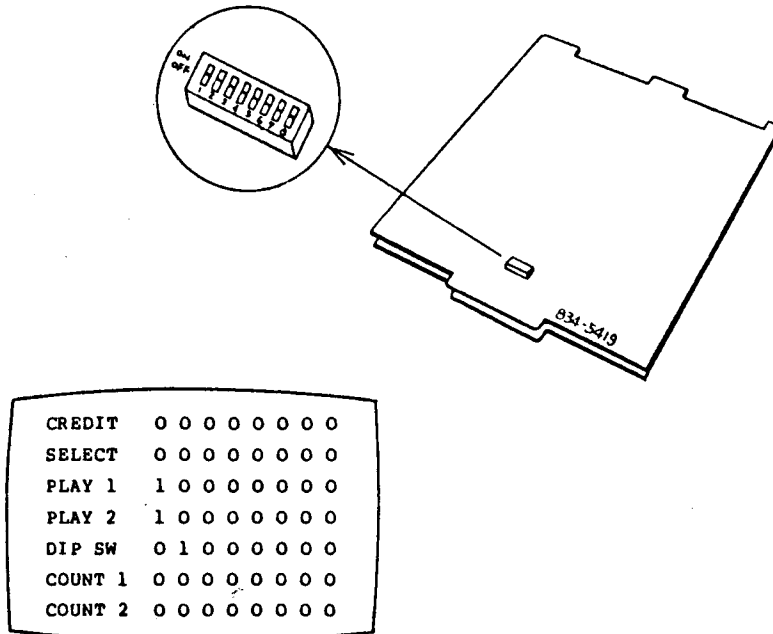


Fig. 1

- ② "0" on the screen shows that the switch is in the "OFF" position. "1" on the screen shows that the switch is in the "ON" position.

The description and relevant explanations of each switch are given in Fig. 2.

| CREDIT  | NOT USED              |                 |                |                   |                   |                 | SERVICE SW       | COIN IN     |
|---------|-----------------------|-----------------|----------------|-------------------|-------------------|-----------------|------------------|-------------|
| SELECT  |                       |                 |                | 2 HALF-ROUND PLAY | 1 HALF-ROUND PLAY | 2 PLAY          | 1 PLAY           |             |
| PLAY 1  | SHOT SW               | DIRECTION RIGHT | DIRECTION LEFT | CLOSED STANCE     | OPEN STANCE       | FORWARD ADDRESS | BACKWARD ADDRESS | CLUB SELECT |
| PLAY 2  | SHOT SW               | DIRECTION RIGHT | DIRECTION LEFT | CLOSED STANCE     | OPEN STANCE       | FORWARD ADDRESS | BACKWARD ADDRESS | CLUB SELECT |
| DIP SW  | DIP-SW8               | DIP-SW7         | DIP-SW6        | DIP-SW5           | DIP-SW4           | DIP-SW3         | DIP-SW2          | DIP-SW1     |
| COUNT 1 | PLAYER 1 SHOT COUNTER |                 |                |                   |                   |                 |                  |             |
| COUNT 2 | PLAYER 2 SHOT COUNTER |                 |                |                   |                   |                 |                  |             |

FIG. 2

- ③ The button layout on the control panel is shown in Fig. 3.


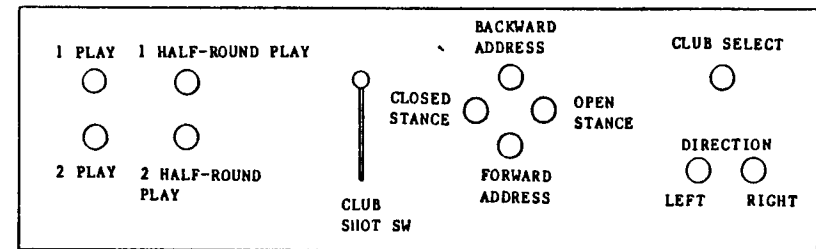


FIG. 3


④ DIP SWITCH SETTING


| OPTION                                                             |                                                | 1       | 2   | 3   | 4   | 5   | 6        | 7 | 8 |
|--------------------------------------------------------------------|------------------------------------------------|---------|-----|-----|-----|-----|----------|---|---|
| 1 GAME                                                             | 1 COIN                                         |         |     |     |     | OFF | NOT USED |   |   |
|                                                                    | * 2 COINS                                      |         |     |     |     | ON  |          |   |   |
|                                                                    | HALF-ROUND PLAY                                | 4 COINS | OFF |     | OFF |     |          |   |   |
|                                                                    | 5 COINS                                        | ON      |     |     | OFF |     |          |   |   |
| GAME DIFFICULTY                                                    | * 6 COINS                                      | OFF     |     |     | ON  |     |          |   |   |
|                                                                    | 10 COINS                                       | ON      |     |     | ON  |     |          |   |   |
|                                                                    | At the time of 1 play ... Wind becomes mild.   |         | OFF |     |     |     |          |   |   |
|                                                                    | At the time of 1 play ... Wind becomes strong. |         | ON  |     |     |     |          |   |   |
| TABLE TYPE                                                         |                                                |         |     | OFF |     |     |          |   |   |
| UPRIGHT TYPE                                                       |                                                |         |     | ON  |     |     |          |   |   |
| HI-SCORE/HOLE IN ONE list is cleared when the switch is turned ON. |                                                |         |     |     |     | OFF |          |   |   |
| TEST MODE when the switch is "ON".                                 |                                                |         |     |     |     | ON  |          |   |   |

\* FACTORY SETTINGS

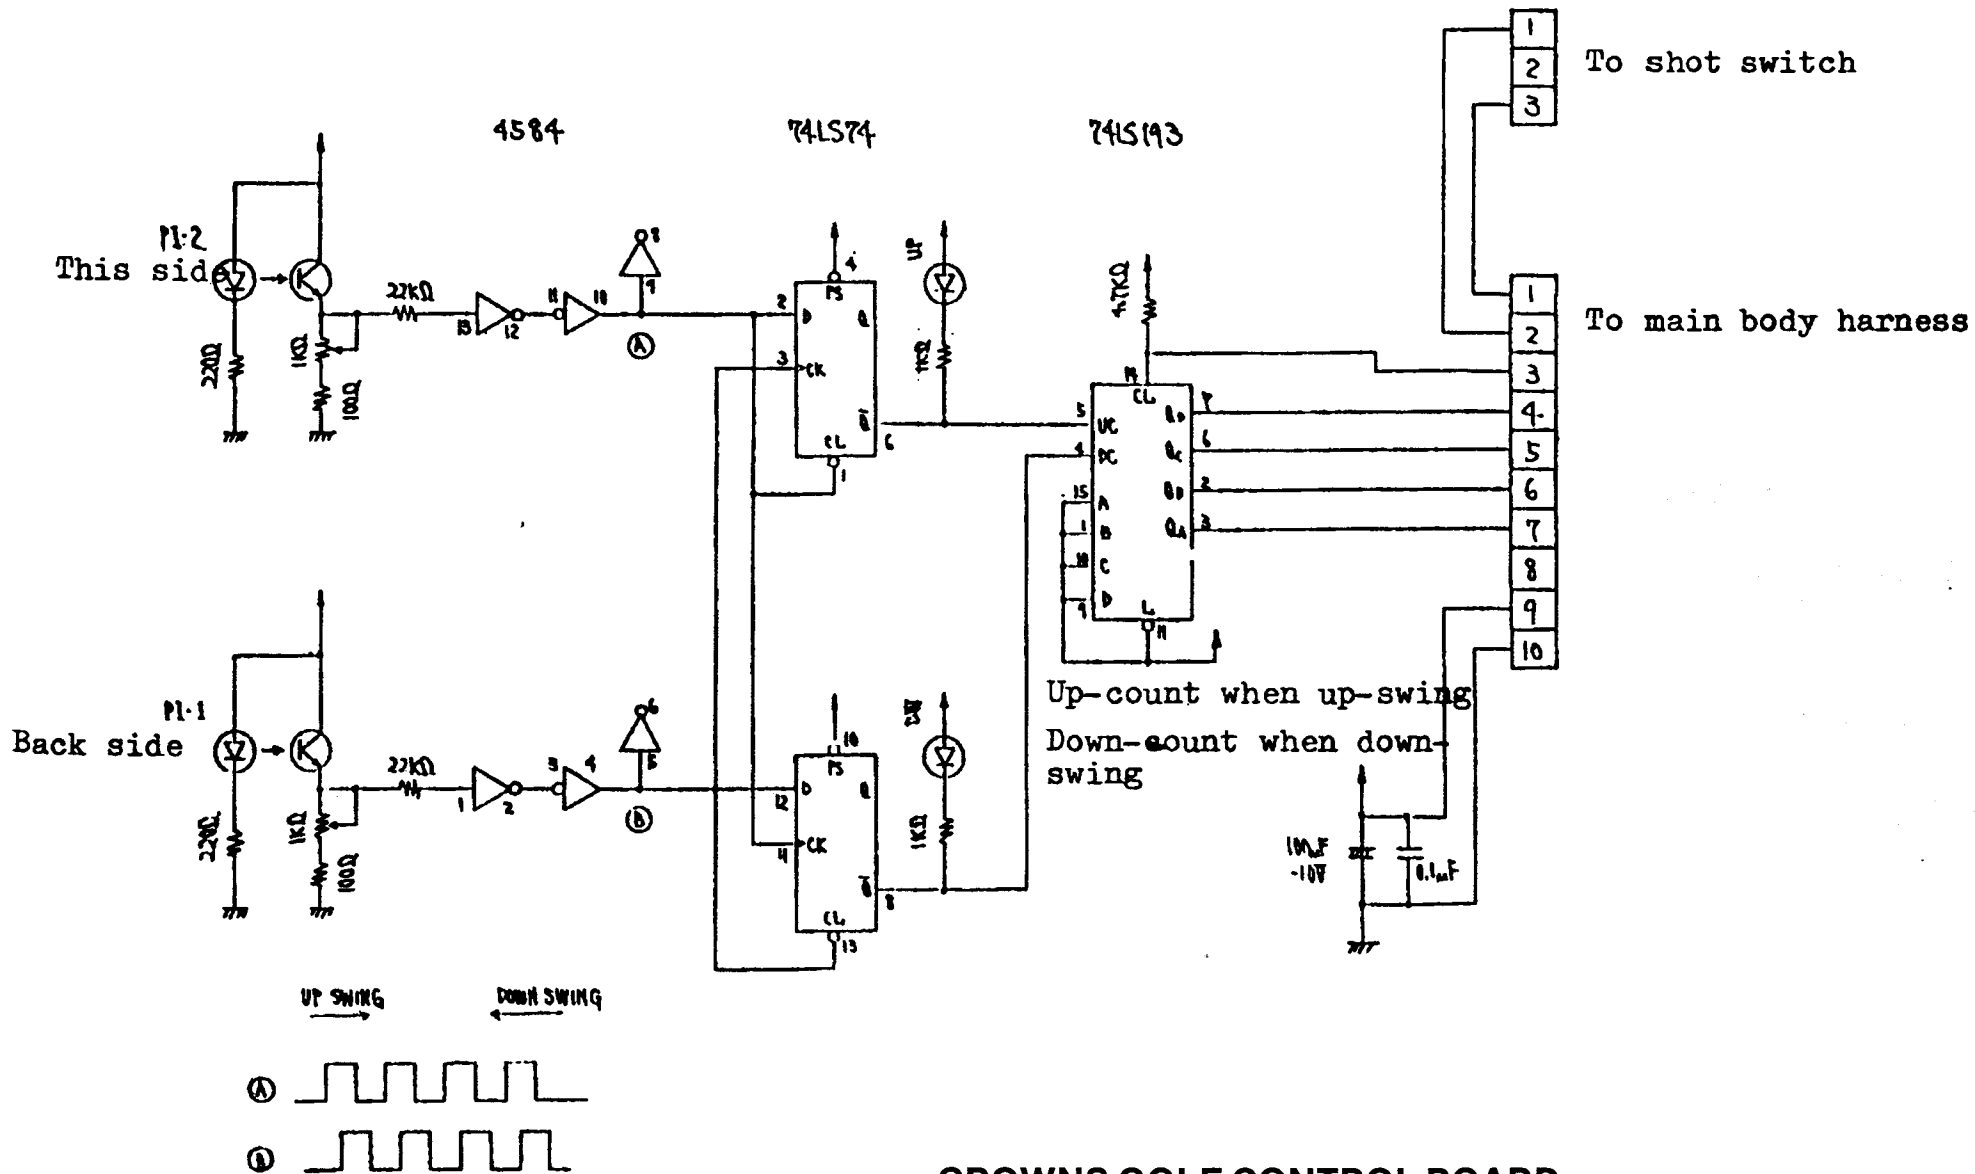


























































CROWNS GOLF CONTROL BOARD

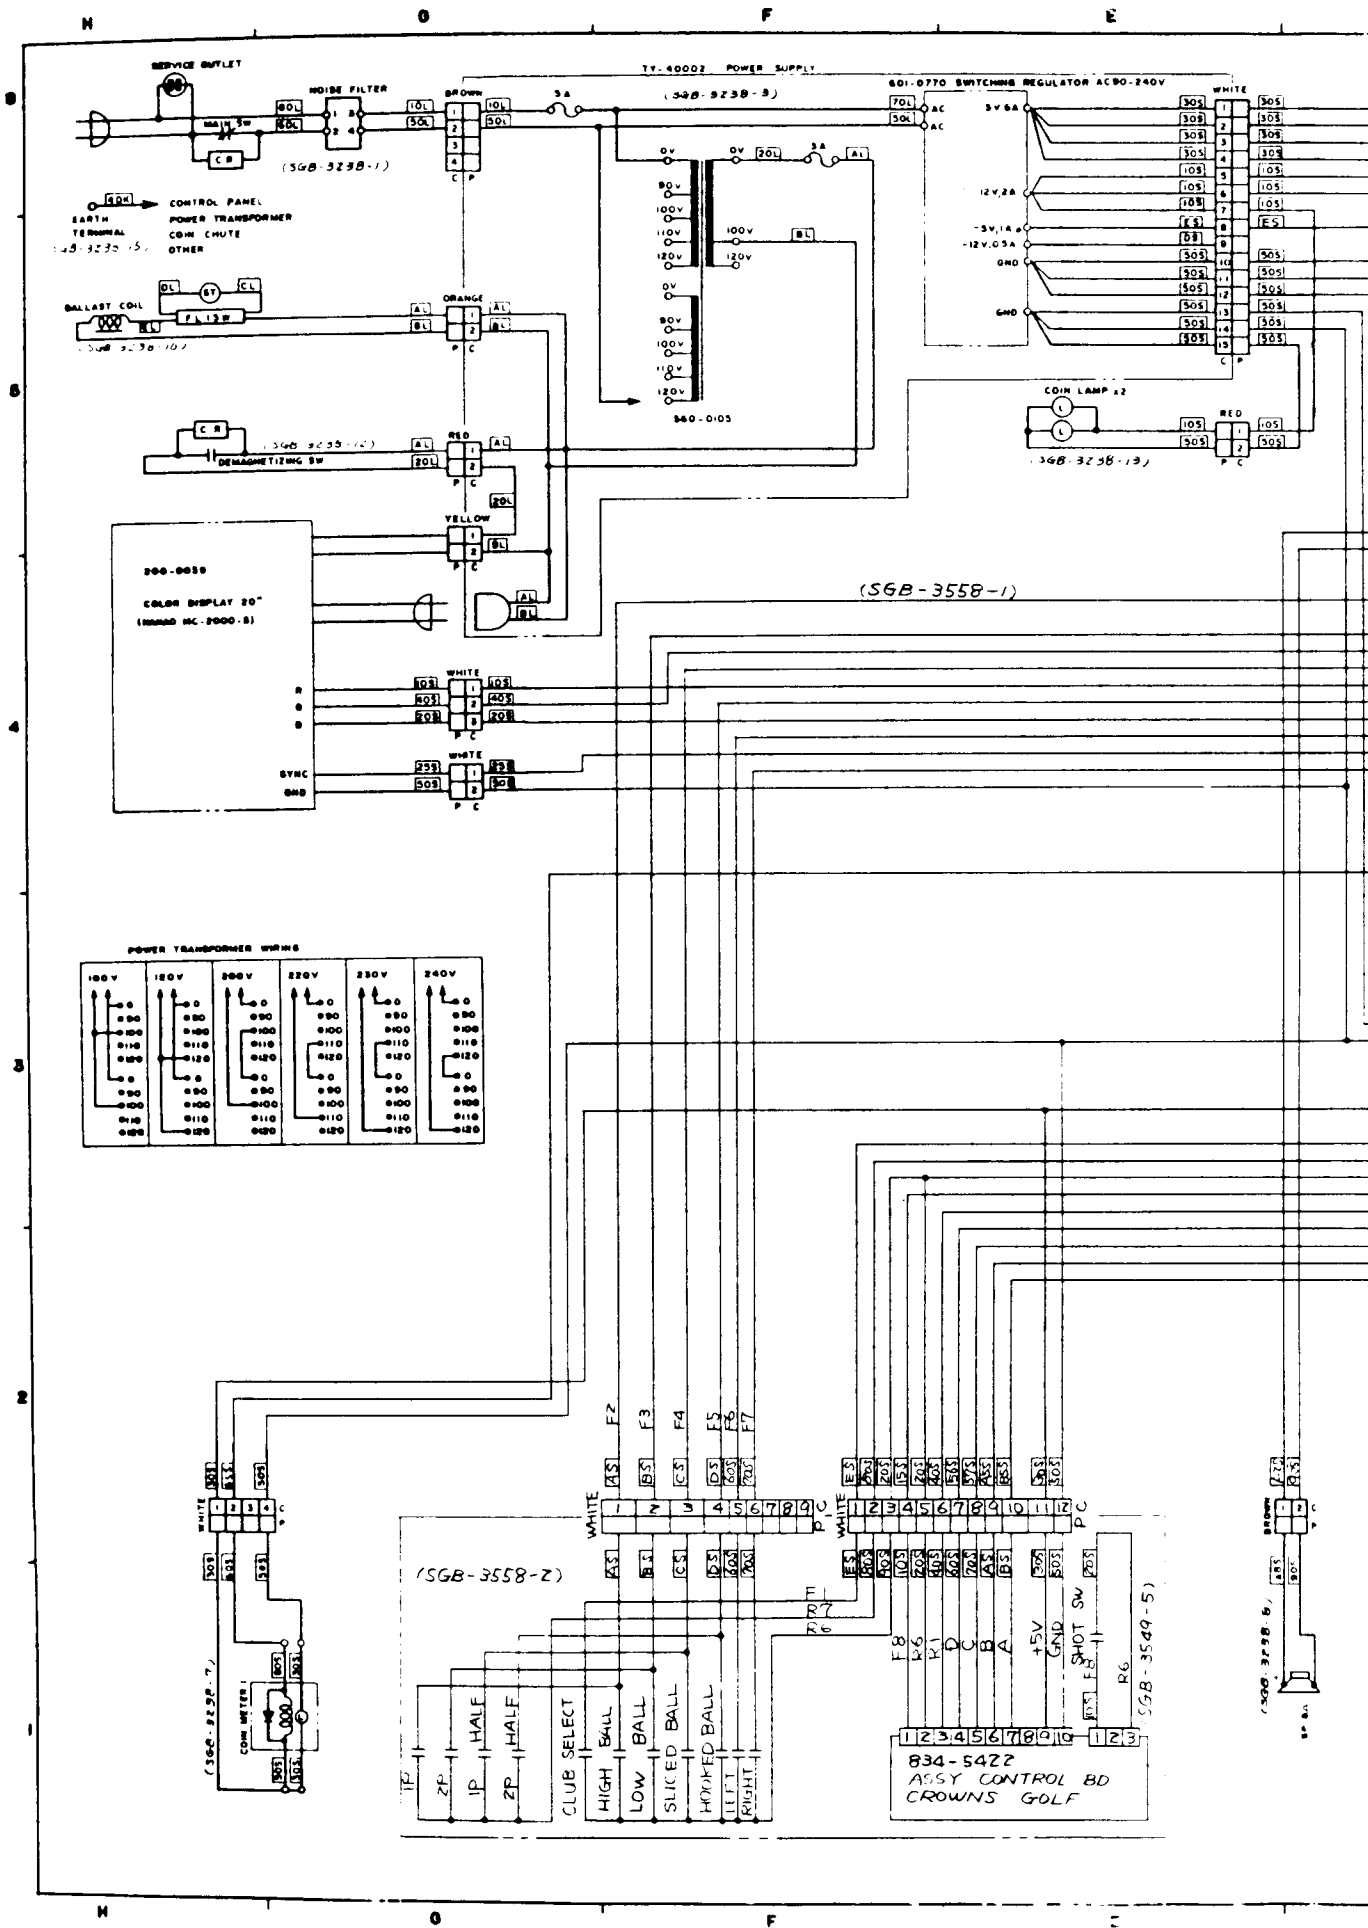







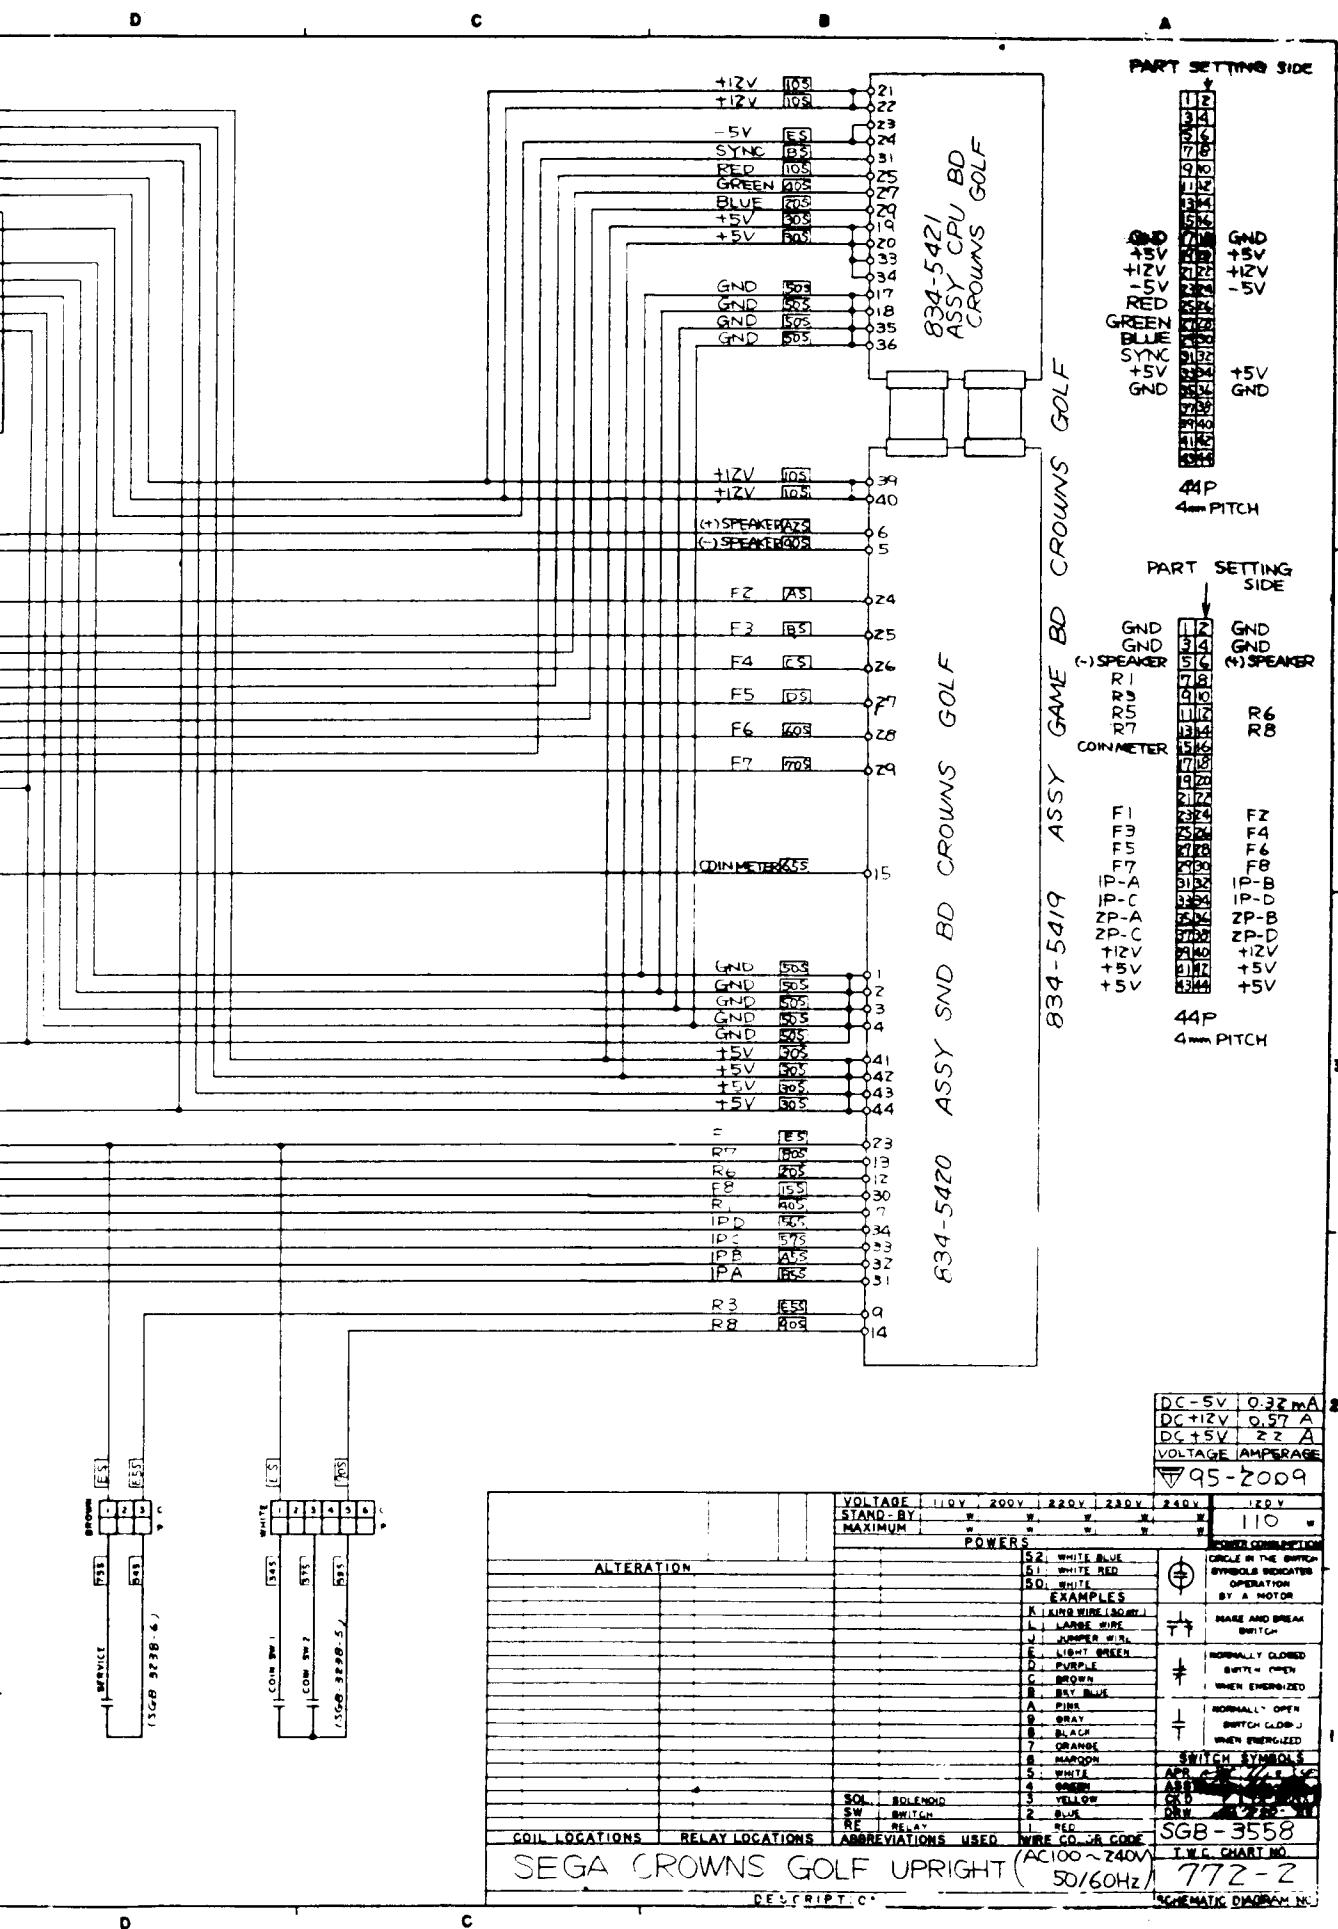









DESCRIPTION:


# X069 PCA1

                                         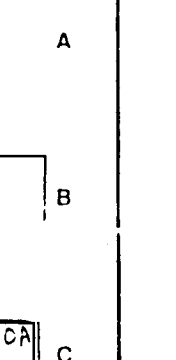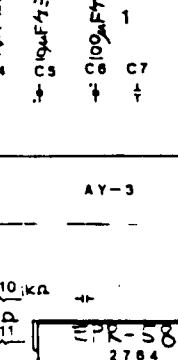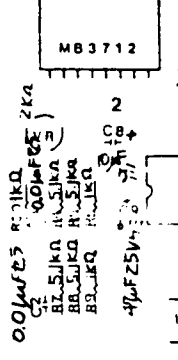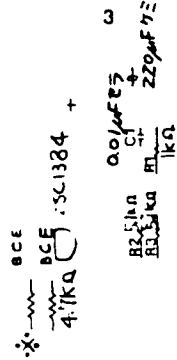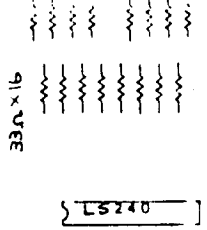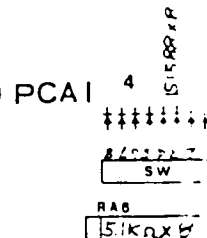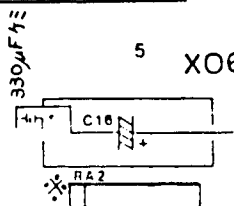         


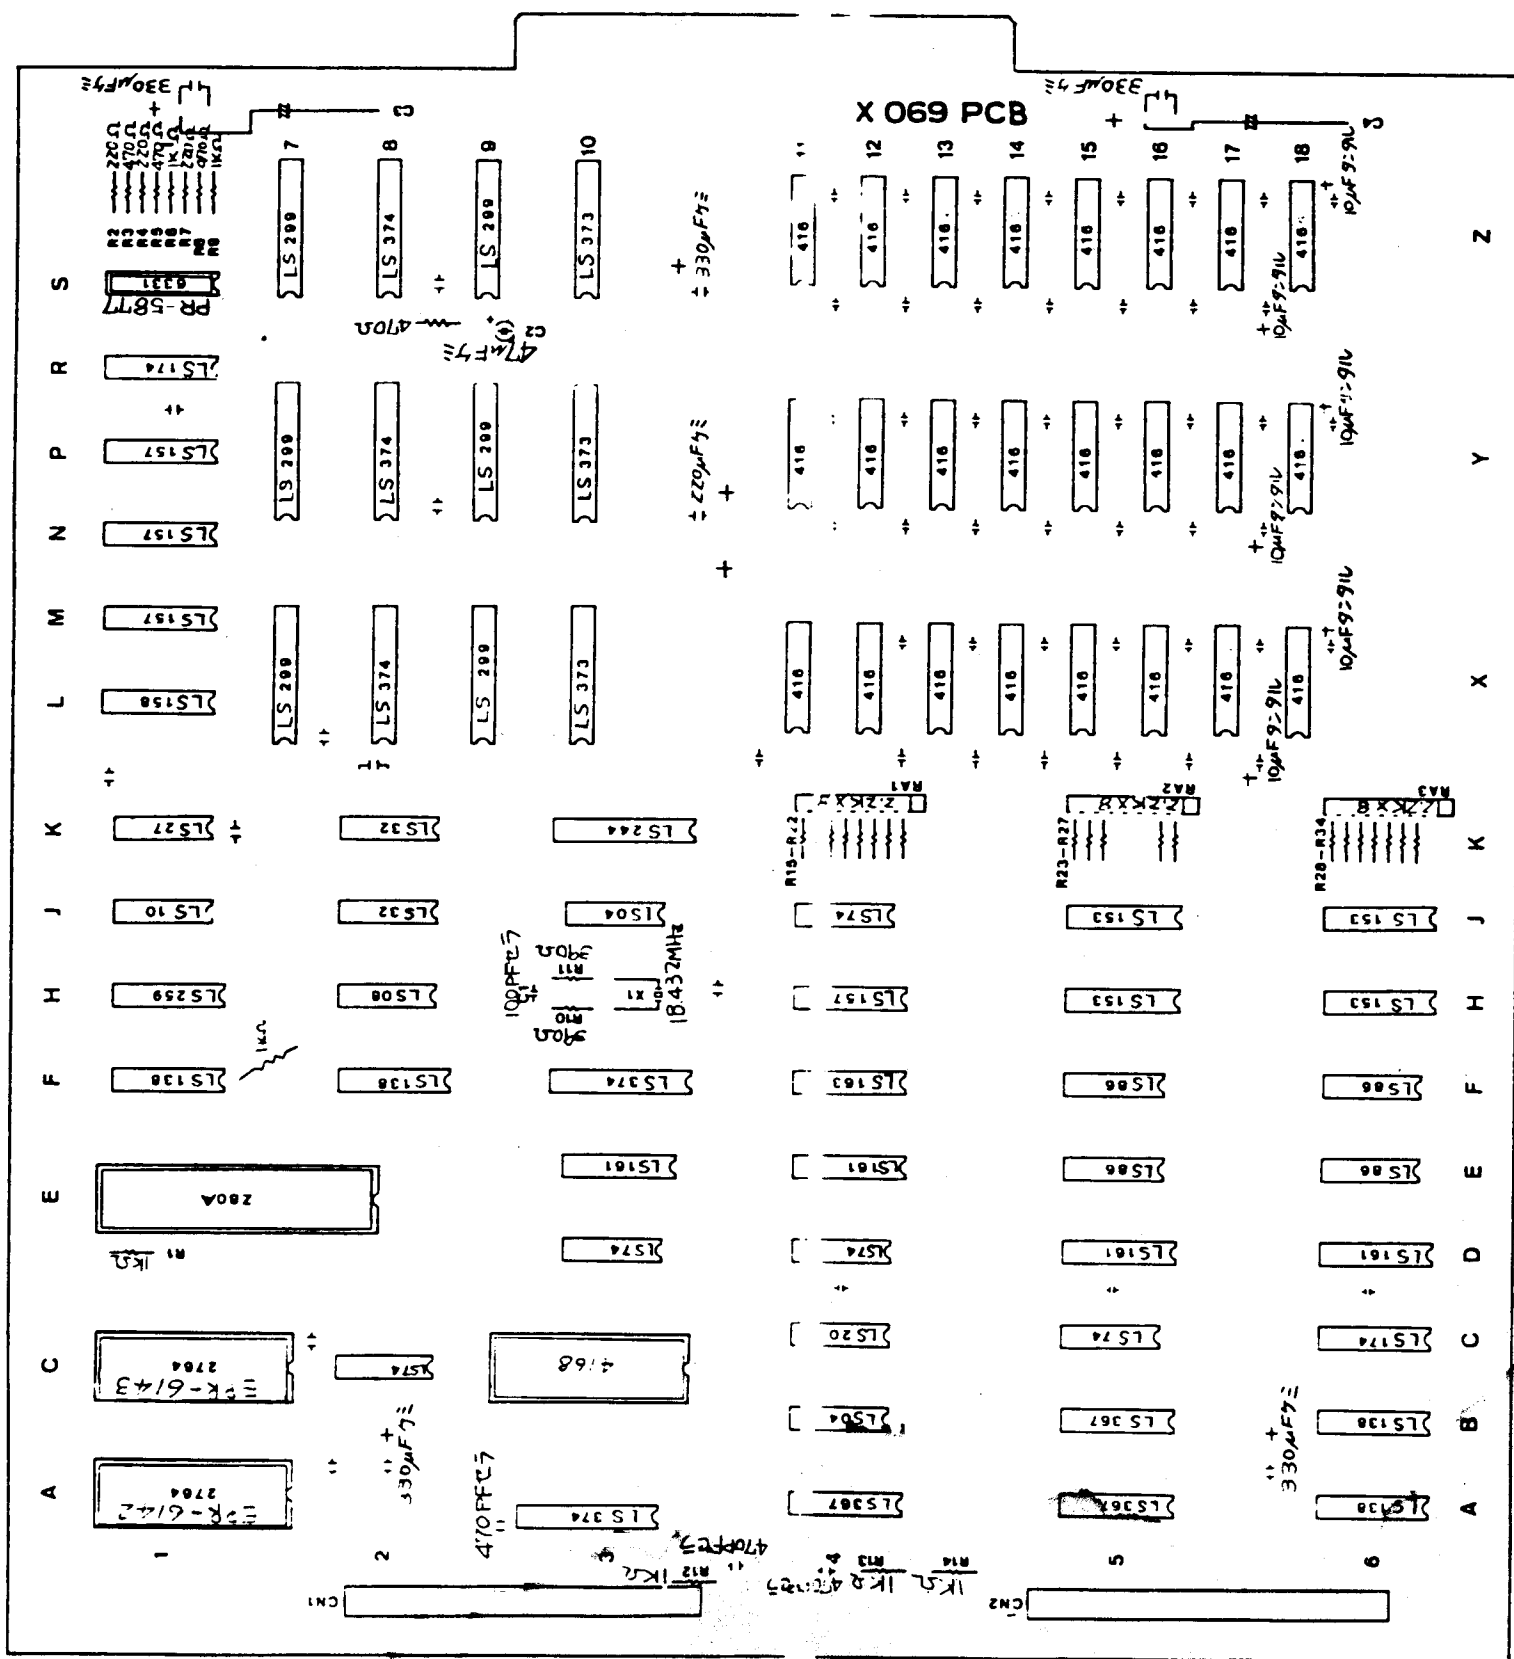


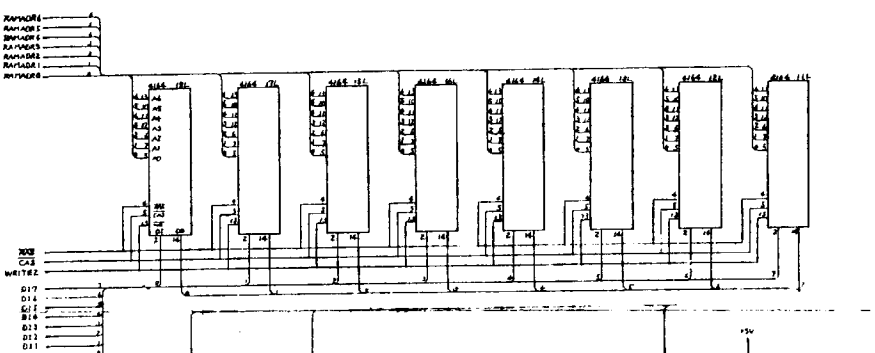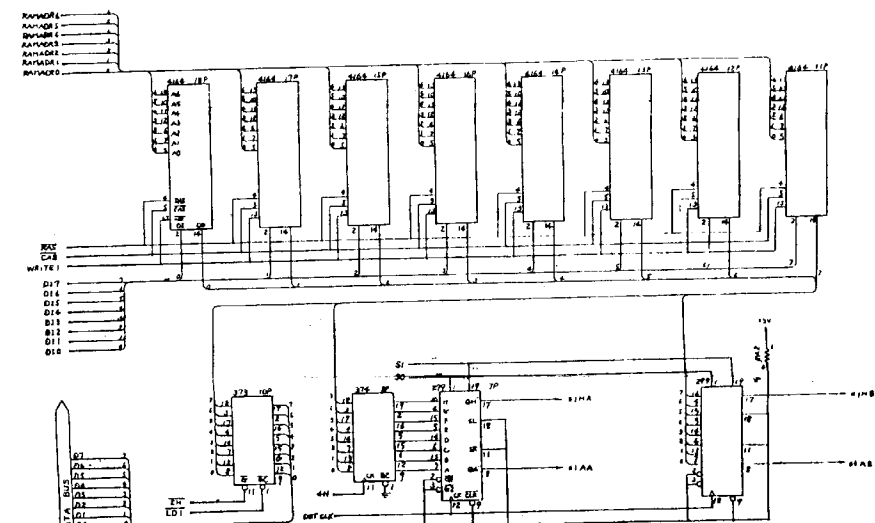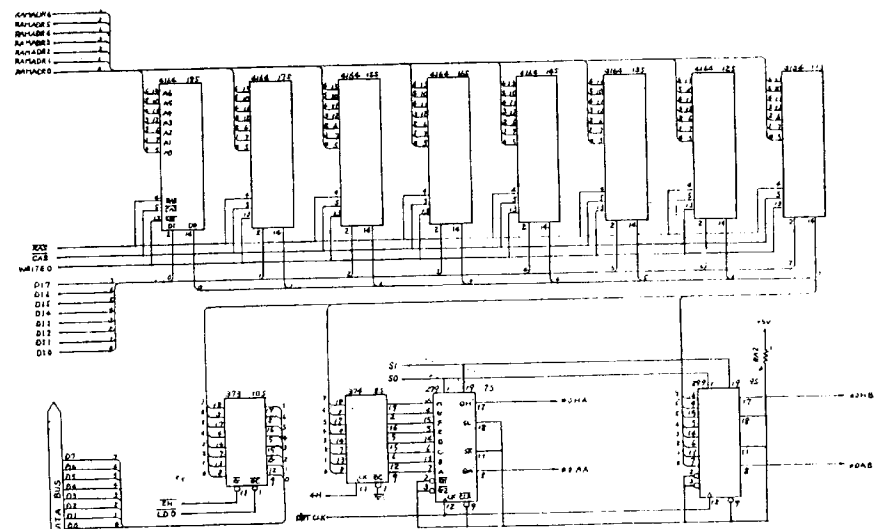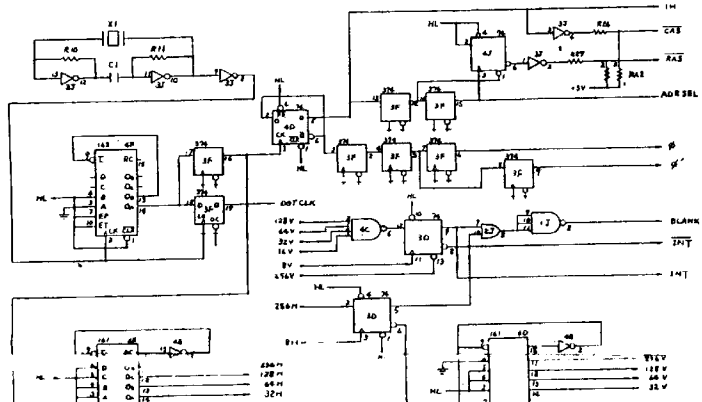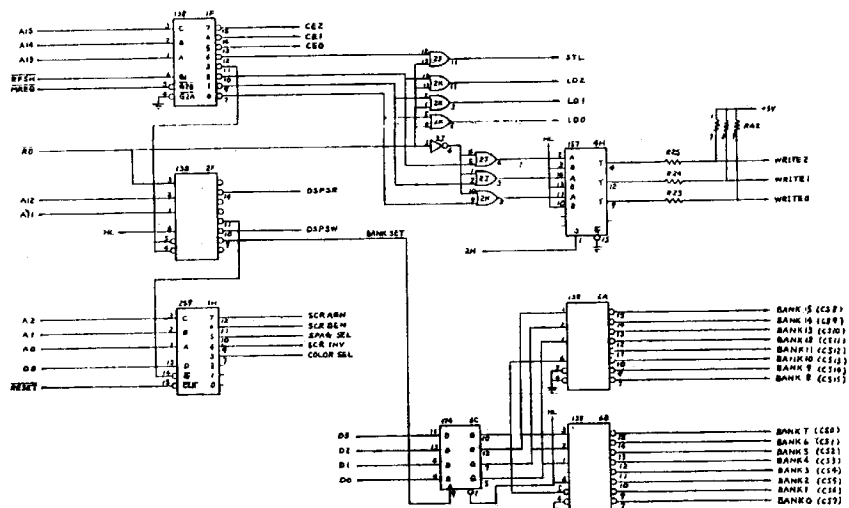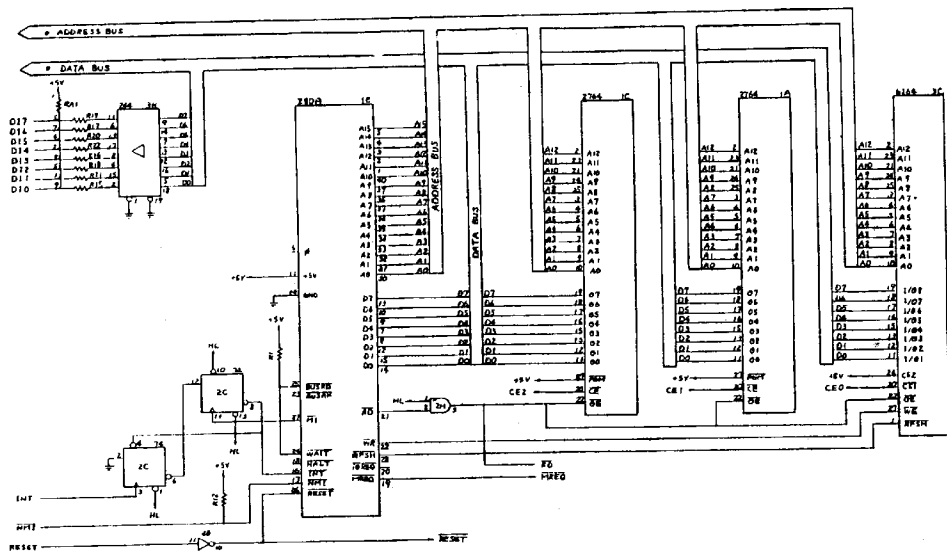

 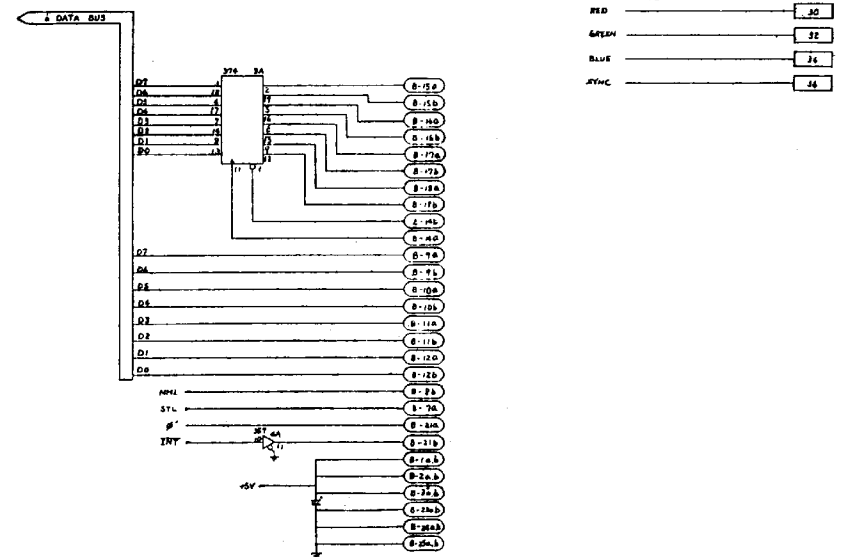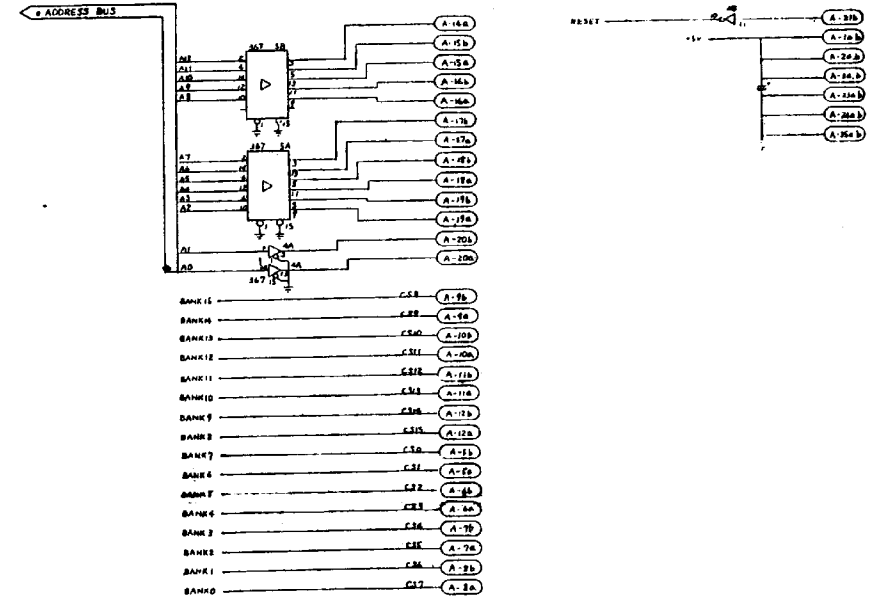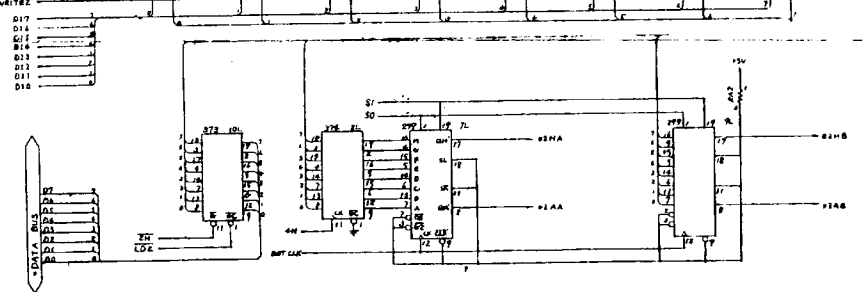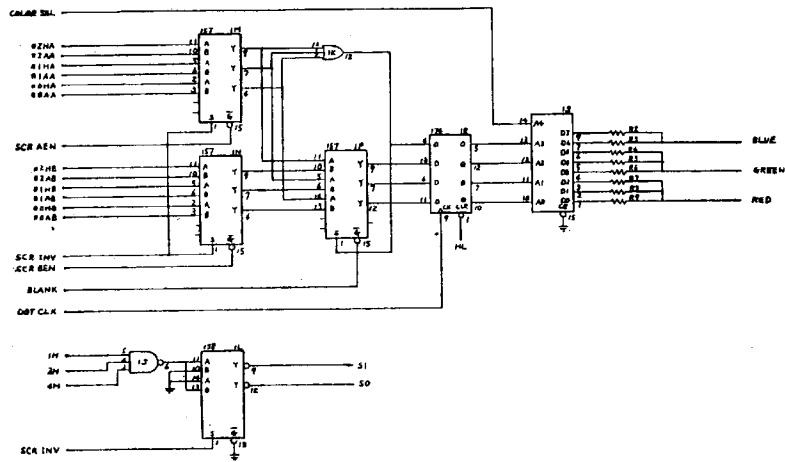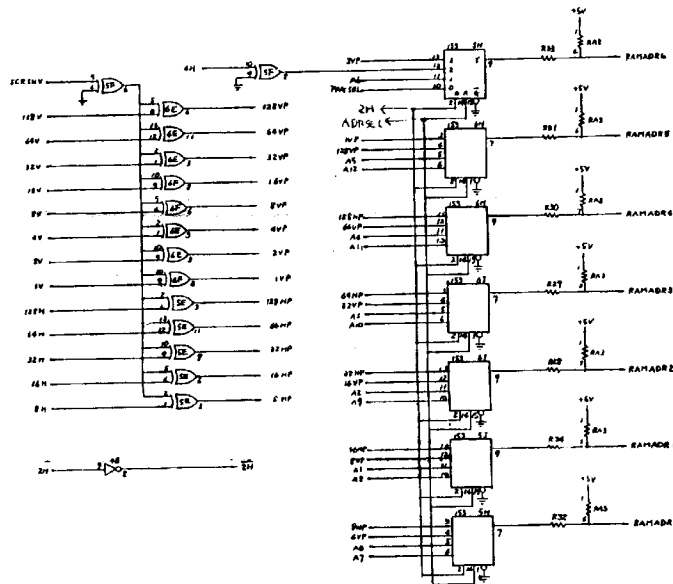
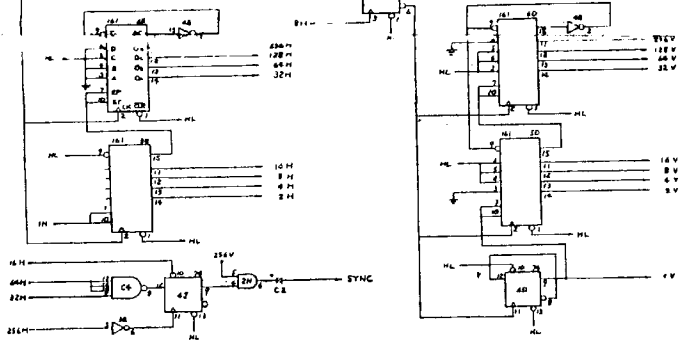


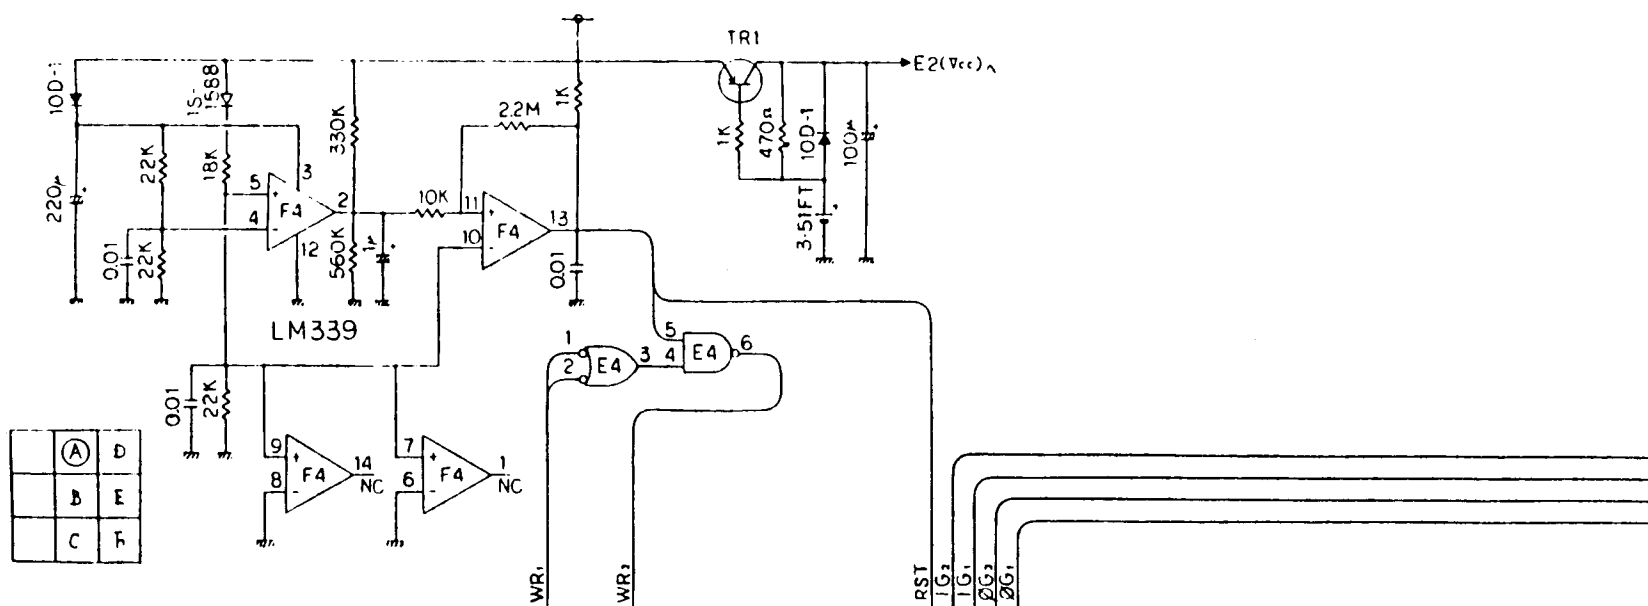


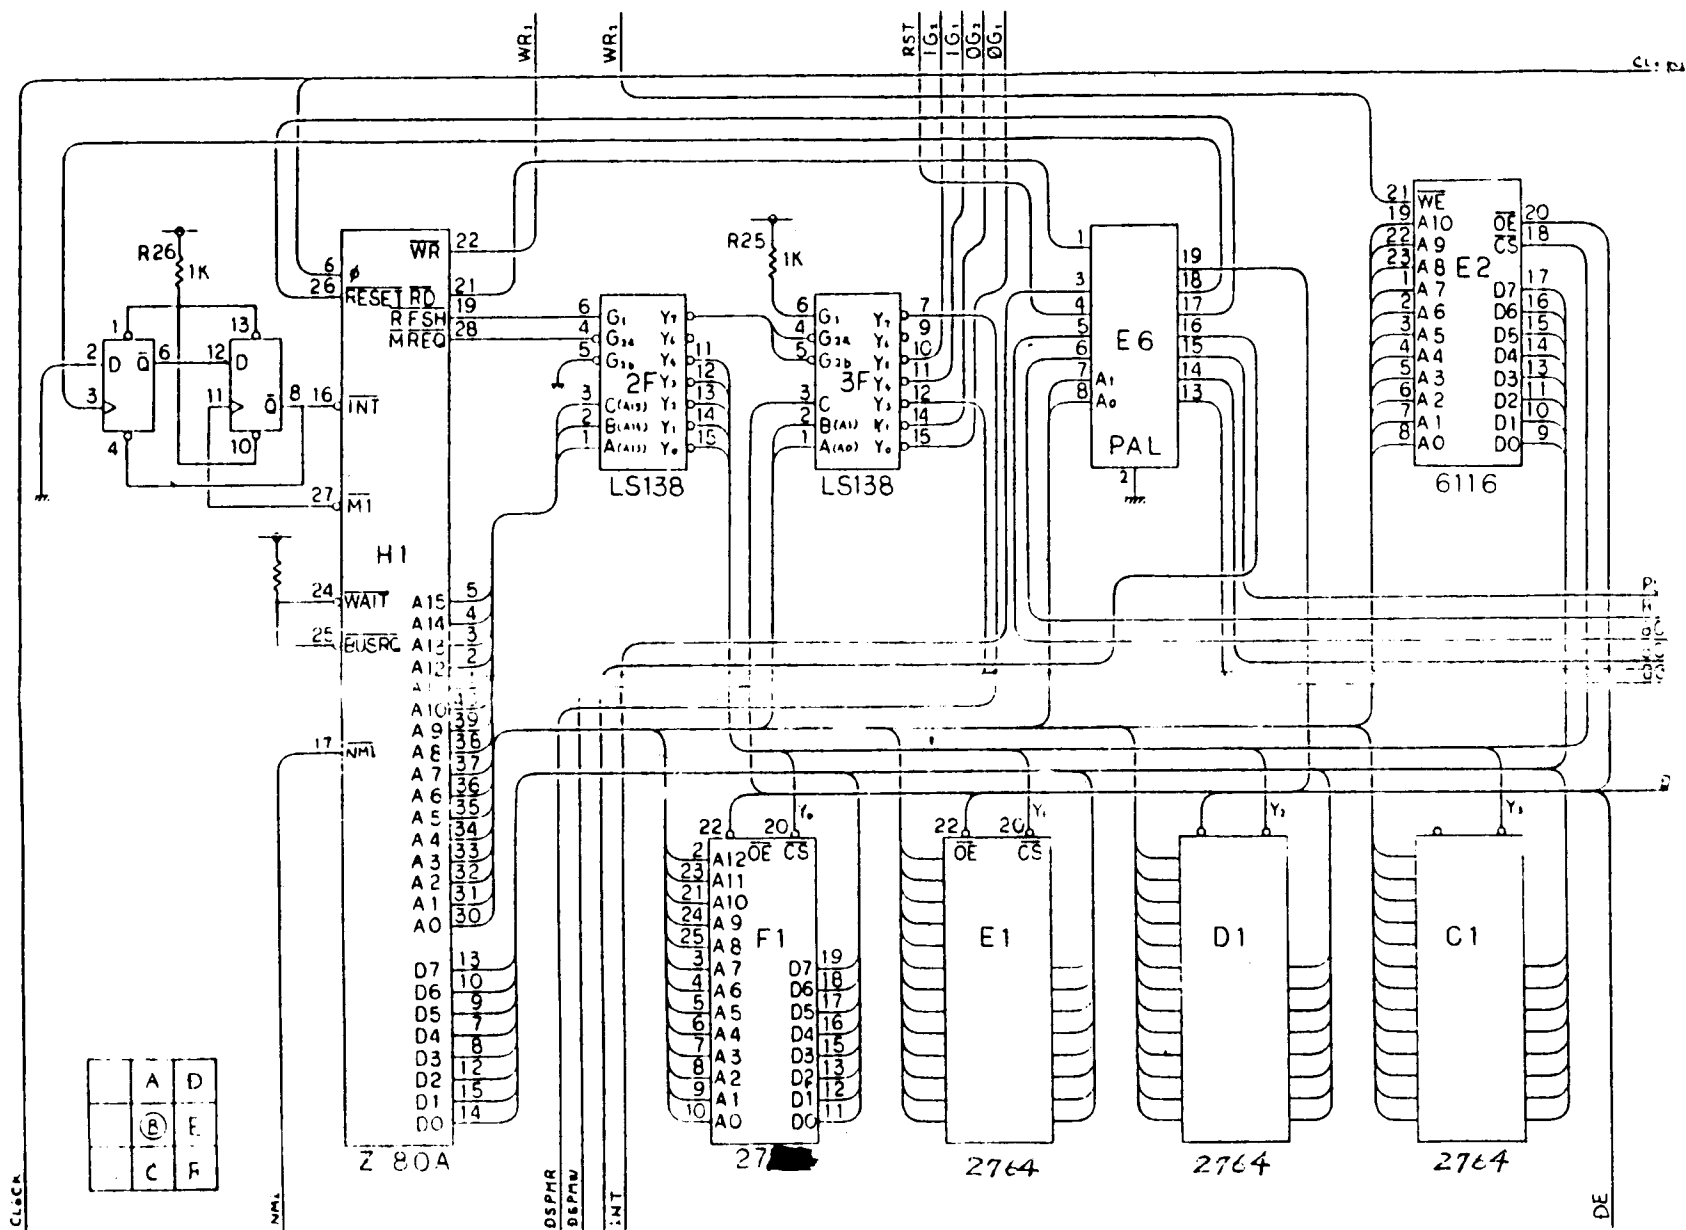


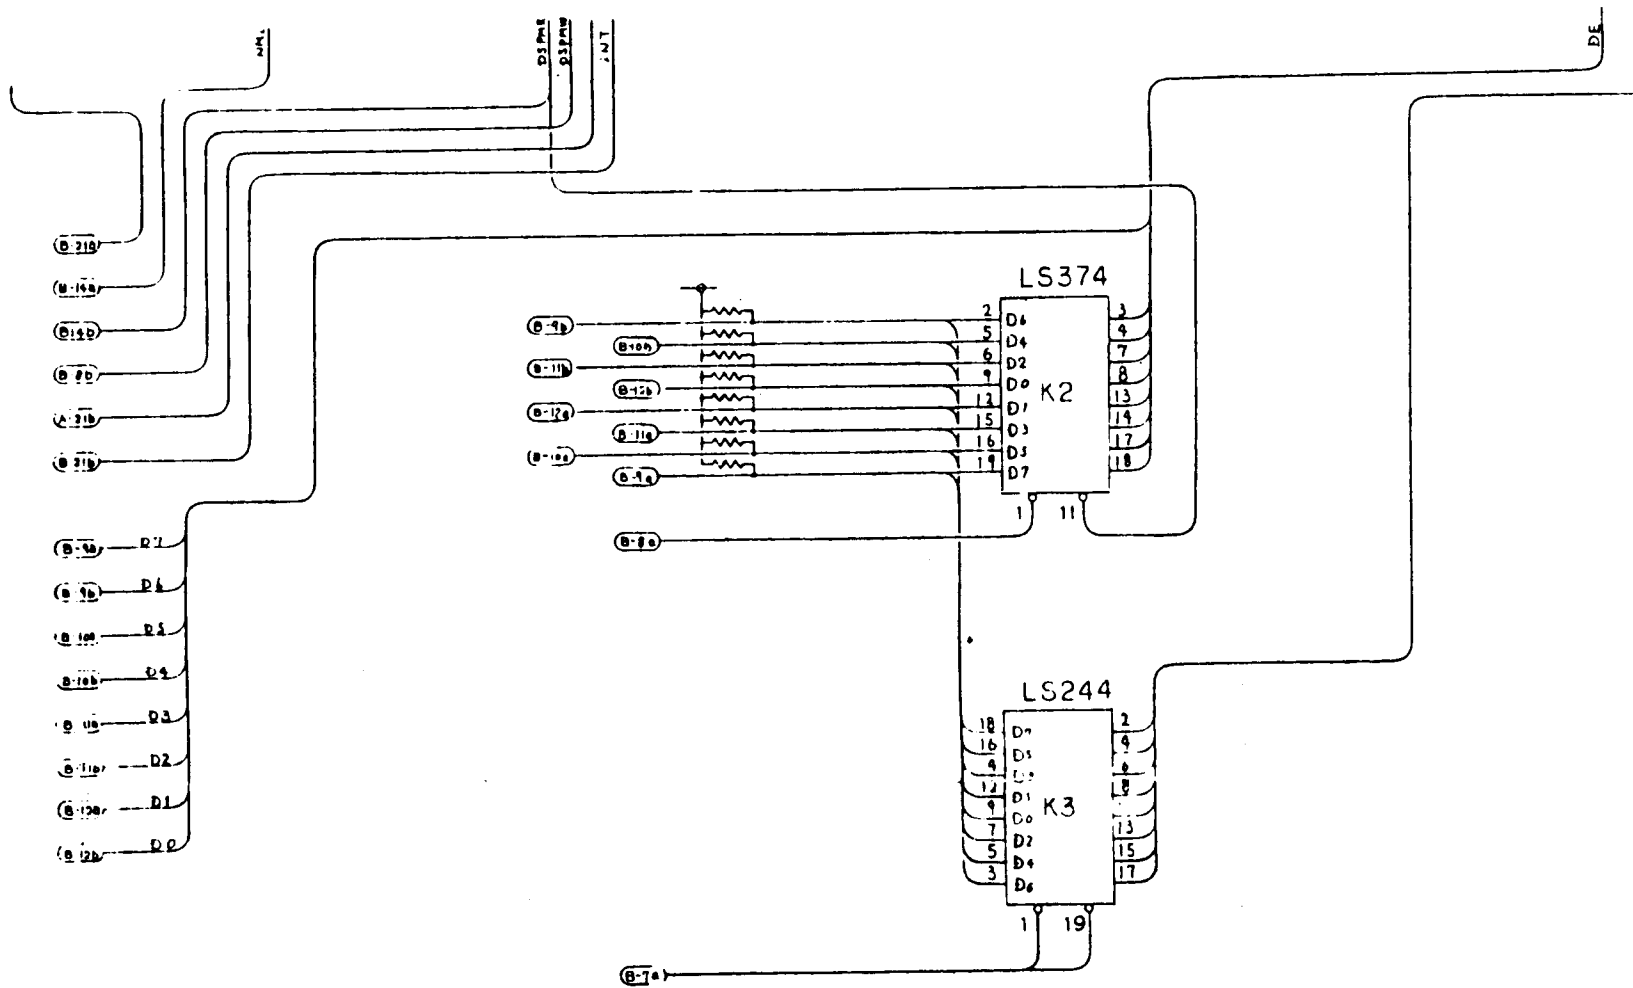

|  |   |   |
|--|---|---|
|  | A | D |
|  | B | E |
|  | C | F |

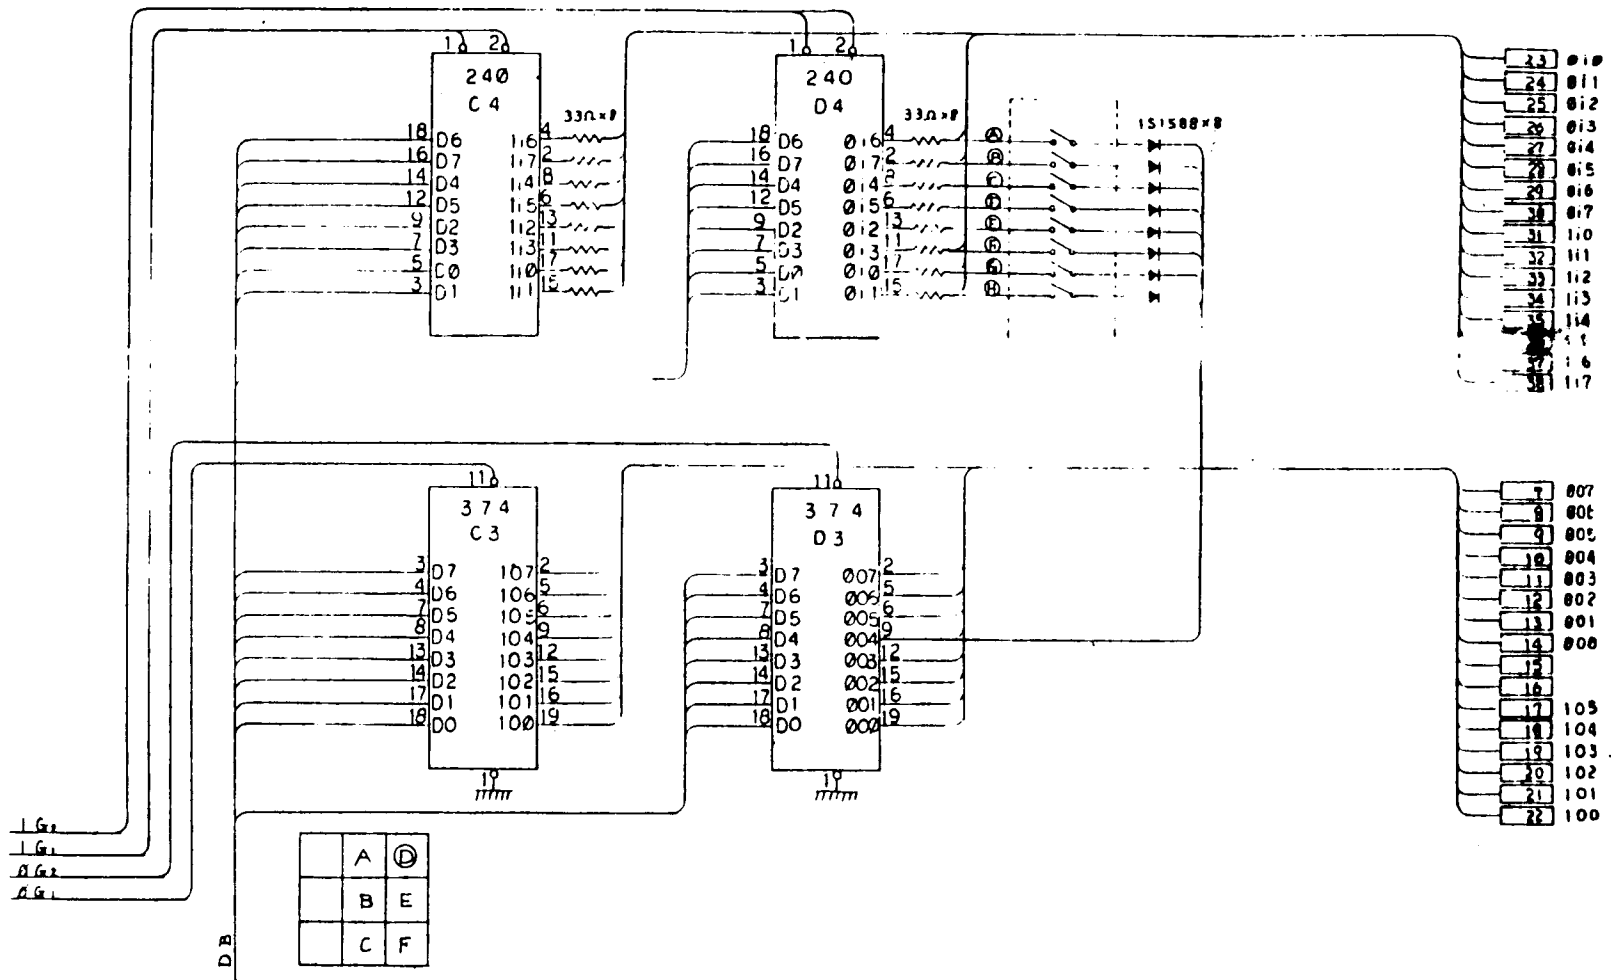 

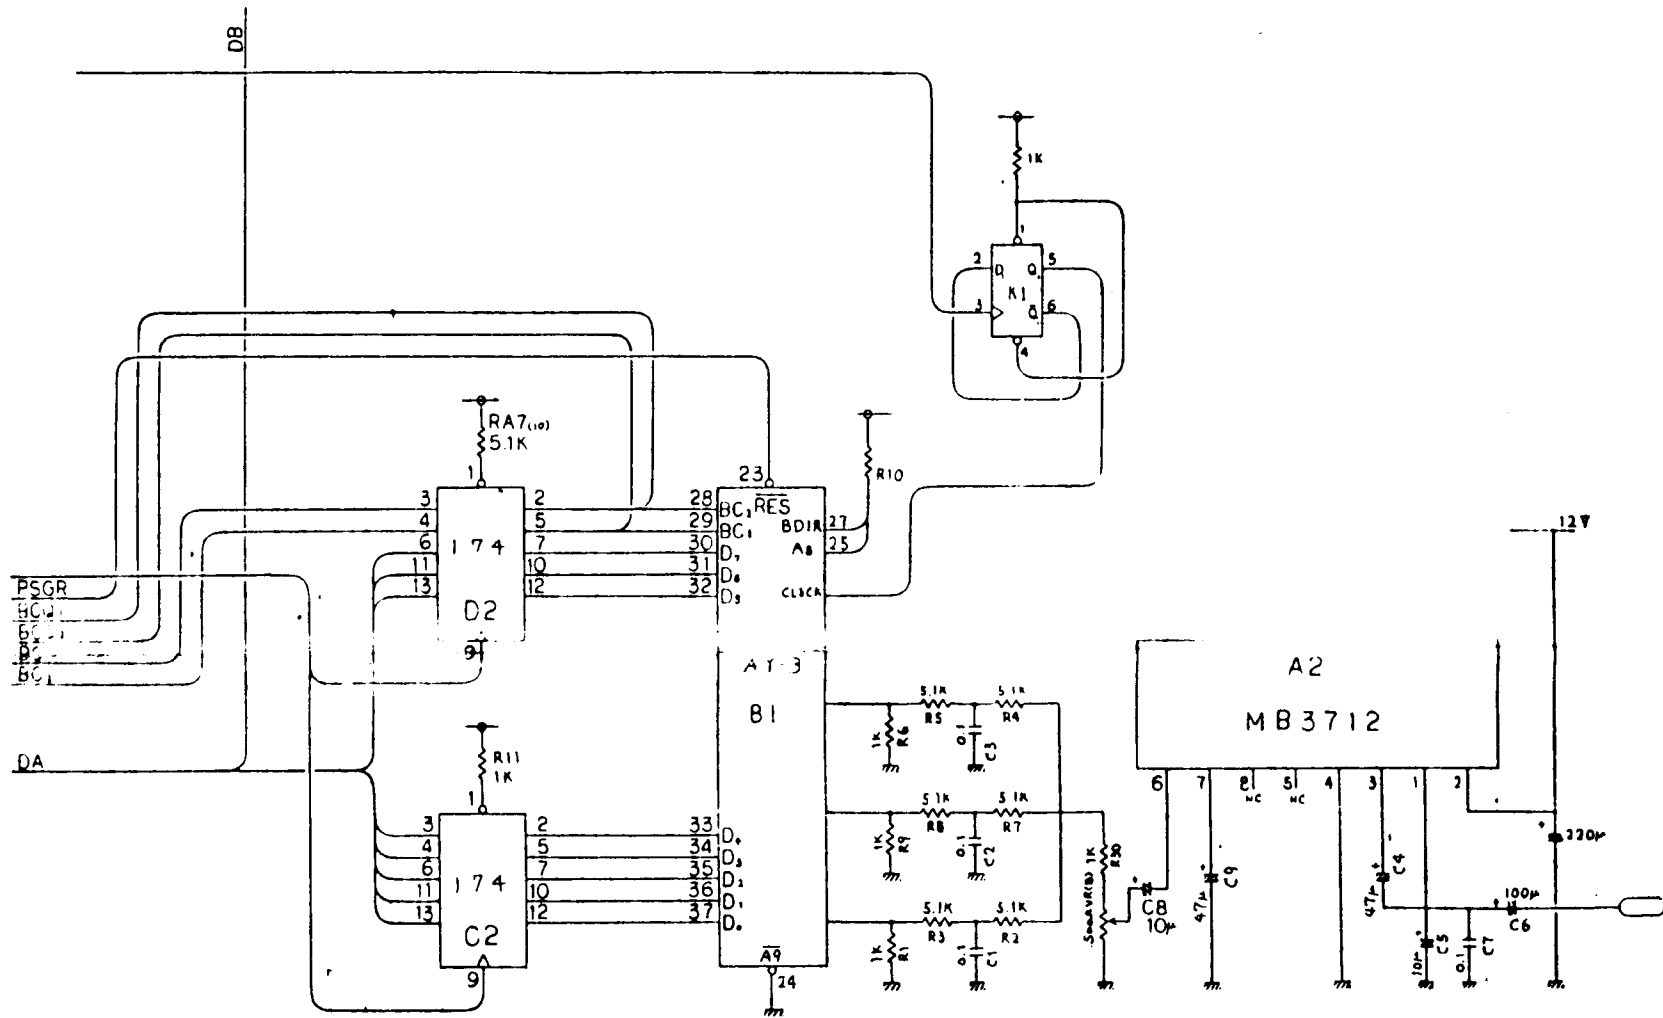

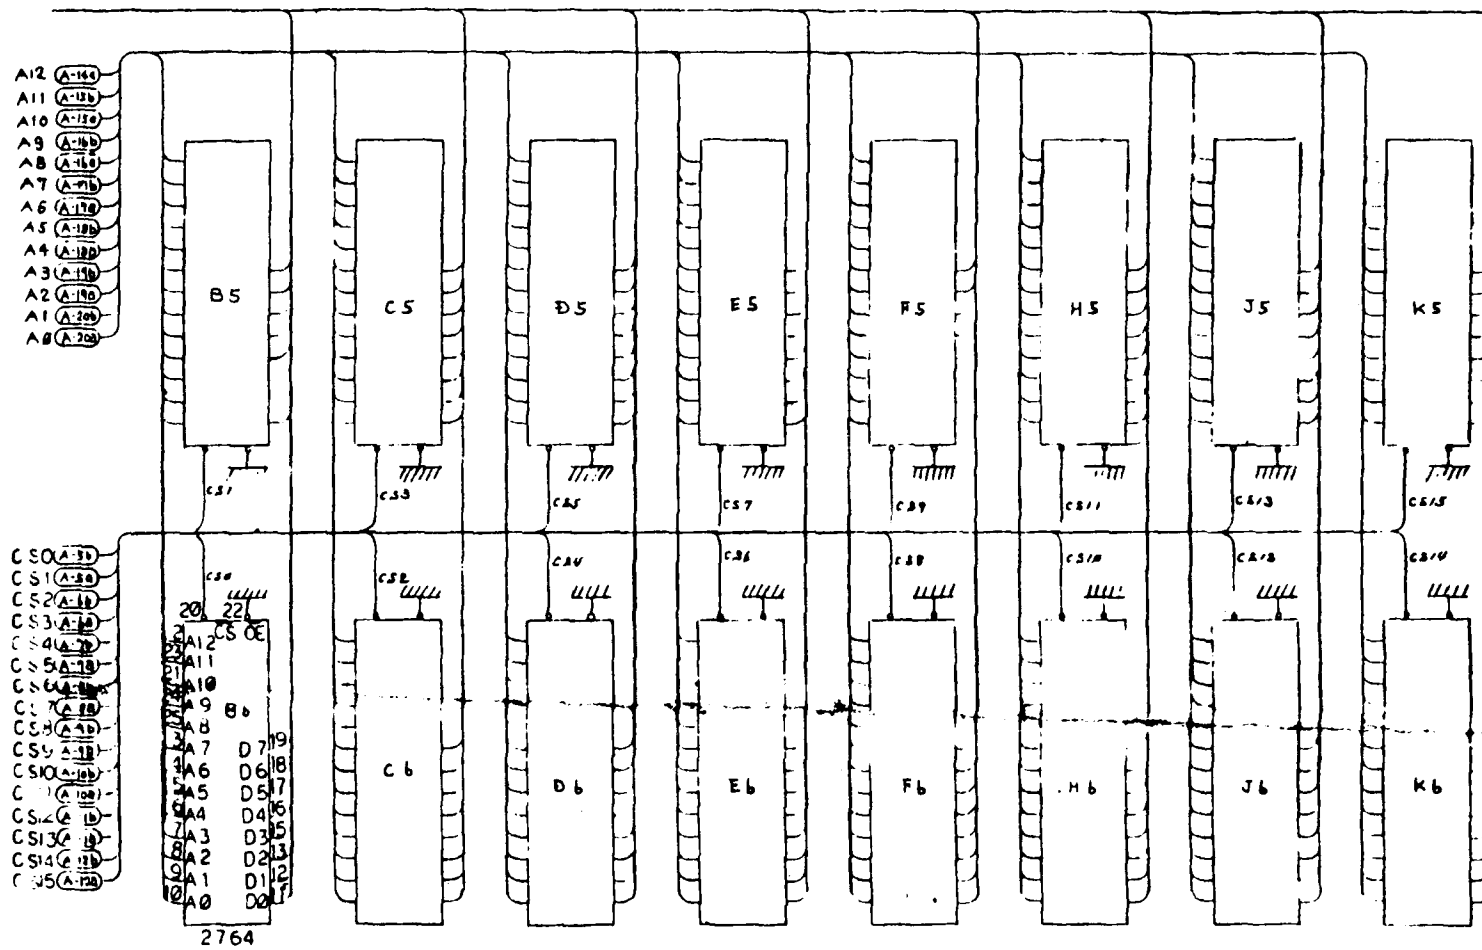

|   |   |
|---|---|
| A | D |
| B | E |
| C | F |