

# SETTING UP THE SOFT DIP ON THE MULTI VIDEO SYSTEM

1. TURN POWER ON.
2. PUSH THE TEST BUTTON INSIDE THE CABINET.
3. THE FOLLOWING SCREEN WILL APPEAR.

MOVE LEFT JOYSTICK UP/DOWN TO MOVE THE POINTER TO 'SETTING UP THE SOFT DIP'. PRESS 'A' BUTTON TO SET.

```
HARDWARE TEST
SETTING UP THE HARD DIP
SETTING UP THE SOFT DIP
BOOKKEEPING
SETTING UP THE CODE NUMBER
SETTING UP THE CALENDAR
EXIT
```

THE FOLLOWING SCREEN WILL BE DISPLAYED:

```
CABINET SET UP
SLOT 1 (GAME TITLE)
SLOT 2 (GAME TITLE)
SLOT 3 (GAME TITLE)
SLOT 4 (GAME TITLE)
SLOT 5 (GAME TITLE)
SLOT 6 (GAME TITLE)
```

4. SELECT THE GAME TITLE YOU WANT AND PRESS 'A' BUTTON TO VIEW THE SOFT DIP SETTING OF EACH INDIVIDUAL GAME.

This document has been downloaded from:



FLIPPERSPILL.COM

# ■ STREET SLAM / STREET HOOP ■

( SOFT DIP SCREEN 1 )

▷ TEAM SELECT 1  
 PLAY TIME 2:00  
 VS PLAY TIME 2:00  
 CONTINUE WITH  
 CONT. MODE A TYPE  
 DIFFICULTY LEVEL 4  
 DEMO SOUND WITH

( SOFT DIP SCREEN 2 )

▷ CREDIT DISP. WITH  
 LEVEL DISP. WITH  
 HOW TO PLAY WITH

1. TEAM SELECT	ONE TEAM CAN BE RENAMED
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / 1	
2. PLAY TIME	SETTING TIME OF ONE GAME IN TOURNAMENT MODE.
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / 2:00 MIN ( 13 LEVELS FROM 1:00 TO 4:00 , BY 15 SEC. )	
3. VS PLAY TIME	SETTING TIME OF GAME IN VS MODE.
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / 2:00 MIN ( 13 LEVELS FROM 1:00 TO 4:00 , BY 15 SEC. )	
4. CONTINUE	WITH OR WITHOUT CONTINUE
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / WITH	
5. CONT.MODE	GAME TYPE SETTING
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / A TYPE	
6. DIFFICULTY	DIFFICULTY SETTING
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / LEVEL 4	
7. DEMO SOUND	WITH OR WITHOUT SOUND
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / WITH	
8. CREDIT DISP.	WITH OR WITHOUT CREDIT DISPLAY
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / WITH	
9. LEVEL DISP.	WITH OR WITHOUT LEVEL DISPLAY
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / WITH	
10. HOW TO PLAY	WITH OR WITHOUT HOW TO PLAY SCREEN
CONTROLS : USE JOYSTICK TO MOVE ARROW . CHANGE MODE WITH "A" OR "B" BUTTON . NORMAL SETTING / WITH	

## ※ 5. CONT.MODE

A TYPE (2 PERIODS) : VS.CPU : 1 CREDIT , WINNER CONTINUES .  
 1P VS 2P : 2 CREDIT , WINNER CONTINUES .  
 LOSER CONTINUES WITH COIN .  
 TIE : BOTH PLAYERS CONTINUE WITH COIN .

B TYPE (2 PERIODS) : VS.CPU : 1 CREDIT , CONTINUE WITH COIN .  
 1P VS 2P : 2 CREDIT , CONTINUE WITH COIN .

C TYPE (1 PERIOD) : VS.CPU : 1 CREDIT , WINNER CONTINUES .  
 1P VS 2P : 2 CREDIT , WINNER CONTINUES .