

This document has been downloaded from:



The largest resource for amusement machines
documentation on the world wide web!



FLIPPERSPILL.COM



取扱説明書

【仕様】

ゲーム名称 **VASARA2 (バサラ 2)**

基板外形 **W310×D238×H70 (mm)**

供給電源仕様 **+5V 7A / +12V 1A**

※電圧の測定は、基板コネクタ一部分で測定してください。

画面 **縦画面**

VISCO®

vasara2 (バサラ 2)

DIP SWITCH [1]

		1	2	3	4	5	6	7	8
GAME STYLE	COIN PLAY	OFF							
	FREE PLAY	ON							
SCREEN POSITION	NORMAL		OFF						
	REVERSE		ON						
TEST MODE	NORMAL			OFF					
	TEST			ON					
DEMO SOUND	ON				OFF				
	OFF				ON				
COIN A	1COIN=1CREDIT					OFF	OFF		
	1COIN=2CREDIT					ON	OFF		
	2COIN=1CREDIT					OFF	ON		
	2COIN=3CREDIT					ON	ON		
COIN B	1COIN=1CREDIT							OFF	OFF
	1COIN=2CREDIT							ON	OFF
	2COIN=1CREDIT							OFF	ON
	2COIN=3CREDIT							ON	ON

DIP SWITCH [2]

		1	2	3	4	5	6	7	8
DIFFICULTY	NORMAL	OFF	OFF						
	EASY	ON	OFF						
	DIFFICULT	OFF	ON						
	MORE DIFFICULT	ON	ON						
PLAYERS COUNT	3			OFF	OFF				
	5			ON	OFF				
	2			OFF	ON				
	1			ON	ON				
GAME VOICE	ON					OFF			
	OFF					ON			
VASARA STOCK	2						OFF		
	3						ON		
SUBTITLES	ON							OFF	
	OFF							ON	



*出荷時の設定は、SW 1・2ともに全てOFFです。

CONNECTOR DIAGRAM

SOLDER SIDE	NO,	NO,	PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
-----	H	7	-----
COIN COUNTER 2	J	8	COIN COUNTER 1
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P A BUTTON	Z	22	1P A BUTTON
2P B BUTTON	a	23	1P B BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

CONTROL PANEL

DIP SW POSITION

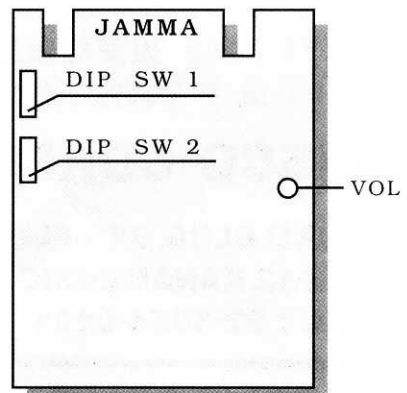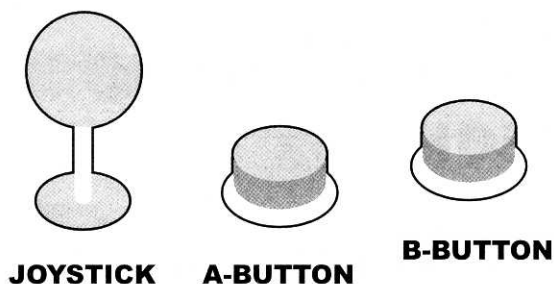

バ サ ラ
婆 娑 羅 2

製造・開発元

株式会社 ビスコ <http://www.visco.co.jp>

〒171-0043 東京都豊島区要町3-12-12 大宏ビル3F

TEL : 03-3554-0121 FAX : 03-3554-0150

VISCO CORPORATION

TAIKO BLDG.,3RD FLOOR,

3-12-12,KANAME-CHO,TOSHIMA-KU TOKYO 171-0043,JAPAN

TEL : 03-3554-0121 FAX : 03-3554-0150