

This document has been downloaded from:



The largest resource for amusement machines
documentation on the world wide web!



FLIPPERSPILL.COM

ZING ZING ZIP

ジン ジン ジップ

取扱説明書 Service Manual




TECMO

エッジコネクタ●Edge Connector

●JAMMA規格


SOLDER SIDE(半田面)	PIN NO.	PARTS SIDE(部品面)
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
	E 5	
+12V	F 6	+12V
	H 7	
COIN COUNTER 2	J 8	COIN COUNTER 1
COIN L. OUT 2	K 9	COIN L. OUT 1
SPEAKER (-)	L 10	SPEAKER (+)
	M 11	
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SW	R 14	VIDEO GND
	S 15	
COIN IN 2	T 16	COIN IN 1
2P START	U 17	1P START
2P CONTROL UP	V 18	1P CONTROL UP
2P CONTROL DOWN	W 19	1P CONTROL DOWN
2P CONTROL LEFT	X 20	1P CONTROL LEFT
2P CONTROL RIGHT	Y 21	1P CONTROL RIGHT
2P PUSH 1 (FIRE)	Z 22	1P PUSH 1 (FIRE)
2P PUSH 2 (BOMB)	a 23	1P PUSH 2 (BOMB)
	b 24	
	c 25	
	d 26	
GND	e 27	GND
GND	f 28	GND

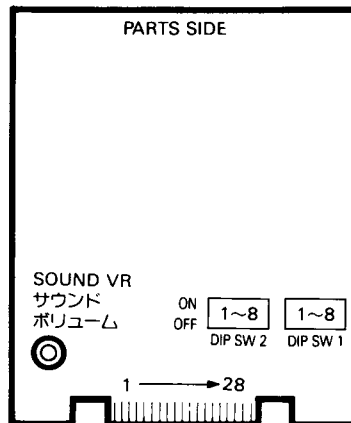

* Ensure all connection listed above Blanks shows N.C.

コントロールパネル

JOYSTICK LEVER.....8 directions
ジョイスティックレバー8方向

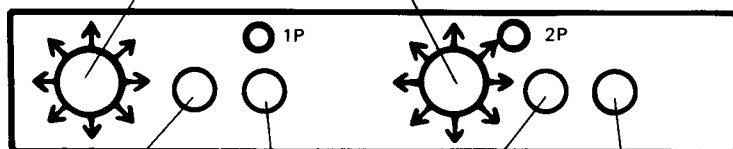

電源 POWER SOURCE
+5V.....5A
+12V.....1A
(AF Amp. BTL System)

※注意——+5VはPCB上の値です。

Caution——The power supply should be exactly 5V on this P.C.B.

ディップスイッチ●Dip Switch

[illegible][illegible]