


# NEO·GEO<sup>®</sup>

SERVICE  
MANUAL

MV-1

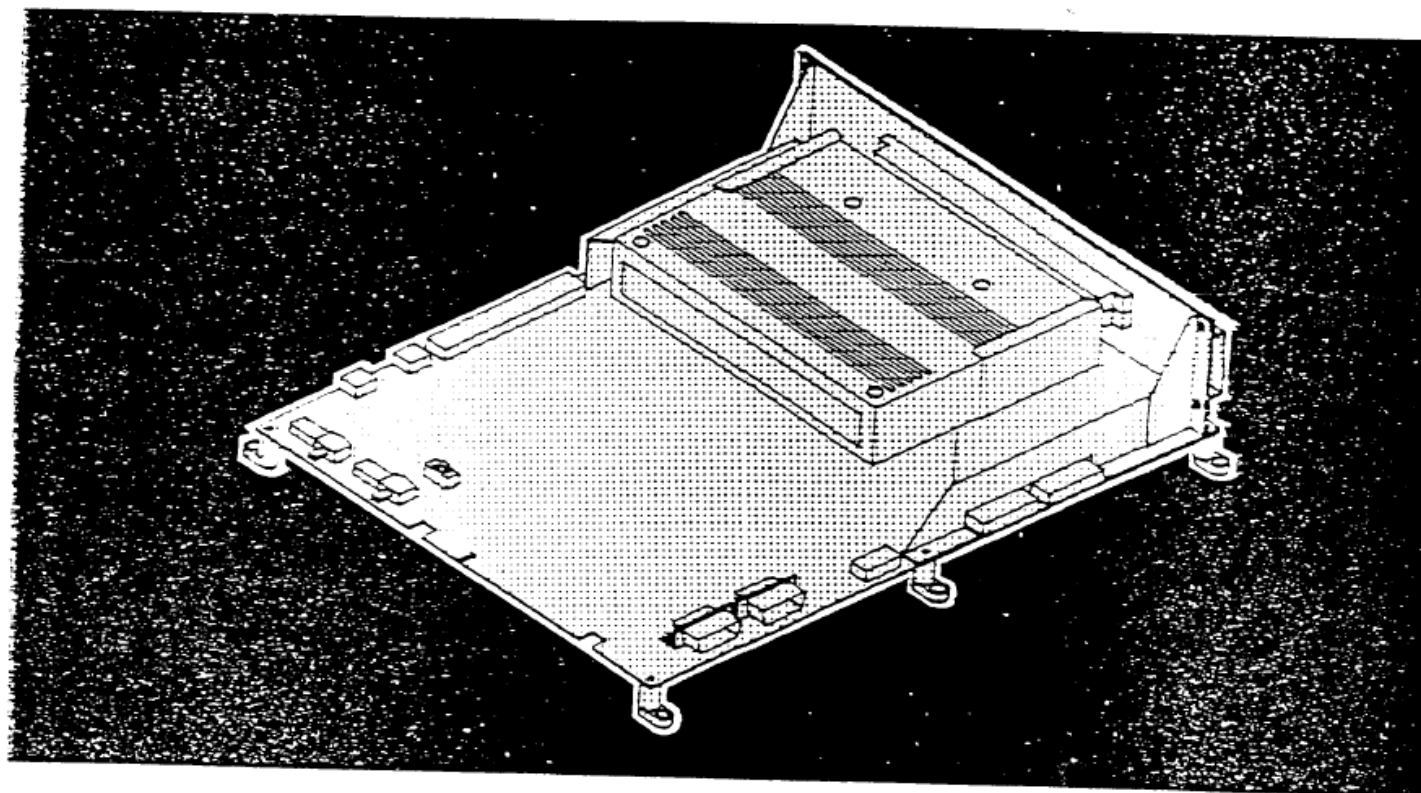

This document has been downloaded from:




FLIPPERSPILL.COM

**SNK**


# OMV1 MAIN HARNESS

SOLDER SIDE	PIN #		PART SIDE
G N D	A	1	G N D
G N D	B	2	G N D
+ 5V	C	3	+ 5V
+ 5V	D	4	+ 5V
	E	5	
+ 12V	F	6	+ 12V
KEY	H	7	KEY
COIN COUNTER2	J	8	COIN COUNTER1
COIN LOCKOUT2	K	9	COIN LOCKOUT1
SPEAKER (-)	L	10	SPEAKER (+)
AUDIO (GND)	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	TEST SW
COIN SW2	T	16	COIN SW1
START SW2	U	17	START SW1
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P PUSH1	Z	22	1P PUSH1
2P PUSH2	a	23	1P PUSH2
2P PUSH3	b	24	1P PUSH3
2P PUSH4	c	25	1P PUSH4
	d	26	DATA INPUT SW
G N D	e	27	G N D
G N D	f	28	G N D

This is for monaural setting.

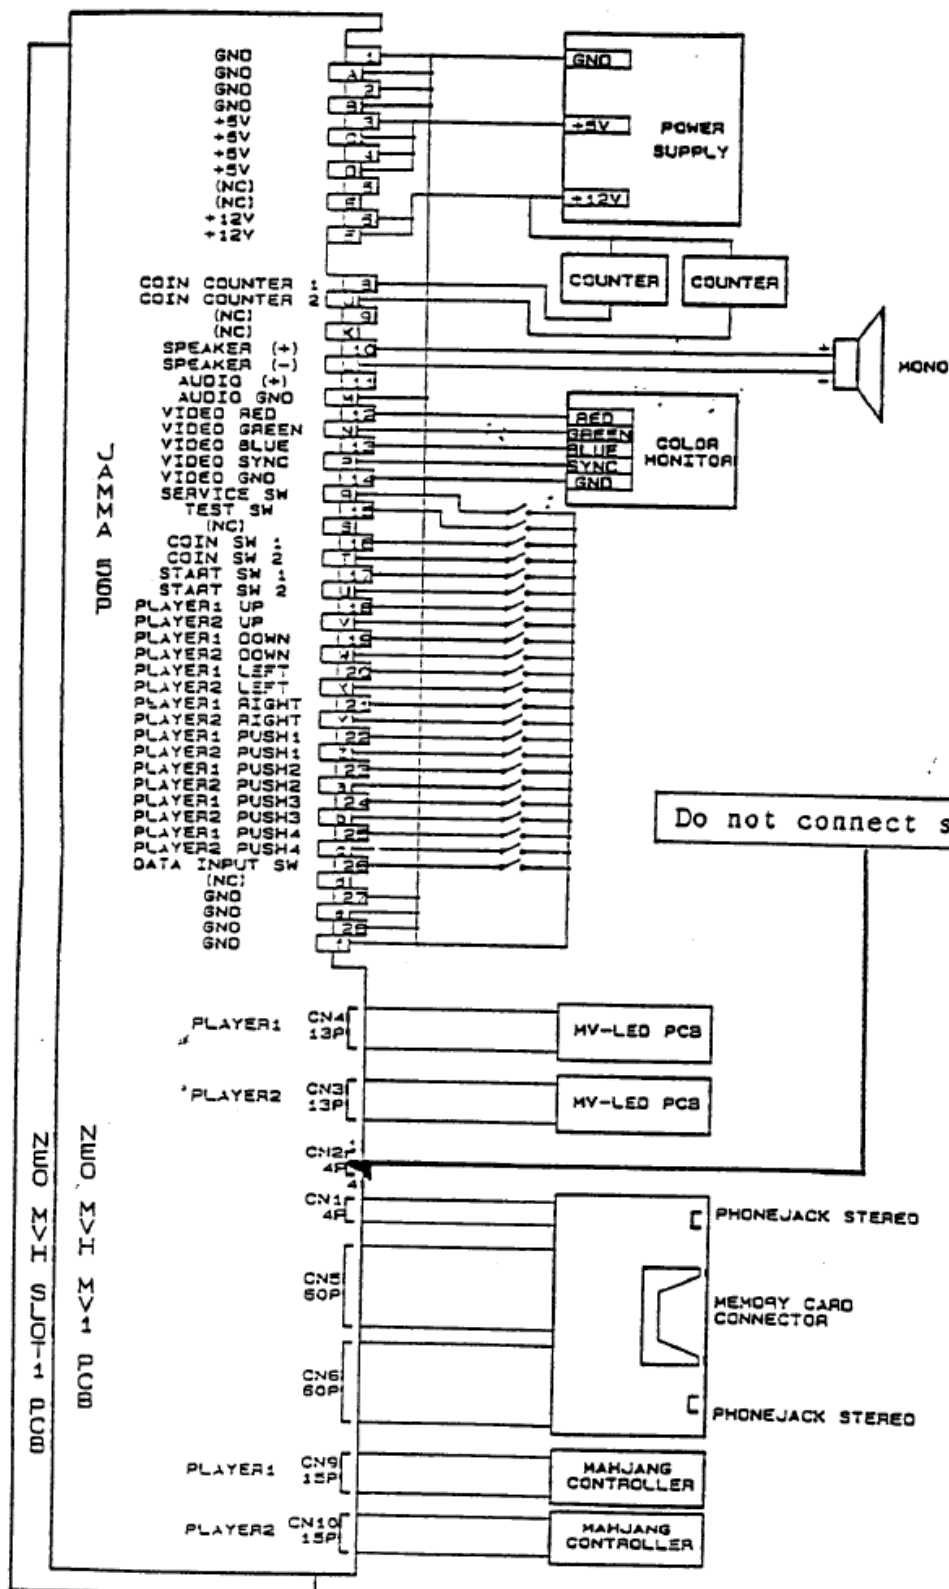

Set the switch on PCB on monaural position.

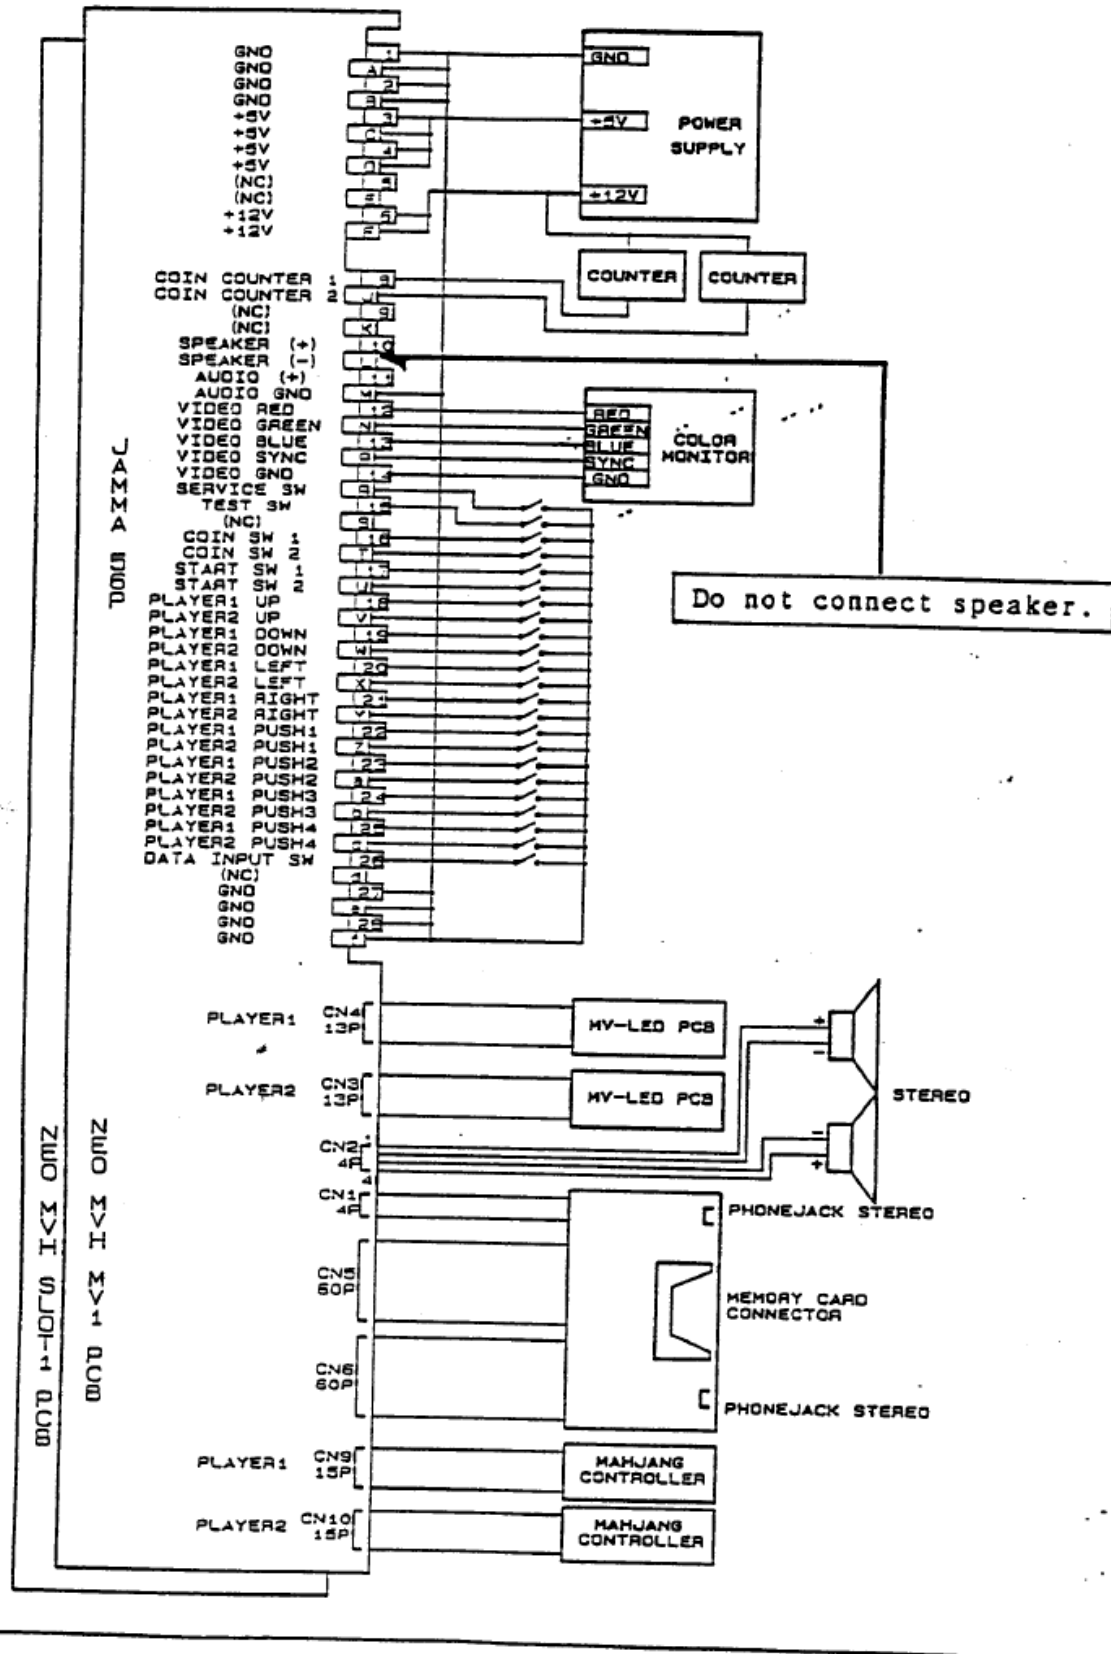

Set the switch on PCB on stereo position.