

SUBJ: Drop Target Replacement Procedure for our New 1-, 4- & 7-Bank Drop Target Assemblies


We have designed a **new Drop Target Assembly** (SPI Part N⁰: 500-6345-XX Series) which is currently being used in **Striker Extreme** (4-Bank) and our latest game **Sharkey's Shootout** (1-Bank & 7-Bank). To shorten the learning curve, we have listed the procedure for replacing the targets below. The unit is extremely well built and solid and will reduce the number of service calls and maintenance involved with Drop Target Assemblies. Targets are still in that "wear-part" category so we felt it important to highlight this procedure. Please *phone* or *eMail* with any questions or comments at

the below numbers or address.

Drop Target Replacement Procedure

(on a 1-, 4- or 7-Bank Drop Target 500-6345-XX Series Only)

- 1. DISCONNECT POWER AND REMOVE UNIT FROM PLAYFIELD.
- 2. REMOVE RED-MARKED SCREWS (FRONT & BACK AT TOP)
- 3. REMOVE TRIP COIL MOUNTING BRACKET (TOP PLATE).
- 4. REMOVE DROP TARGET SPRING. (REMOVAL OF COIL HOUSING BRACKET
- (3 SCREWS), WILL ONLY BE NECESSARY TO GAIN ACCESS TO HIDDEN SPRINGS).
- 5. REMOVE DROP TARGET FROM TOP END.
- 6. REASSEMBLE IN REVERSE ORDER.

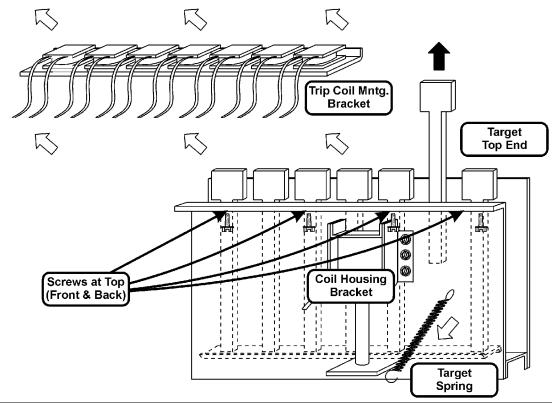

• 2020 Janice Avenue • Melrose Park, IL 60160 • Tel 708-345-7700 or Toll-Free (USA/Canada) 1-800-542-5377 • Fax 708-345-7889 •