


This document has been downloaded from:



The largest resource for amusement machines
documentation on the world wide web!



FLIPPERSPILL.COM

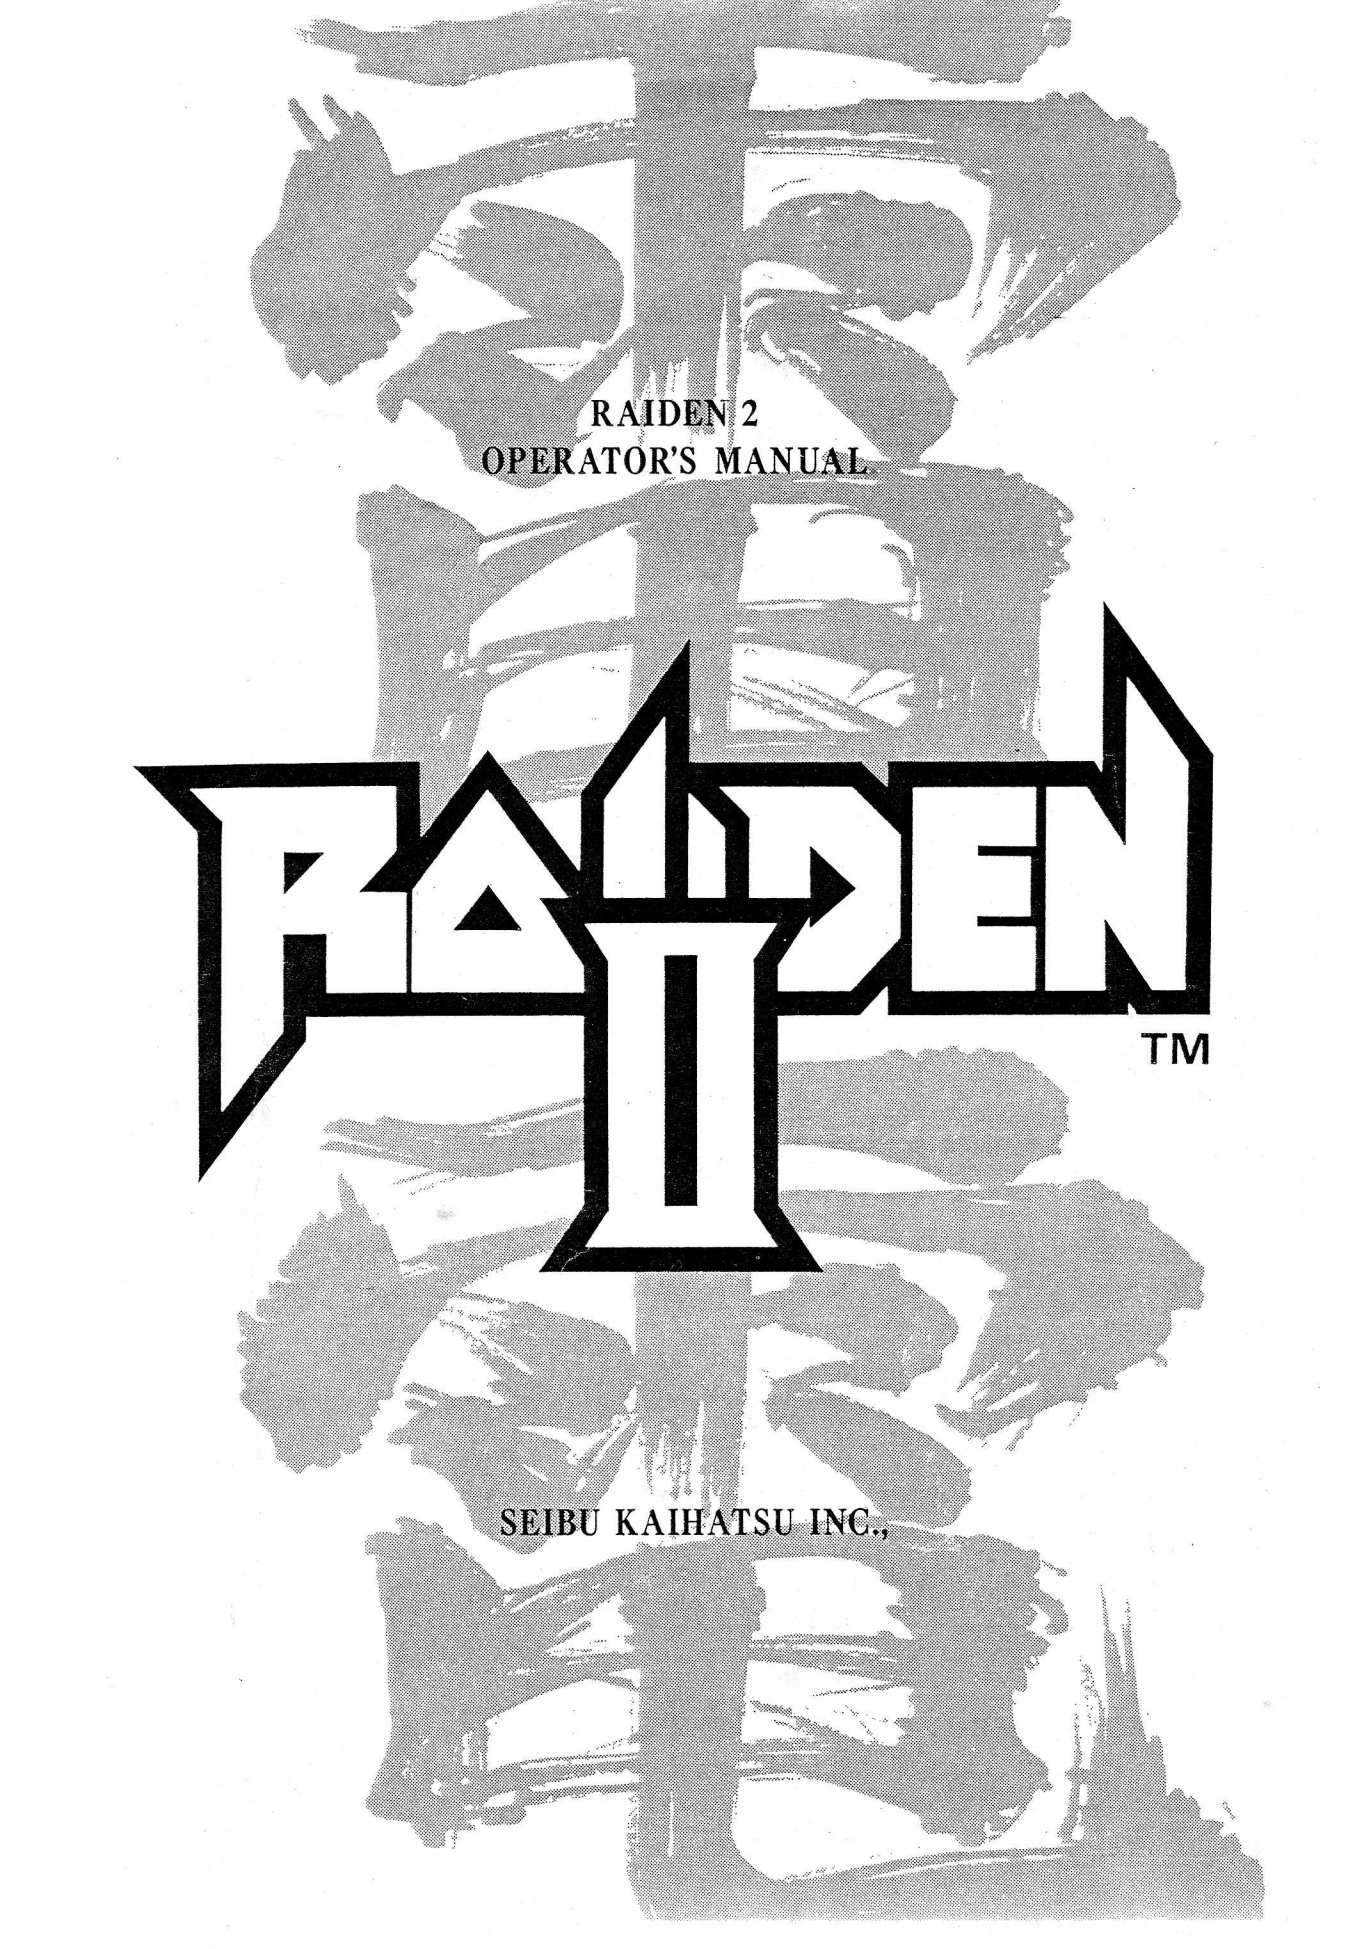

RAIDEN 2
OPERATOR'S MANUAL

RAIDENTM

SEIBU KAIHATSU INC.,

雷電2

取扱説明書

●仕様

○エッジコネクタ EDGE CONNECTOR


SOLDER SIDE (半田面)	NO	NO	PARTS SIDE (部品面)
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN IN 2	T	16	COIN IN 1
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P PUSH 1	Z	22	1P PUSH 1
2P PUSH 2	a	23	1P PUSH 2
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

○JAMMA規格 JAMMA STANDARD

○タテ画面 VERTICAL SCREEN


○コントロールパネル CONTROL PANEL

8Way Joystick

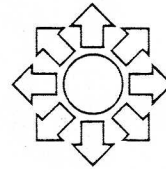

PUSH 1

SHOT
(ショット)



PUSH 2

BOMB
(ボンバー)



○電源 POWER SOURCE

+5V.....5A

+12V.....1A

(PARTS SIDE)

VOL

JAMMA

DIP 2

DIP 1

雷電2 DIPSW表

[illegible][illegible]

注意事項

1. PCボードの取り付け、取り外しは必ず電源を切ってから行って下さい。
2. 本ボードに張ってあるシリアルナンバーシールを剥がした場合や、無断で改造した場合には、故障に際して保障期間内であっても有償又は対象外となります。
3. 回路は一部バッテリーバックアップされており、テスターなどで導通検査などをするとショートの原因になりますので絶対に御止め下さい。また絶対にバッテリーは外さないで下さい。
4. PCボードを輸送する際には、スポンジやエアキャップなどで包み、段ボール箱などに入れ強い衝撃を加えないようご注意ください。

SEIBU KAIHATSU INC.,
有限会社 **セイブ開発**

〒101 東京都千代田区三崎町2-20-1

2-20-1 Misaki-Cho Chiyoda-Ku, Tokyo 101

TEL.03(3238)9169

FAX.03(3238)9187