

This document has been downloaded from:



The largest resource for amusement machines
documentation on the world wide web!



FLIPPERSPILL.COM

INSTRUCTION MANUAL



DATA EAST USA, INC.

470 GIANNI ST., SANTA CLARA, CALIFORNIA 95054

Telephone: (408) 727-4490 Telex: 172163 DATA EAST SNTA

780-0019-00

WARNING

This equipment generates and uses radio frequency energy and if not installed and used properly, i.e., in strict accordance with the instructions manual, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment.

Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

TABLE OF CONTENTS

<u>PAGE</u>	
1	Game Play
2	Option Switch Settings
3	PCB Identification and Component Locations
4	COMMANDO Grounding Scheme
5	Main Harness Connections
6	56 Pin PCB Edge Connector Signals
7	Filter/Adapter 44 Pin Edge Connector Signals
8	56 to 44 Pin Adapter & RFI Filter PCB
9	COMMANDO Inter Board Connector
10	Power Supply Circuit
11	KAGA Power Supply
14	Wells Gardner Monitor Schematic
15	NANA0 Monitor Schematic
16	Sanwa Monitor Schematic
18	PCB Schematic Set, 85605-C (3 sheets)
21	PCB Schematic Set, 85605-A (8 sheets)
29	Custom Chip Pinouts
30	PCB Schematic Set, 85605-B (6 sheets)
36	Limited Warranty Statement

COMMANDO[©]

GAME PLAY

YOU ARE ABOUT TO BEGIN A HIGHLY SECRET MISSION

You are a crack soldier with special training. You have been given a highly secret mission, and are about to enter into fierce guerrilla warfare! The mission is to annihilate the enemy and to rescue important captives. To do this you must destroy the enemy base, which is said to be impregnable.

The battles you will fight take place in several areas requiring various attack techniques. Your weapons consist of a machine gun with unlimited shots, and a limited supply of hand grenades, which you may replenish by taking from the enemy.

GOOD LUCK!

- * Use JOYSTICK to maneuver the soldier.
- * Use RIGHT BUTTON to fire Machine gun.
- * Use LEFT BUTTON to hurl hand grenades.
- * Dodge all bullets and grenades. Do not collide with enemy soldiers!
- * Destroy as many of the enemy as possible.
- * Pick up enemy grenades (one grenade per box) and use them against the enemy.
- * Extra 'lives' are awarded for exceeding certain scores.
- * Score higher points by destroying enemy leaders and enemy headquarters.
- * Score bonus points by rescuing captives.
- * The arch bridge is a dangerous spot! Watch for attacks from above!
- * Be careful of trucks and jeeps that may try to ram you!
- * Do not fall into rivers or ponds.
- * Trees, walls and other obstacles can be used for cover.

OPTION SWITCH SETTINGS


SWITCH A

[illegible]


SWITCH B

SWITCH 2		1	2	3	4	5	6	7	8
COCKTAIL TABLE		OFF							
UPRIGHT		ON							
JOYSTICK 2 WAY		ON	OFF						
JOYSTICK 1 WAY		ON	ON						
MONITOR REVERSE SWITCH				OFF ON					
DIFFICULTY	NORMAL DIFFICULT				OFF ON				
ATTRACT MODE	SOUND ON SOUND OFF					OFF ON			
BONUS 'LIFE'	10,000 & after 50,000						OFF	OFF	OFF
	10,000 & after 60,000						ON	OFF	OFF
	20,000 & after 60,000						OFF	ON	OFF
	20,000 & after 70,000						ON	ON	OFF
AWARD	30,000 & after 70,000						OFF	OFF	ON
	30,000 & after 80,000						ON	OFF	ON
	40,000 & after 100,000						OFF	ON	ON
	NO BONUS LIVES GIVEN						ON	ON	ON

PCB IDENTIFICATION AND COMPONENT LOCATIONS

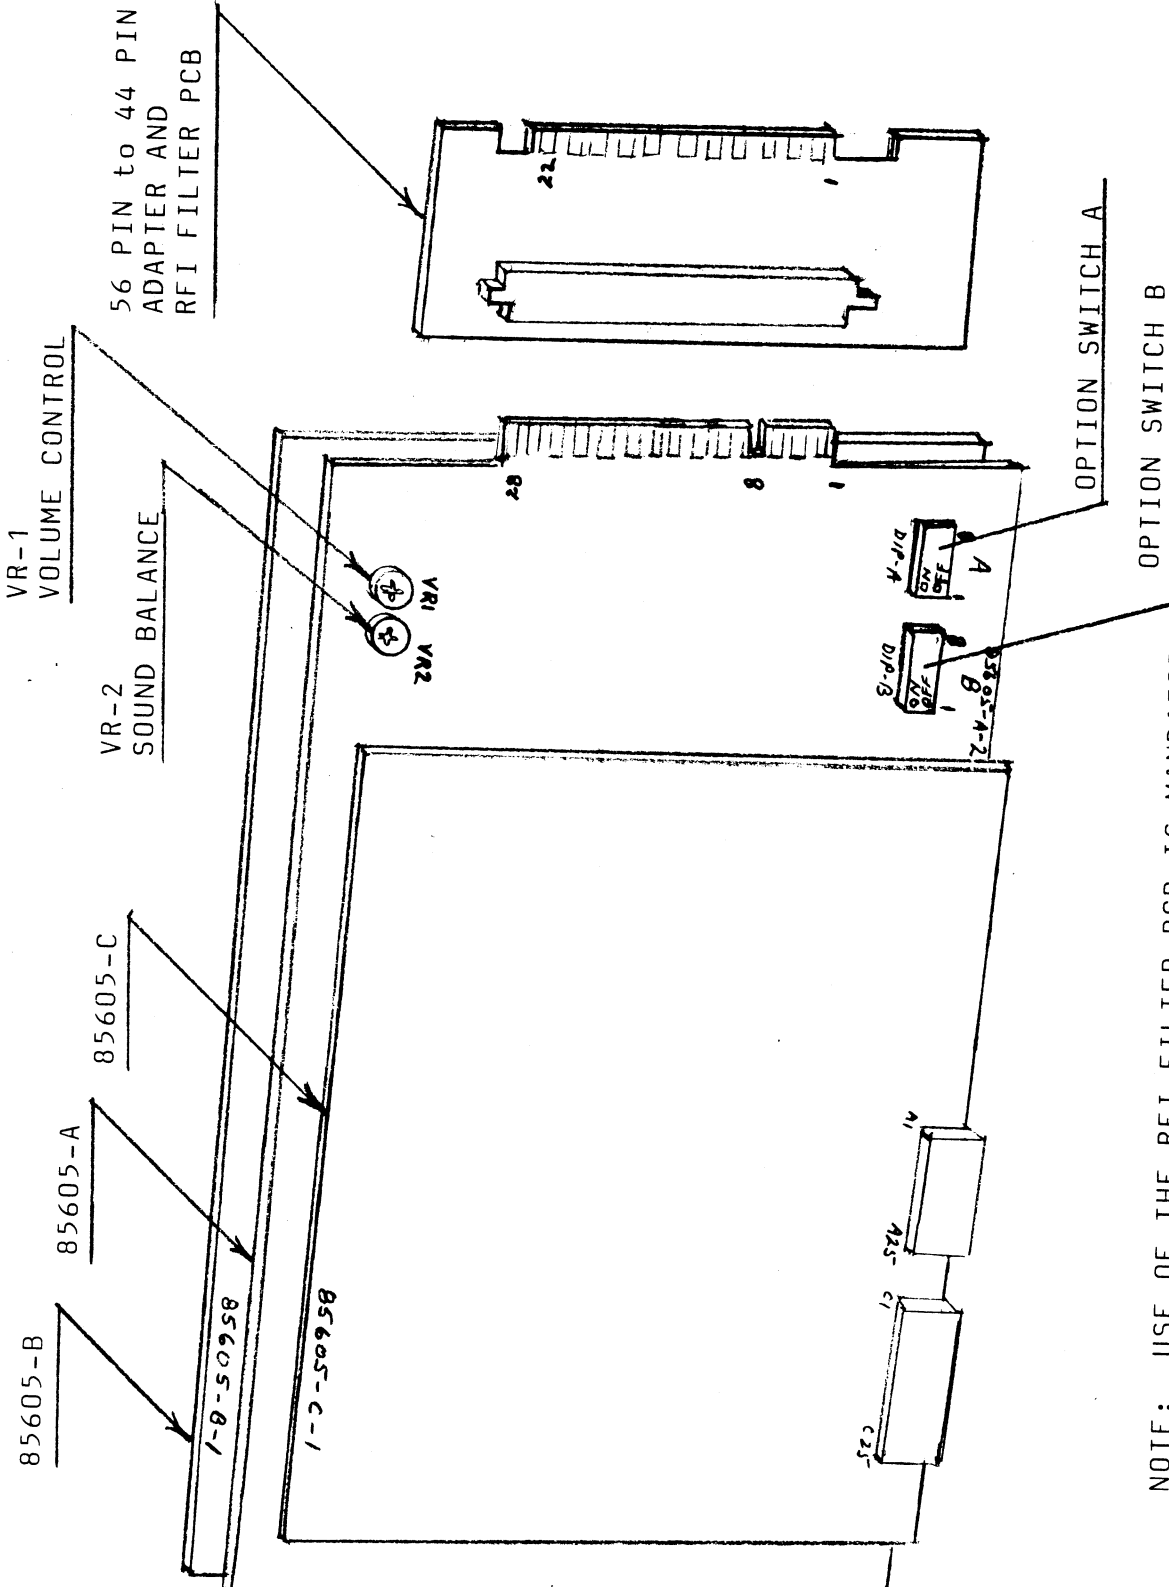

NOTE: USE OF THE RFI FILTER PCB IS MANDATORY IN ORDER TO PREVENT UNDESIRABLE RADIO FREQUENCY INTERFERENCE. DO NOT ATTEMPT TO BYPASS THIS FILTER! NO RFI SHIELD IS NECESSARY.

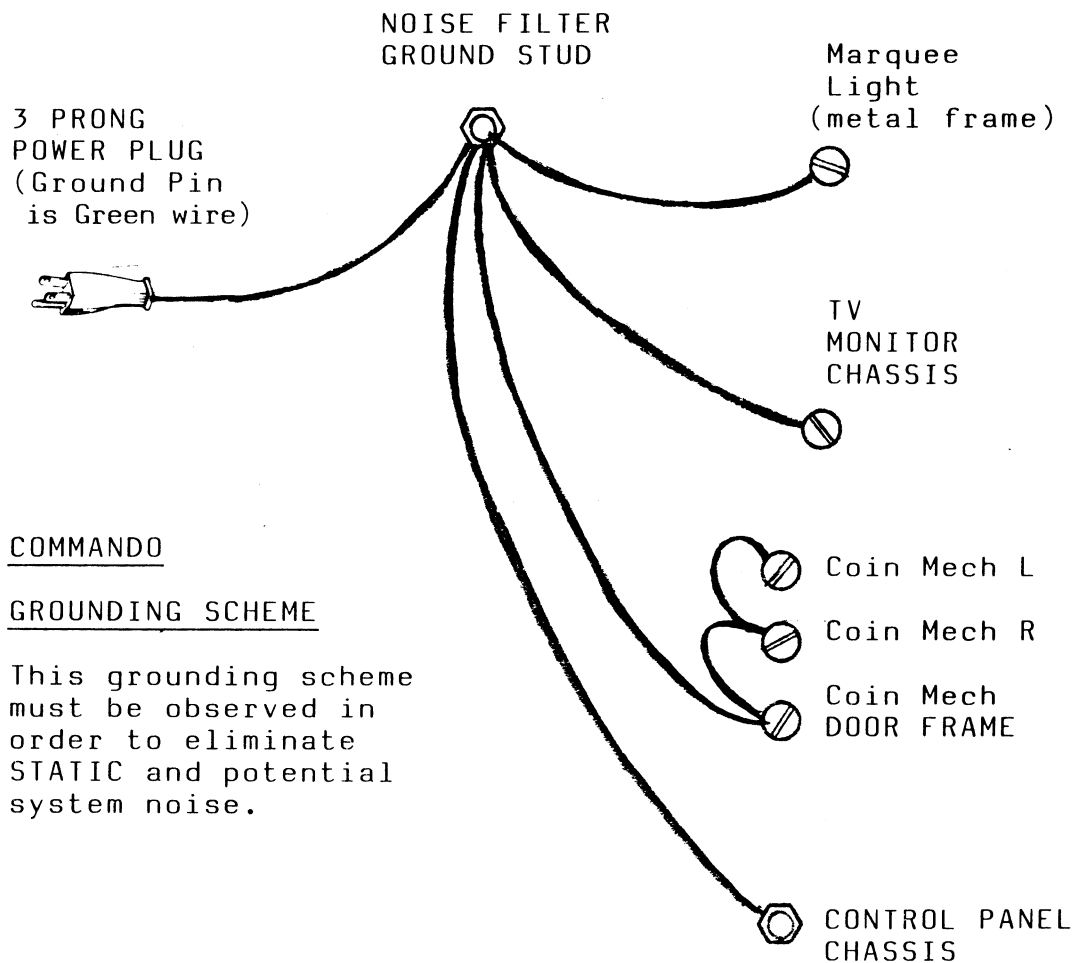

1. Ground wire of 3 prong power plug to be connected to Ground Stud on Noise Filter.
2. Marquee Light metal frame to be connected to ground stud on Noise Filter.
3. TV Monitor Chassis to be connected to ground stud on Noise Filter.
4. Coin Mech L, Coin Mech R and Coin Mech Door Frame to be connected to ground stud on Noise Filter.
5. Control Panel Chassis to be connected to ground stud on Noise Filter.
6. All connections must have good mechanical & electrical bond.
7. All connections to be made with #18 or larger green wire.

[illegible]

SOLDER SIDE			COMPONENT SIDE
GND	A	1	GND
GND	B	2	GND
+5	C	3	+5
+5	D	4	+5
ⓖ	E	5	Ⓡ
SYNC.	F	6	ⓑ
GND	H	7	GND
KEYWAY		J 8	KEYWAY
2P	SHOT 2	K 9	SHOT 2
	SHOT 1	L 10	SHOT 1
	UP 1	M 11	UP 1
	DOWN 1	N 12	DOWN 1
	LEFT 1	P 13	LEFT 1
	RIGHT 1	R 14	RIGHT 1
	GND	S 15	GND
2P SELECT	T 16	IP SELECT	
(D5)	U 17	(D4)	
COIN 2	V 18	COIN 1	
GND	W 19	GND	
	X 20		
	Y 21		
+12V COMMON	Z 22	+12V COMMON	
COUNTER 2	a 23	COUNTER 1	
SP ⊖	b 24	SP ⊕	
+12	c 25	+12	
GND (12V)	d 26	GND (12V)	
GND	e 27	GND	
GND	f 28	GND	

CONNECTOR TYPES


CR7E - 56DA - 3.96E : HIROSE
OF
1168 - 056 - 009 : KEL

EDGE CONNECTOR	85605—追資—I—1/2
----------------	----------------


C O M M A N D O

56 PIN TO 44 PIN ADAPTOR & RFI FILTER PCB MAIN HARNESS CONNECTIONS

a) CONNECTOR CR7E-44DA-3.96E (HIROSE) 3.96mm

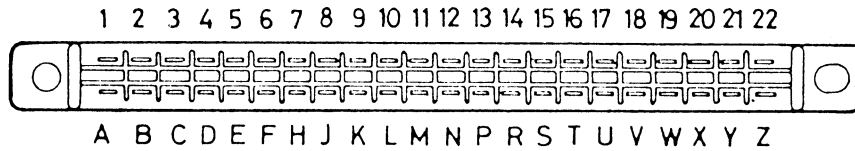

b) CONNECTOR 1168-044-009 (KEL) 3.96mm

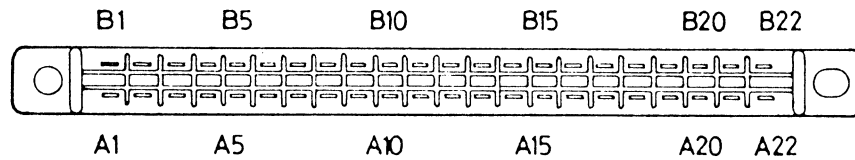


56 PIN to 44 PIN ADAPTER AND RFI FILTER PCB MAIN HARNESS CONNECTIONS

COMPONENT SIDE			SOLDER SIDE		
Pin Nos		Signal	Pin Nos		Signal
	KEL			KEL	
1	B1	1P DOWN	A	A1	2P DOWN
2	B2	1P UP	B	A2	2P UP
3	B3	1P LEFT	C	A3	2P LEFT
4	B4	1P RIGHT	D	A4	2P RIGHT
5	B5		E	A5	
6	B6		F	A6	
7	B7		H	A7	
8	B8		J	A8	
9	B9	1P SHOOT 1	K	A9	2P SHOOT 1
10	B10	1P SHOOT 2	L	A10	2P SHOOT 2
11	B11	1P GAME SELECT	M	A11	2P GAME SELECT
12	B12	COIN 1	N	A12	COIN 2
13	B13	COIN COUNTER 1	P	A13	COIN COUNTER 2
14	B14	TV.B	R	A14	TV.G
15	B15	SYNC.	S	A15	TV.R
16	B16		T	A16	
17	B17	SPEAKER +	U	A17	SPEAKER -
18	B18	+12V	V	A18	
19	B19	+5V	W	A19	+5V
20	B20	+5V	X	A20	+5V
21	B21	TV.GND	Y	A21	GND
22	B22	GND	Z	A22	GND

56 PIN to 44 PIN ADAPTER & RFI FILTER PCB

The COMMANDO game was developed by CAPCOM CO. Ltd., who also produces the PC Board. The game developer has made no provision for compliance with Federal Communication Commission Rules and Regulations regarding Radio Frequency Interference generated by Class A computing devices. In order to ensure compliance with those regulations, DATA EAST has designed adequate RFI Filtering into the adapter PC Board. This PCB also serves as the interface between the COMMANDO 56 pin edge connector and the DATA EAST 44 pin connector.

All signals and voltages entering or leaving the COMMANDO PCB pass through a 'PI' filter network, with the exception of the ground connections and the R,G,B, & Sync signals for the Monitor, which are routed through a ferrite bead, in order to suppress unwanted radiation. Refer to the pin-out tables on pages 6 and 7 for guidance in tracing signals through this Adapter/Filter PCB.

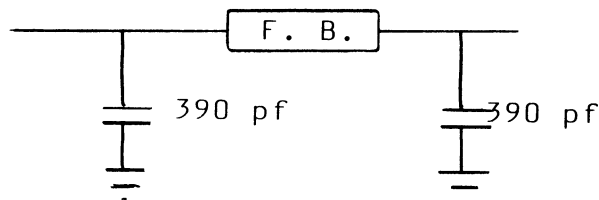

TYPICAL FILTER NETWORK

CN - 2


D		C
SCR B	1	SCR C
FLIP	2	SCR A
OH	3	6M
4H	4	4-3H
H2	5	H1
H8	6	H4
H32	7	H16
H128	8	H64
LHBL	9	H256
V2	10	V1
V8	11	V4
V32	12	V16
V128	13	V64
OBJ G	14	OBJ H
OBJ E	15	OBJ F
OBJ C	16	OBJ D
OBJ A	17	OBJ B
	18	HINIT
	19	
	20	
	21	
+ 5V	22	+ 5V
	23	
	24	
	25	

CN - 1


B		A
	1	DB0
	2	DB1
	3	DB2
	4	DB3
	5	DB4
GND	6	DB5
	7	DB6
	8	DB7
	9	
	10	
	11	GND
SCR G	12	
<u>CBCS</u>	13	AB0
<u>DBCS</u>	14	AB1
SC	15	AB2
SCR D	16	AB3
SCR E	17	AB4
SCR F	18	AB5
<u>ACL 2</u>	19	AB6
<u>OKOUT</u>	20	AB7
<u>AKB</u>	21	AB8
<u>RQB</u>	22	AB9
<u>BLCNTEN</u>	23	AB10
<u>WRB</u>	24	AB11
<u>RDB</u>	25	AB12

JOINT CONNECTOR

85605 - 連 貫 - 1 - 2/2

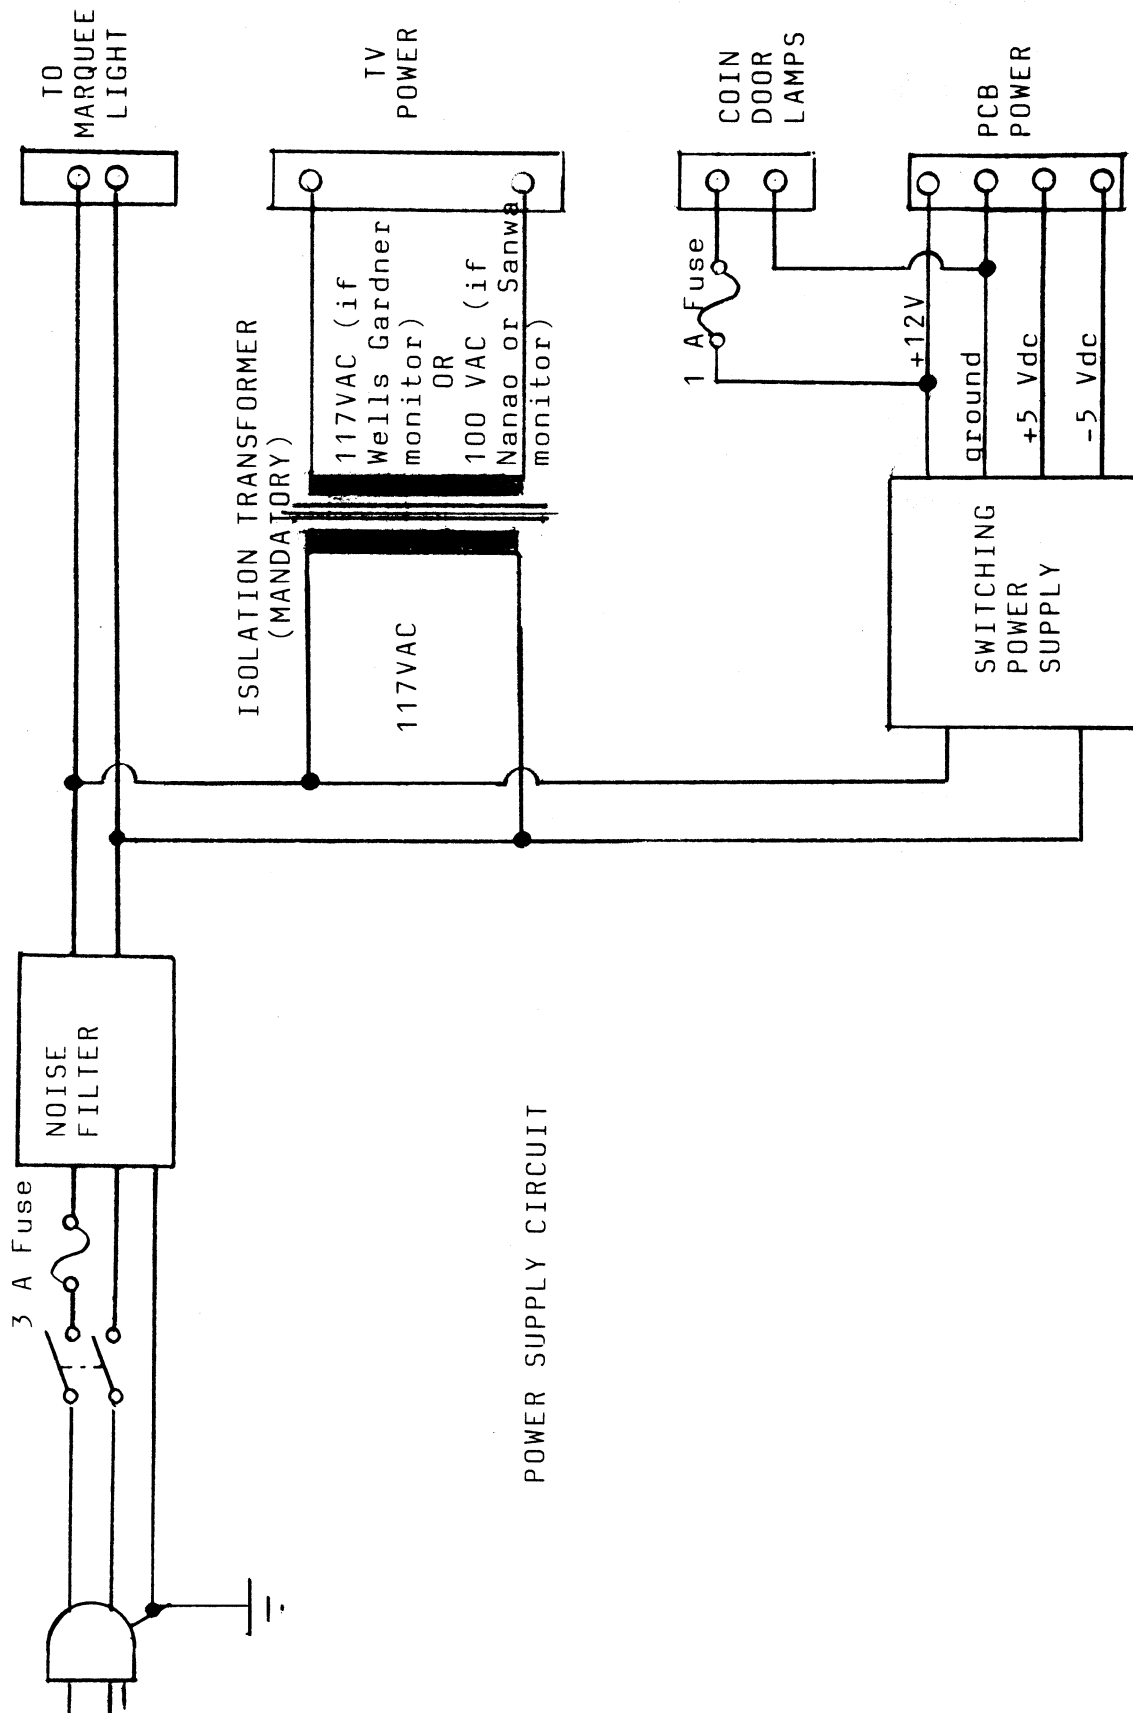

POWER SUPPLY CIRCUIT

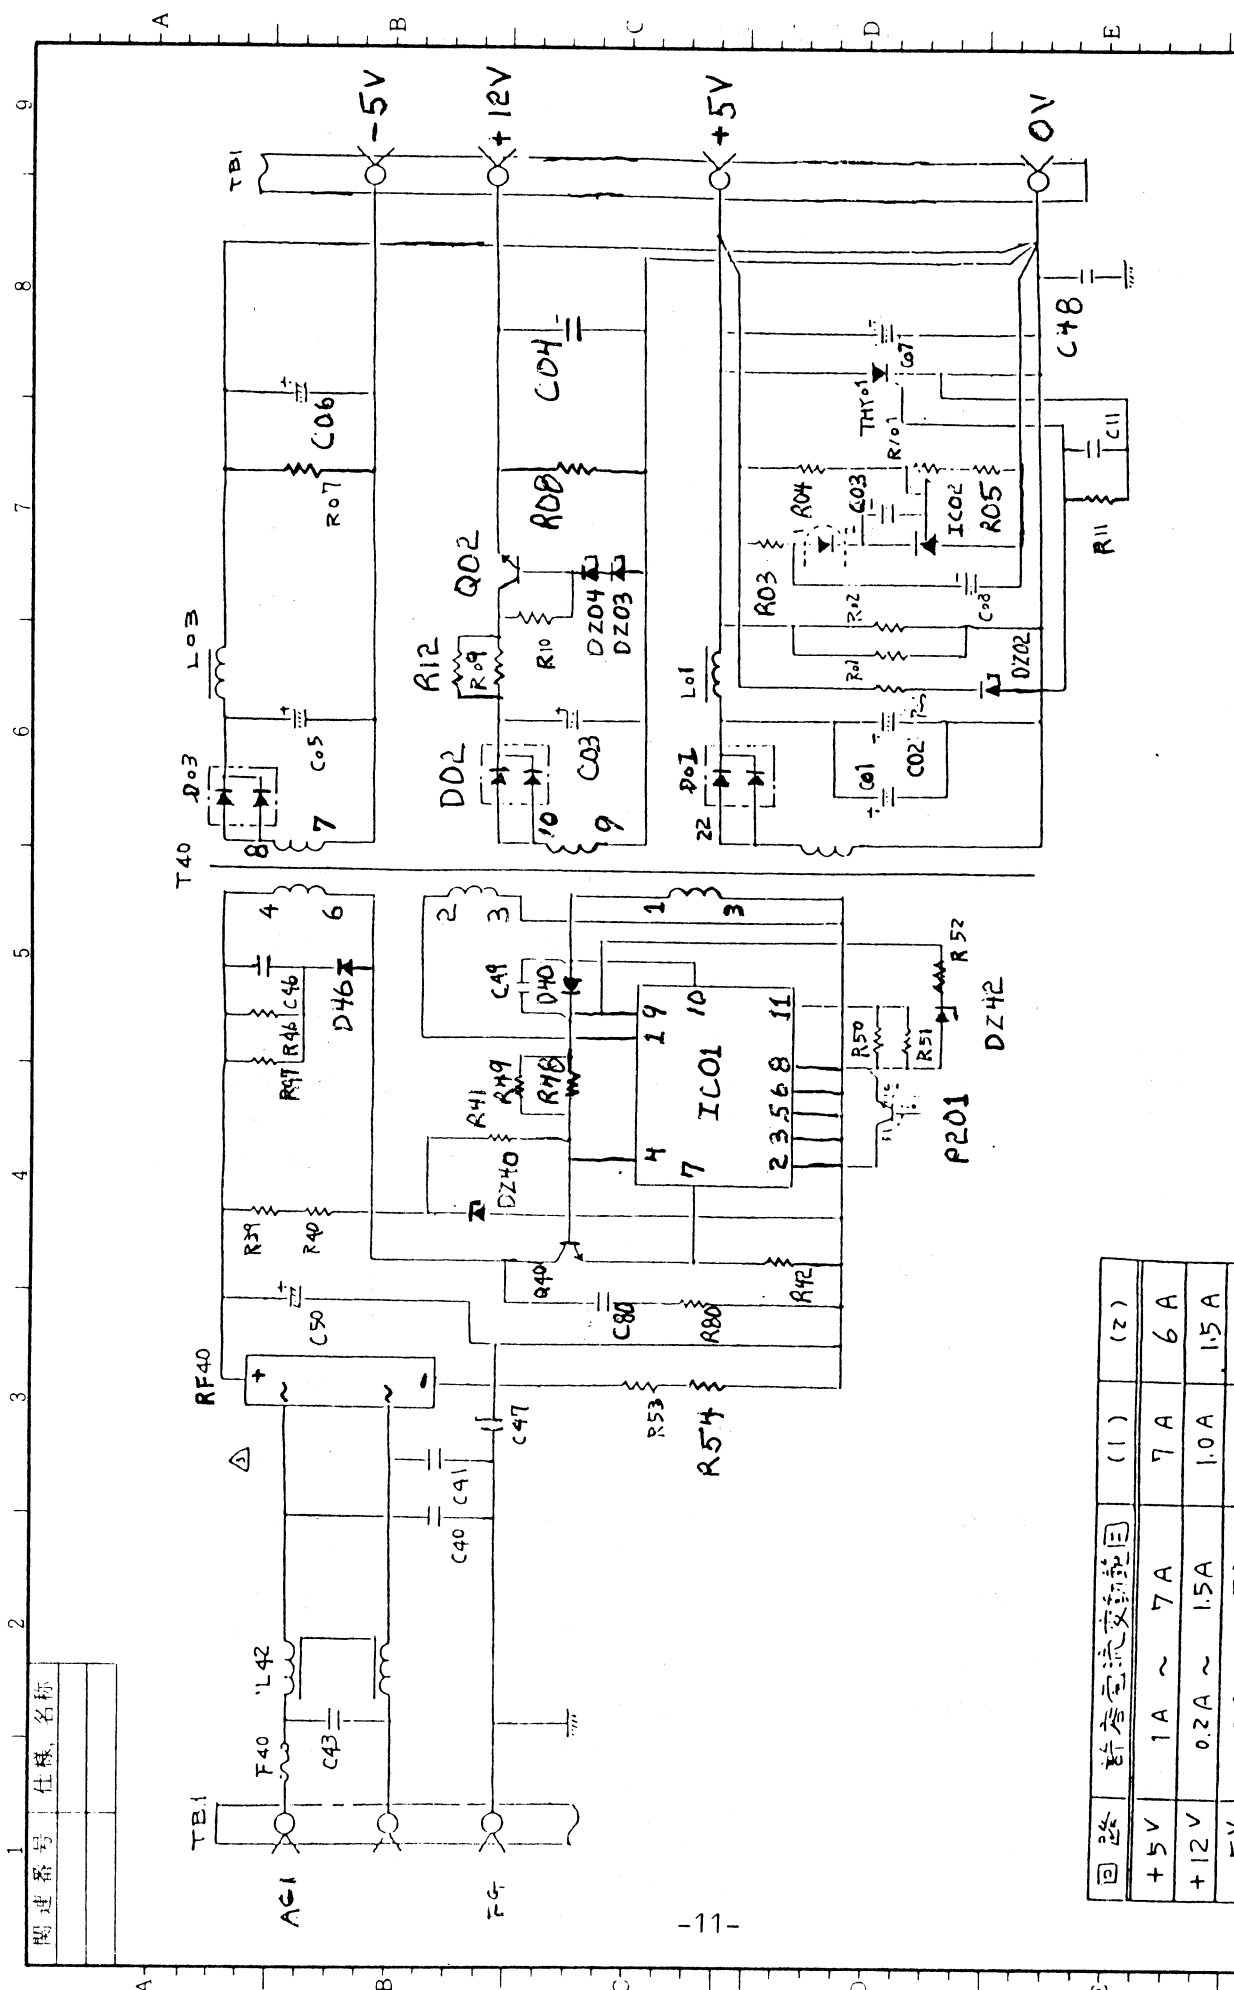

名称	KGD23SMKII-3ch
POWER SUPPLY	
図番	WM-830066

回路	許容電流変動範囲	(1)	(2)
+5V	1A ~ 7A	7A	6A
+12V	0.2A ~ 1.5A	1.0A	1.5A
-5V	0.2A ~ 0.5A	0.5A	0.5A

但し出力容量は Total 750W


C49は実装しない。

POWER SUPPLY Model KGD23SMK-II

Item	Parts Nos	Description	Specification	Q'ty	Manufacturer
1.	F40	Fuse	GHS 5	1	Nagasawa
2.	T40	Transformer		1	Shindengen
3.	L42	Common Mode Choke	UF327S 602YIRO	1	TDK
4.	Q40	Transistor	2SC3306	1	Toshiba
5.	RF40	Bridge Rectifier	S3WB 40	1	Shindengen
6.	D40	Diode	V19C	1	Hitachi
7.	D46	Diode	V19G	1	Hitachi
8.	DZ40	Zener Diode	HZ16-1	1	Hitachi
9.	IC01	HB IC	RHD01-2	1	Nichi-con
10.	PC01	Photo Coupler	PS 2018	1	Nichiden (NEC)
11.	C40, 41	Ceramic Capacitor	DE7090B 102KVAI 125V 1,000pf	2	Murata
12.	C47	Ceramic Capacitor	— ditto—	1	Murata
13.	C80	Ceramic Capacitor	DE0707B 681K 2KV DC 680p	1	Murata
14.	C42	Film Capacitor			
15.	C43	Film Capacitor	QXM2G 104KT 400V 0.1 μ f	1	Nichi-con
16.	C46	Film Capacitor	ECQ-E2 104KS 200V 0.1 μ f	1	Matsushita
17.	C48	Film Capacitor	ECQ-E6 473KZ 400V 0.047 μ f	1	Matsushita
18.	C50	Electrode Capacitor	LJA2D471 THSCBV 200V 470 μ f	1	Nichi-con
19.	R37, 40	Resistor	ERG-1SJ 393H	2	Matsushita
20.	R47, 46	Resistor	ERG-2SJ 223H	2	Matsushita
21.	R48, 49	Resistor	ERG-3SJ 560H	2	Matsushita
22.	R80	Resistor	ERG-2SJ 330H	1	Matsushita
23.	R42	Metal Plate Resistor	MFC 70 0.22 ohm	1	Fukushima Futaba
24.	R53, 54	Coil Resistor	MNS 05N 1ROJ	2	Micron
25.	R41	Carbon Resistor	1/4W 10K ohm	1	
26.	R50	Carbon Resistor	1/4W 680 ohm	1	
26.	R51	Carbon Resistor	1/4W 12K ohm	1	
28.	R52	Carbon Resistor			
29.	L01	Choke	RD1113A 3J 3uH 10A	1	Hokkoh
30.	L03	Choke	RD810A 3F 3uH 5A	1	Hokkoh
31.	Q02	Transistor	2SD1022 or 2SD1308	1	Shindengen
32.	D01	Diode	ESAC 83-004	1	Fuji Denki
33.	D02	Diode	5CH2M or ESAC25-020	1	Fuji Denki or NEC
34.	D03	Diode	— ditto —	1	Fuji Denki
35.	DZ02	Zener Diode	HZ 6B-2	1	Hitachi
36.	DZ03	Zener Diode	HZ 12B-1L	1	Hitachi
37.	THY01	Thyristor	5PIM or SF5B41	1	NEC or Toshiba
38.	IC02	I.C.	TL431 CLP	1	T.I.
39.	C01, 02	Capacitor	SXA 16VB 2200	2	Nichi-Chemi
40.	C03, 05	Capacitor	CEUSM 1V 471 35V 470 μ f	2	Nichi-con

Item	Parts Nos	Description	Specification	Q'ty	Manufacturer
41.	C04	Capacitor	CEUSM 1E 331 25V 330 μ F	1	Nichi-con
42.	C07, 06	Capacitor	CEUSM 1E 331 25V 330 μ f	2	Nichi-con
43.	C08	Capacitor	CEUSM 1H 010	1	Nichi-con 50V 1 μ f
44.	C09	Capacitor	CEUSM 1V 4R7 35V 4.7 μ f	1	Nichi-con
45.	C11	Film Capacitor	TDY1H/2A 104K 50V 0.1 μ f	1	Nichi-con
46.	R01, 13	Resistor	ERG 3SJ 680H	2	Matsushita 3W 68 Ω
47.	R08	Resistor	ERG3SJ 271H	1	Matsushita 3W 270 Ω
48.	R09	Resistor	ERG 2SJ R68 2W 0.68 ohm	1	Matsushita
49.	R10	Resistor	ERG 1SJ 271 1W 270 ohm	1	Matsushita
50.	RV01	Volume	EVM38GA 00B52 500 ohm	1	Matsushita
51.	R03	Carbon Resistor	1/4W 68 ohm	1	
52.	R04, 11	Carbon Resistor	1/4W 560 ohm	2	
53.	R05	Carbon Resistor	1/4W 390 ohm	1	
54.	R06	Carbon Resistor	1/4W 15 ohm	1	
55.	R02				
56.		P.C. Board		1	
57.	TB1	Terminal Strip		1	
58.		Terminal	Faston	7	

19" COLOR GAME MONITOR SCHEMATIC DIAGRAM

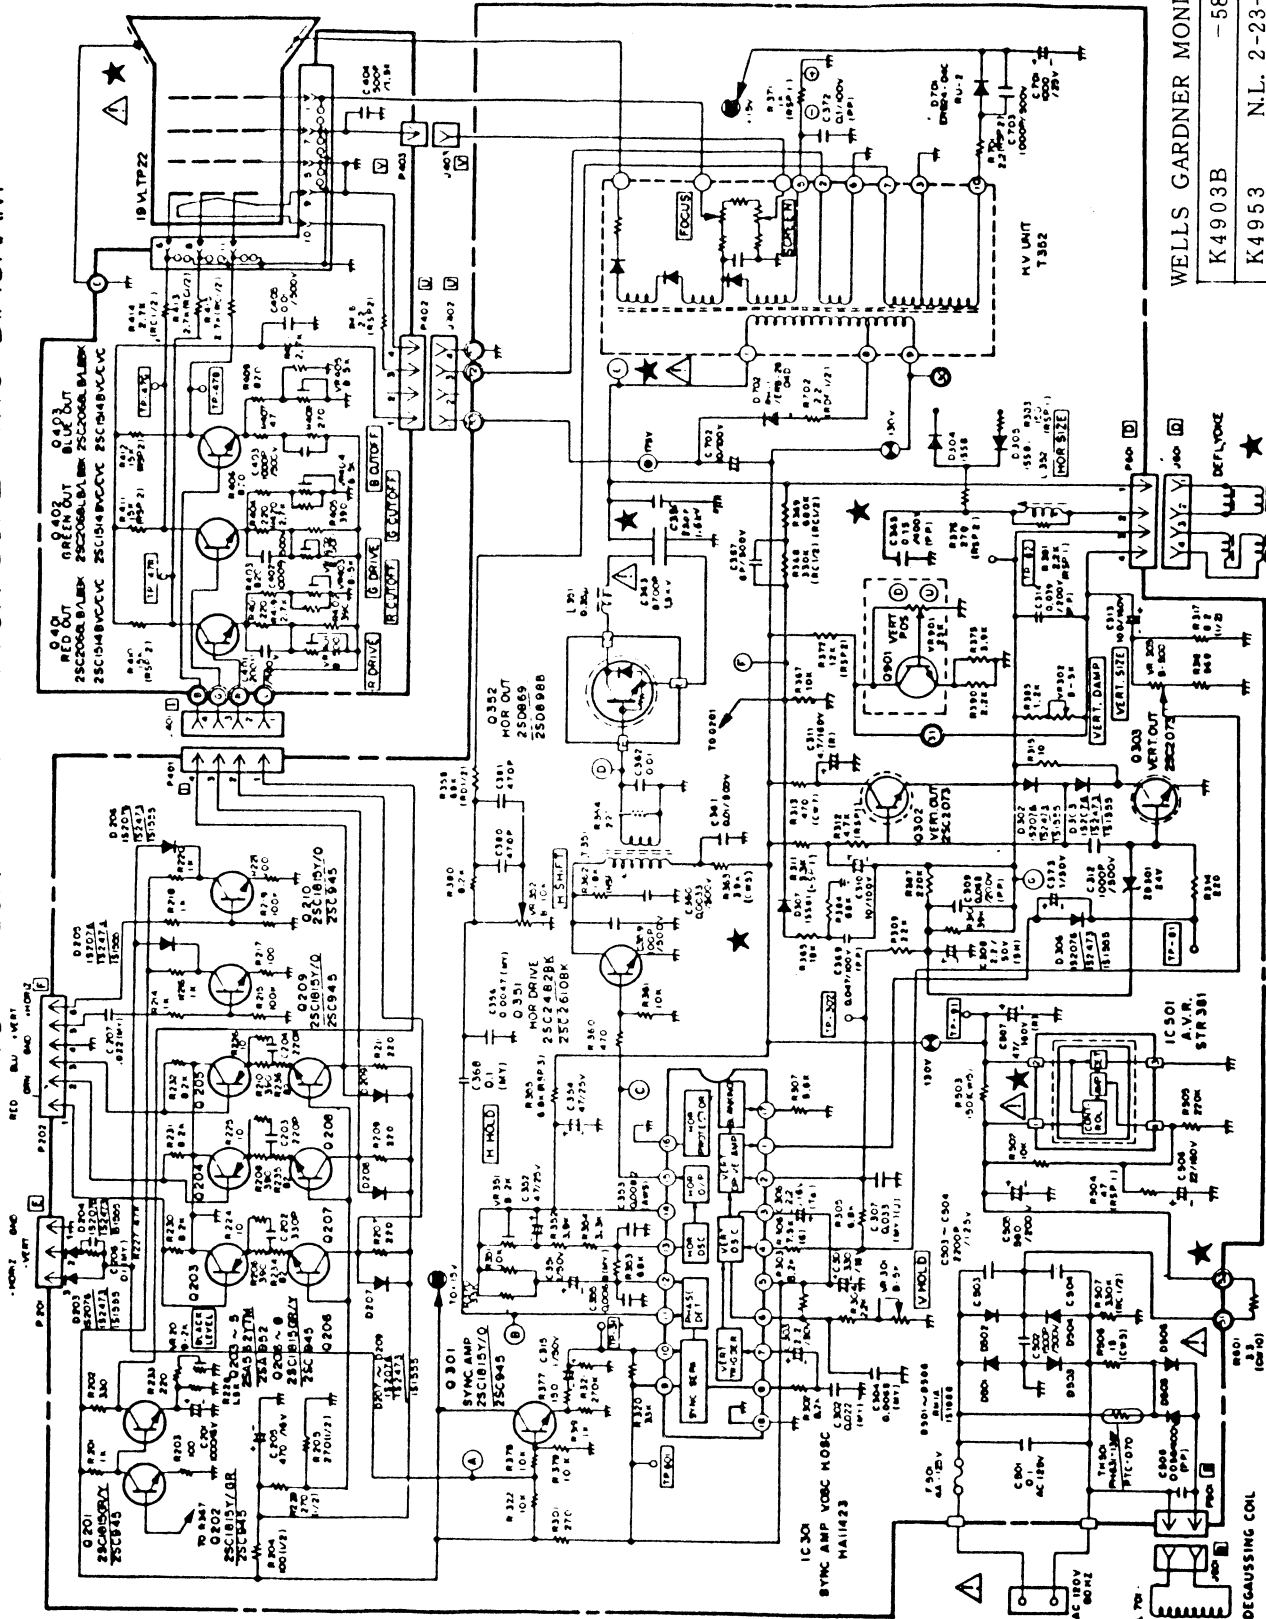

WELLS GARDNER MONITOR
K4903B -5844
K4953 N.L. 2-23-84

20" Color Display

510UKB22
or 510NJB22

ASSY ERASE
UNIT

ASSY CRT BOARD

ASSY RGB MAIN

Q301 2SC2611
VIBR. OUT (1)

Q302 2SC2611
VIBR. OUT (2)

Q303 2SC2611
VIBR. OUT (3)

Q304 2SC2611
VIBR. OUT (4)

Q305 2SC2611
VIBR. OUT (5)

Q306 2SC2611
VIBR. OUT (6)

Q307 2SC2611
VIBR. OUT (7)

Q308 2SC2611
VIBR. OUT (8)

Q309 2SC2611
VIBR. OUT (9)

Q310 2SC2611
VIBR. OUT (10)

Q311 2SC2611
VIBR. OUT (11)

Q312 2SC2611
VIBR. OUT (12)

Q313 2SC2611
VIBR. OUT (13)

Q314 2SC2611
VIBR. OUT (14)

Q315 2SC2611
VIBR. OUT (15)

Q316 2SC2611
VIBR. OUT (16)

Q317 2SC2611
VIBR. OUT (17)

Q318 2SC2611
VIBR. OUT (18)

Q319 2SC2611
VIBR. OUT (19)

Q320 2SC2611
VIBR. OUT (20)

Q321 2SC2611
VIBR. OUT (21)

Q322 2SC2611
VIBR. OUT (22)

Q323 2SC2611
VIBR. OUT (23)

Q324 2SC2611
VIBR. OUT (24)

Q325 2SC2611
VIBR. OUT (25)

Q326 2SC2611
VIBR. OUT (26)

Q327 2SC2611
VIBR. OUT (27)

Q328 2SC2611
VIBR. OUT (28)

Q329 2SC2611
VIBR. OUT (29)

Q330 2SC2611
VIBR. OUT (30)

Q331 2SC2611
VIBR. OUT (31)

Q332 2SC2611
VIBR. OUT (32)

Q333 2SC2611
VIBR. OUT (33)

Q334 2SC2611
VIBR. OUT (34)

Q335 2SC2611
VIBR. OUT (35)

Q336 2SC2611
VIBR. OUT (36)

Q337 2SC2611
VIBR. OUT (37)

Q338 2SC2611
VIBR. OUT (38)

Q339 2SC2611
VIBR. OUT (39)

Q340 2SC2611
VIBR. OUT (40)

Q341 2SC2611
VIBR. OUT (41)

Q342 2SC2611
VIBR. OUT (42)

Q343 2SC2611
VIBR. OUT (43)

Q344 2SC2611
VIBR. OUT (44)

Q345 2SC2611
VIBR. OUT (45)

Q346 2SC2611
VIBR. OUT (46)

Q347 2SC2611
VIBR. OUT (47)

Q348 2SC2611
VIBR. OUT (48)

Q349 2SC2611
VIBR. OUT (49)

Q350 2SC2611
VIBR. OUT (50)

Q351 2SC2611
VIBR. OUT (51)

Q352 2SC2611
VIBR. OUT (52)

Q353 2SC2611
VIBR. OUT (53)

Q354 2SC2611
VIBR. OUT (54)

Q355 2SC2611
VIBR. OUT (55)

Q356 2SC2611
VIBR. OUT (56)

Q357 2SC2611
VIBR. OUT (57)

Q358 2SC2611
VIBR. OUT (58)

Q359 2SC2611
VIBR. OUT (59)

Q360 2SC2611
VIBR. OUT (60)

Q361 2SC2611
VIBR. OUT (61)

Q362 2SC2611
VIBR. OUT (62)

Q363 2SC2611
VIBR. OUT (63)

Q364 2SC2611
VIBR. OUT (64)

Q365 2SC2611
VIBR. OUT (65)

Q366 2SC2611
VIBR. OUT (66)

Q367 2SC2611
VIBR. OUT (67)

Q368 2SC2611
VIBR. OUT (68)

Q369 2SC2611
VIBR. OUT (69)

Q370 2SC2611
VIBR. OUT (70)

Q371 2SC2611
VIBR. OUT (71)

Q372 2SC2611
VIBR. OUT (72)

Q373 2SC2611
VIBR. OUT (73)

Q374 2SC2611
VIBR. OUT (74)

Q375 2SC2611
VIBR. OUT (75)

Q376 2SC2611
VIBR. OUT (76)

Q377 2SC2611
VIBR. OUT (77)

Q378 2SC2611
VIBR. OUT (78)

Q379 2SC2611
VIBR. OUT (79)

Q380 2SC2611
VIBR. OUT (80)

Q381 2SC2611
VIBR. OUT (81)

Q382 2SC2611
VIBR. OUT (82)

Q383 2SC2611
VIBR. OUT (83)

Q384 2SC2611
VIBR. OUT (84)

Q385 2SC2611
VIBR. OUT (85)

Q386 2SC2611
VIBR. OUT (86)

Q387 2SC2611
VIBR. OUT (87)

Q388 2SC2611
VIBR. OUT (88)

Q389 2SC2611
VIBR. OUT (89)

Q390 2SC2611
VIBR. OUT (90)

Q391 2SC2611
VIBR. OUT (91)

Q392 2SC2611
VIBR. OUT (92)

Q393 2SC2611
VIBR. OUT (93)

Q394 2SC2611
VIBR. OUT (94)

Q395 2SC2611
VIBR. OUT (95)

Q396 2SC2611
VIBR. OUT (96)

Q397 2SC2611
VIBR. OUT (97)

Q398 2SC2611
VIBR. OUT (98)

Q399 2SC2611
VIBR. OUT (99)

Q400 2SC2611
VIBR. OUT (100)

Q401 2SC2611
VIBR. OUT (101)

Q402 2SC2611
VIBR. OUT (102)

Q403 2SC2611
VIBR. OUT (103)

Q404 2SC2611
VIBR. OUT (104)

Q405 2SC2611
VIBR. OUT (105)

Q406 2SC2611
VIBR. OUT (106)

Q407 2SC2611
VIBR. OUT (107)

Q408 2SC2611
VIBR. OUT (108)

Q409 2SC2611
VIBR. OUT (109)

Q410 2SC2611
VIBR. OUT (110)

Q411 2SC2611
VIBR. OUT (111)

Q412 2SC2611
VIBR. OUT (112)

Q413 2SC2611
VIBR. OUT (113)

Q414 2SC2611
VIBR. OUT (114)

Q415 2SC2611
VIBR. OUT (115)

Q416 2SC2611
VIBR. OUT (116)

Q417 2SC2611
VIBR. OUT (117)

Q418 2SC2611
VIBR. OUT (118)

Q419 2SC2611
VIBR. OUT (119)

Q420 2SC2611
VIBR. OUT (120)

Q421 2SC2611
VIBR. OUT (121)

Q422 2SC2611
VIBR. OUT (122)

Q423 2SC2611
VIBR. OUT (123)

Q424 2SC2611
VIBR. OUT (124)

Q425 2SC2611
VIBR. OUT (125)

Q426 2SC2611
VIBR. OUT (126)

Q427 2SC2611
VIBR. OUT (127)

Q428 2SC2611
VIBR. OUT (128)

Q429 2SC2611
VIBR. OUT (129)

Q430 2SC2611
VIBR. OUT (130)

Q431 2SC2611
VIBR. OUT (131)

Q432 2SC2611
VIBR. OUT (132)

Q433 2SC2611
VIBR. OUT (133)

Q434 2SC2611
VIBR. OUT (134)

Q435 2SC2611
VIBR. OUT (135)

Q436 2SC2611
VIBR. OUT (136)

Q437 2SC2611
VIBR. OUT (137)

Q438 2SC2611
VIBR. OUT (138)

Q439 2SC2611
VIBR. OUT (139)

Q440 2SC2611
VIBR. OUT (140)

Q441 2SC2611
VIBR. OUT (141)

Q442 2SC2611
VIBR. OUT (142)

Q443 2SC2611
VIBR. OUT (143)

Q444 2SC2611
VIBR. OUT (144)

Q445 2SC2611
VIBR. OUT (145)

Q446 2SC2611
VIBR. OUT (146)

Q447 2SC2611
VIBR. OUT (147)

Q448 2SC2611
VIBR. OUT (148)

Q449 2SC2611
VIBR. OUT (149)

Q450 2SC2611
VIBR. OUT (150)

Q451 2SC2611
VIBR. OUT (151)

Q452 2SC2611
VIBR. OUT (152)

Q453 2SC2611
VIBR. OUT (153)

Q454 2SC2

510UKB22
or 510NJB22

ASS'Y ERASE
UNIT


ASS'Y CRT BOARD

ASSY PCB MAIN

(NANAO)

20 INCH MONITOR KZ-20EN-D


K-10364

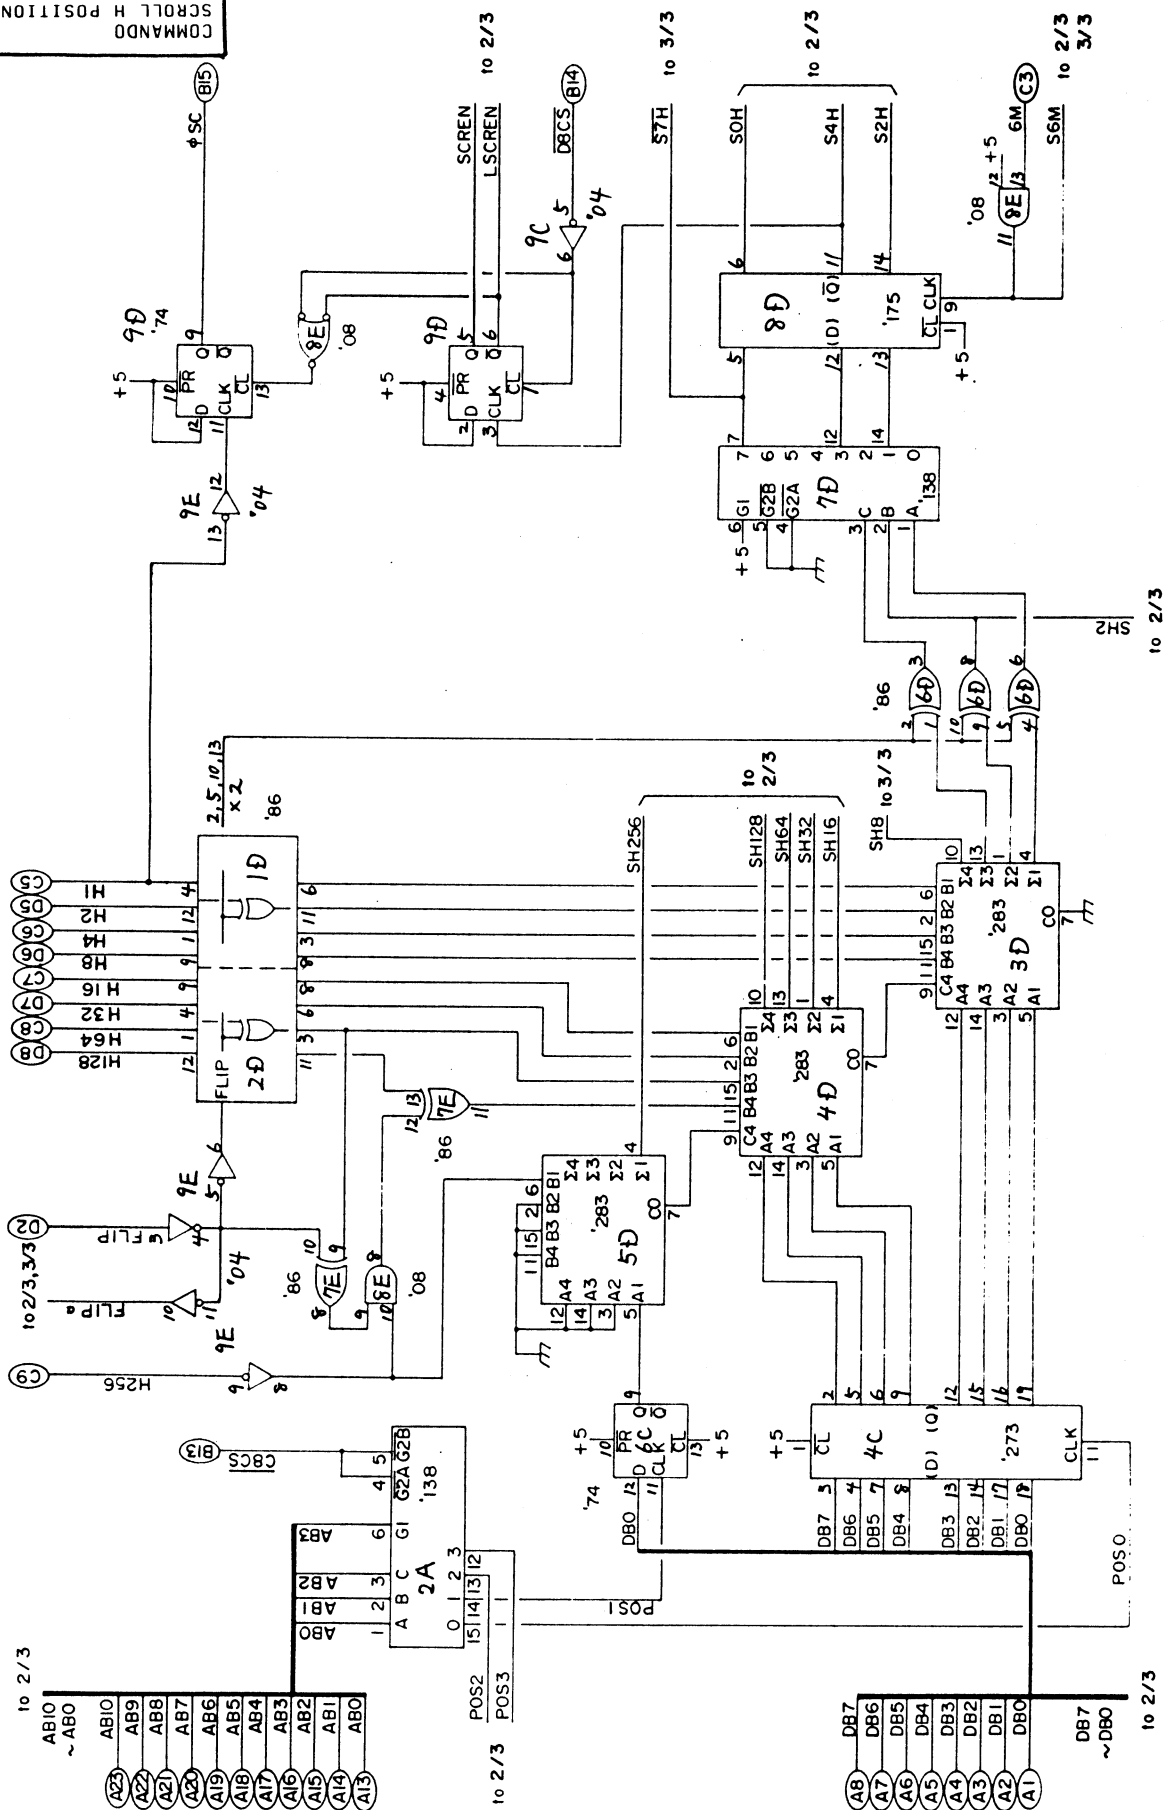


SCROLL	H	POSITION
1	1	1
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	8
9	9	9
10	10	10
11	11	11
12	12	12
13	13	13
14	14	14
15	15	15
16	16	16
17	17	17
18	18	18
19	19	19
20	20	20
21	21	21
22	22	22
23	23	23
24	24	24
25	25	25
26	26	26
27	27	27
28	28	28
29	29	29
30	30	30
31	31	31
32	32	32
33	33	33
34	34	34
35	35	35
36	36	36
37	37	37
38	38	38
39	39	39
40	40	40
41	41	41
42	42	42
43	43	43
44	44	44
45	45	45
46	46	46
47	47	47
48	48	48
49	49	49
50	50	50
51	51	51
52	52	52
53	53	53
54	54	54
55	55	55
56	56	56
57	57	57
58	58	58
59	59	59
60	60	60
61	61	61
62	62	62
63	63	63
64	64	64
65	65	65
66	66	66
67	67	67
68	68	68
69	69	69
70	70	70
71	71	71
72	72	72
73	73	73
74	74	74
75	75	75
76	76	76
77	77	77
78	78	78
79	79	79
80	80	80
81	81	81
82	82	82
83	83	83
84	84	84
85	85	85
86	86	86
87	87	87
88	88	88
89	89	89
90	90	90
91	91	91
92	92	92
93	93	93
94	94	94
95	95	95
96	96	96
97	97	97
98	98	98
99	99	99
100	100	100


85605 - C-1 - 1/3


(C.A.D.C.M)

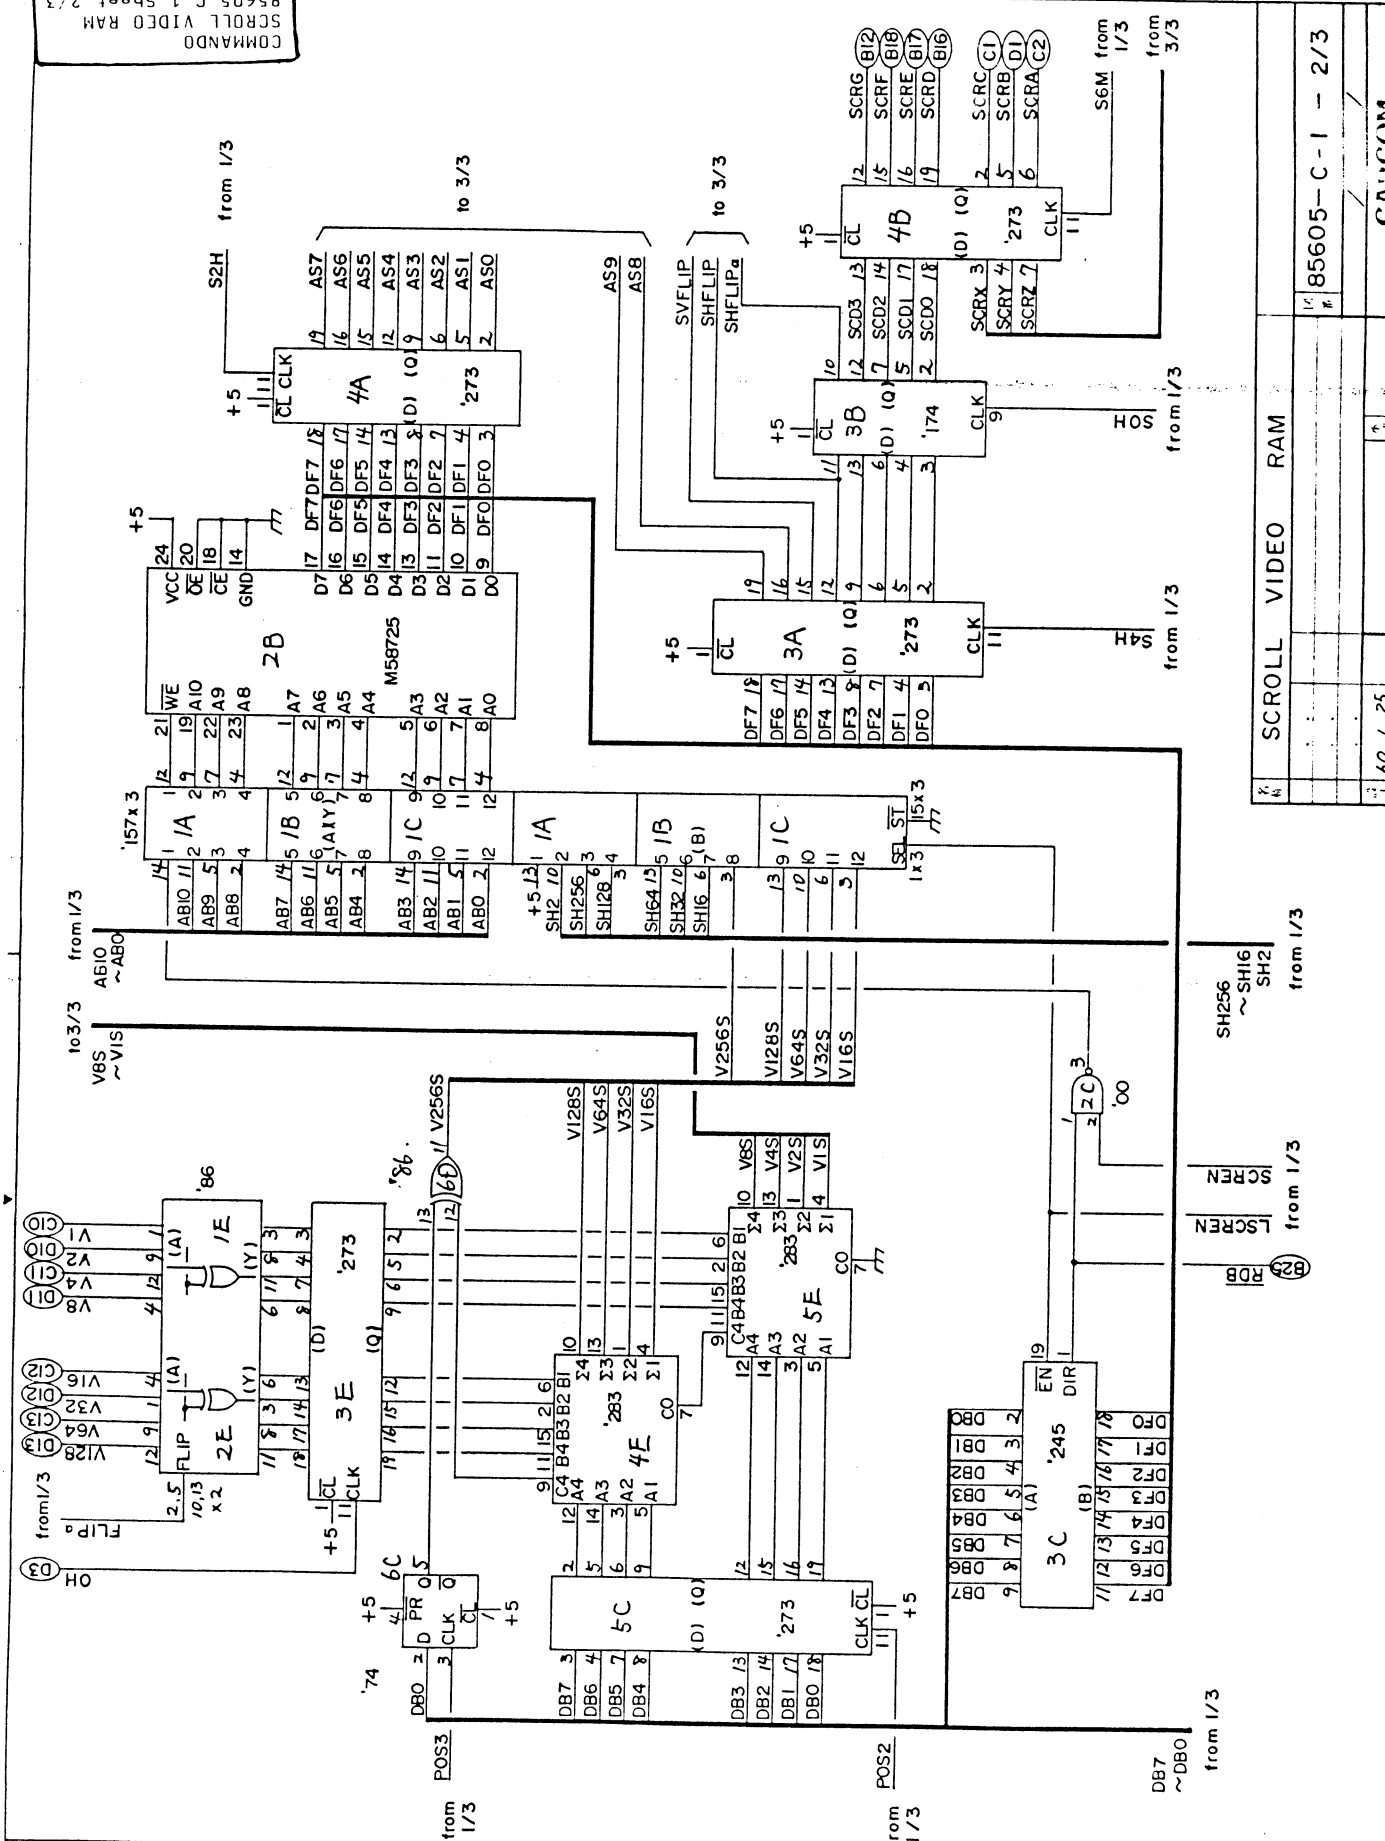

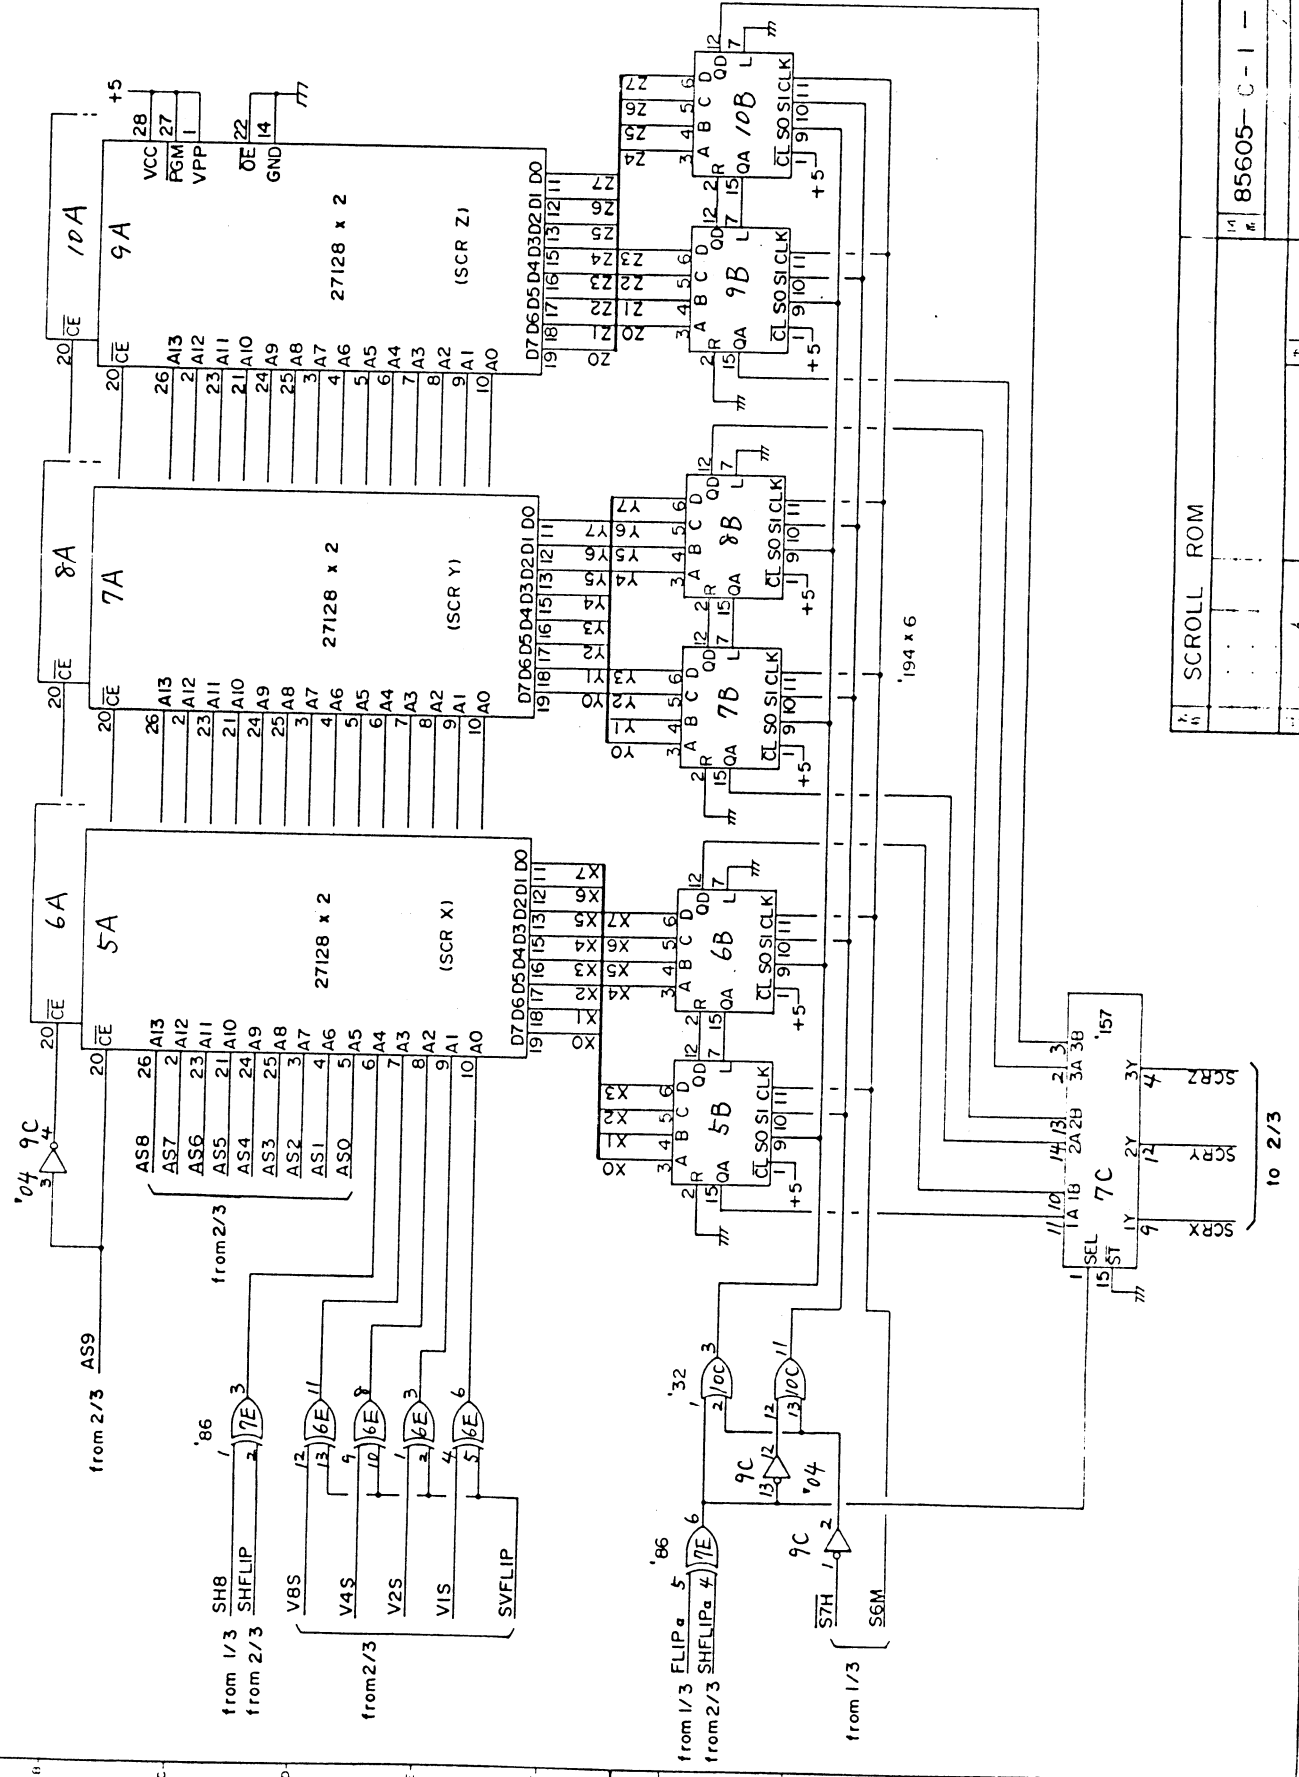


COMMANDO		85605-C-1 - 3/3	
1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68
69	70	71	72
73	74	75	76
77	78	79	80
81	82	83	84
85	86	87	88
89	90	91	92
93	94	95	96
97	98	99	100

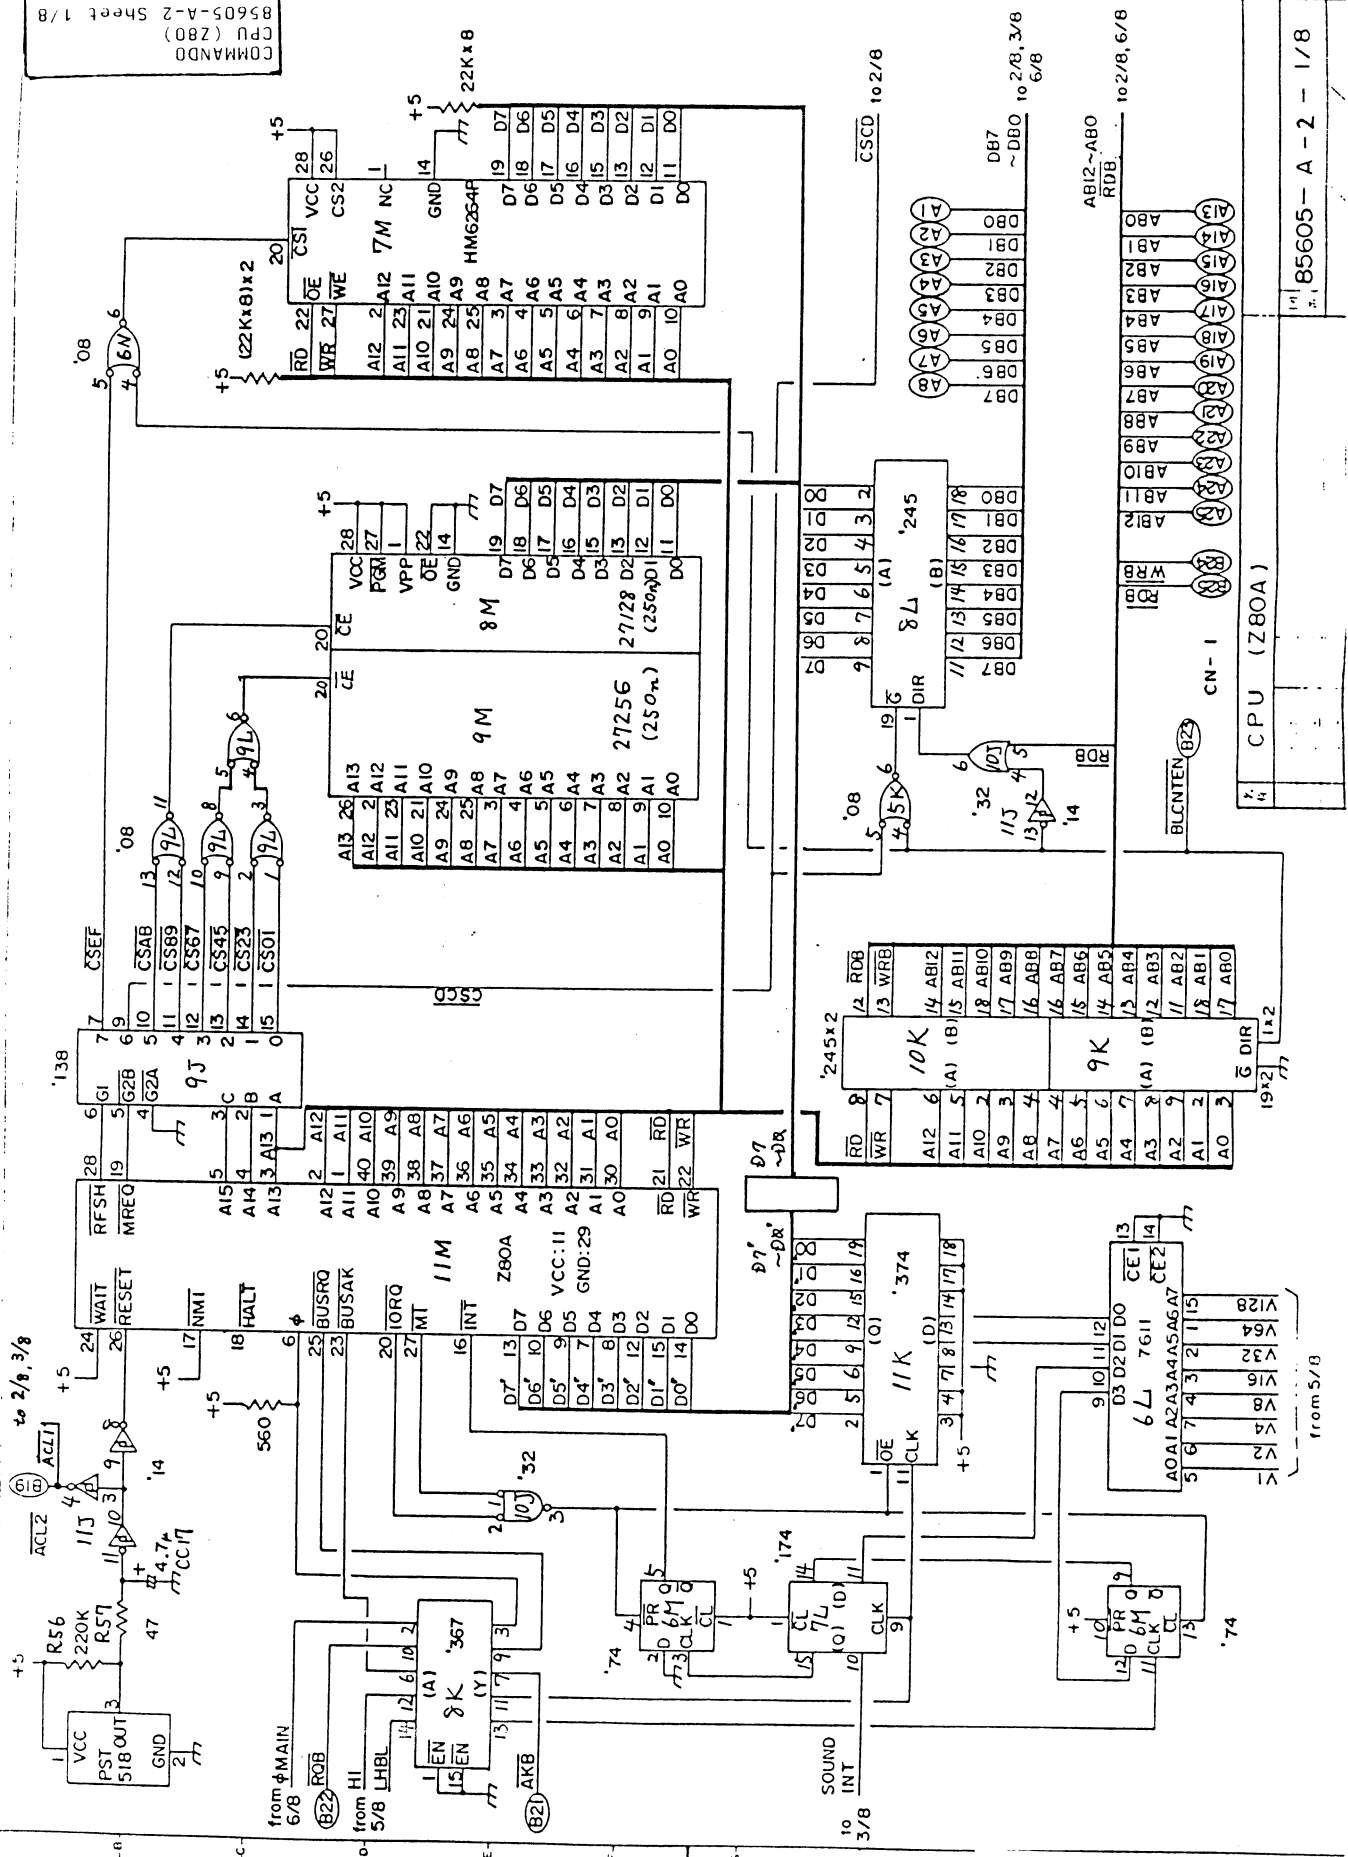

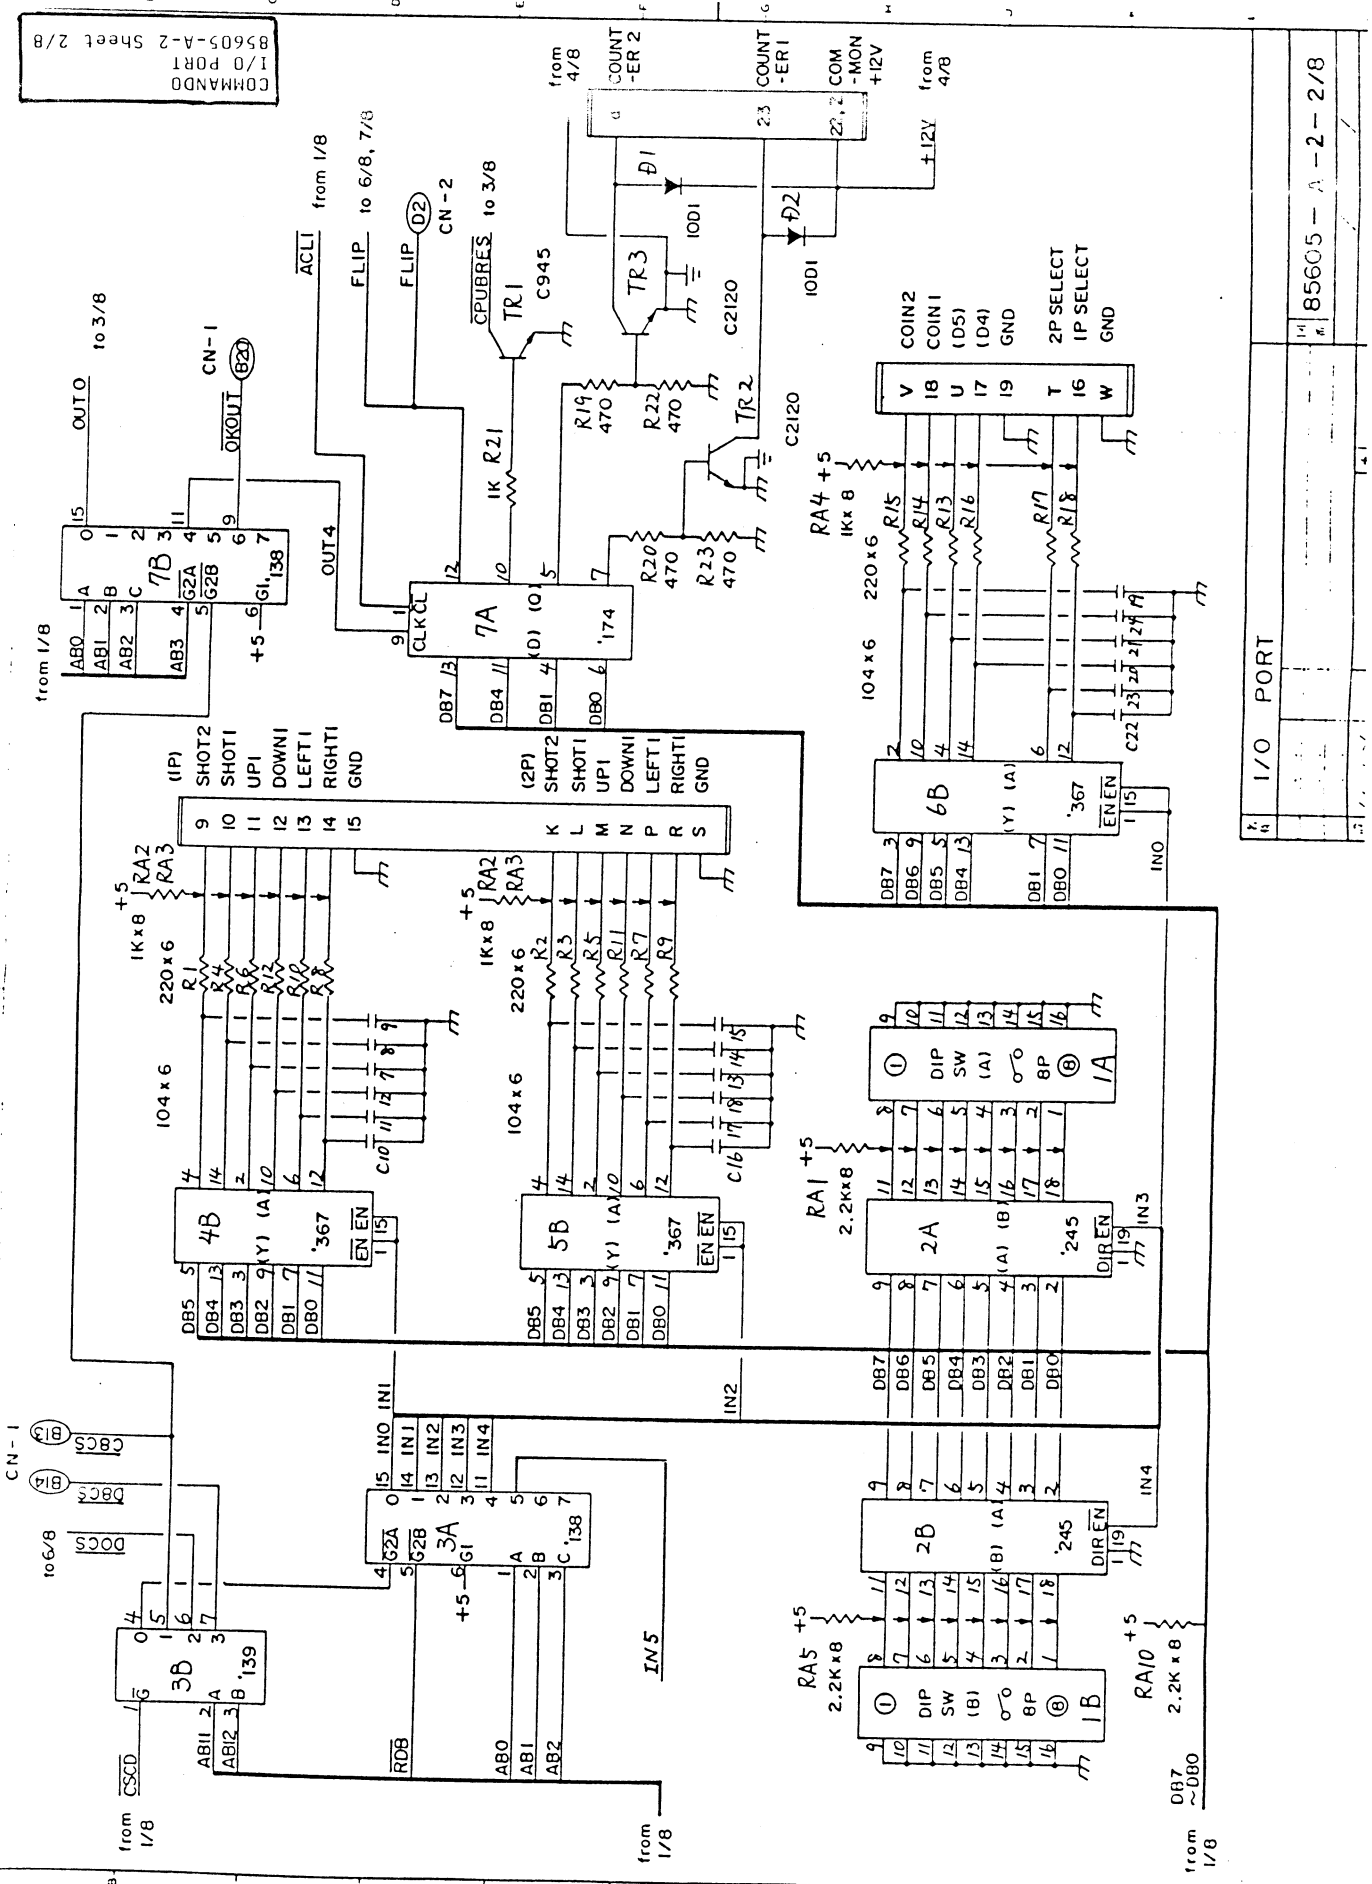



I/O PORT	
1	2
3	4
5	6
7	8
9	10
11	12
13	14
15	16
17	18
19	20
21	22
23	24
25	26
27	28
29	30
31	32
33	34
35	36
37	38
39	40
41	42
43	44
45	46
47	48
49	50
51	52
53	54
55	56
57	58
59	60
61	62
63	64
65	66
67	68
69	70
71	72
73	74
75	76
77	78
79	80
81	82
83	84
85	86
87	88
89	90
91	92
93	94
95	96
97	98
99	100

85605-A-2-2/8




85605-A-2-3/8

WILLIAM

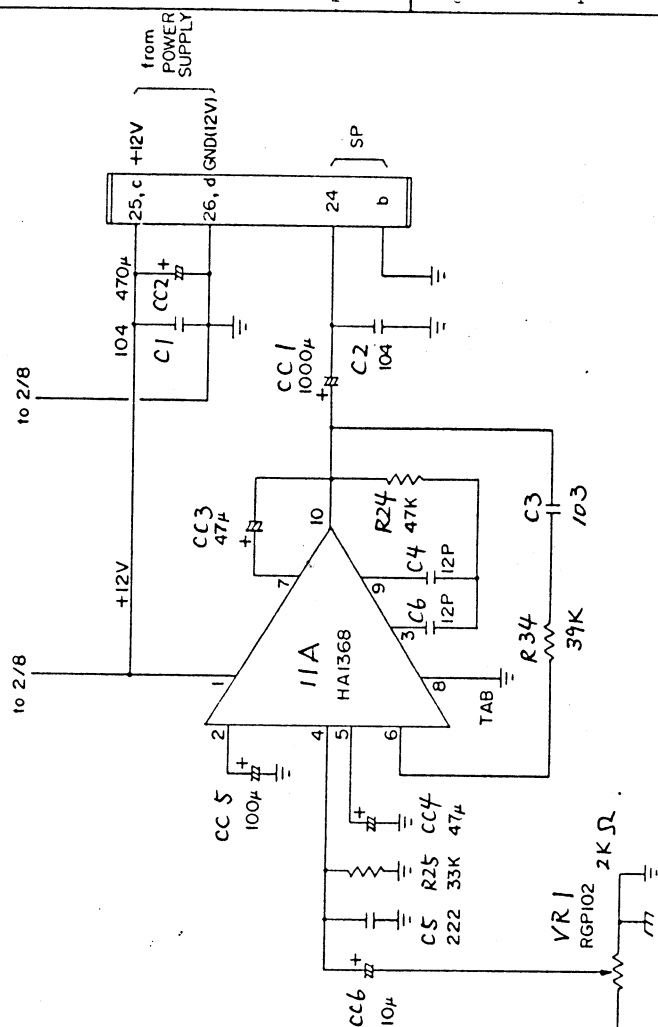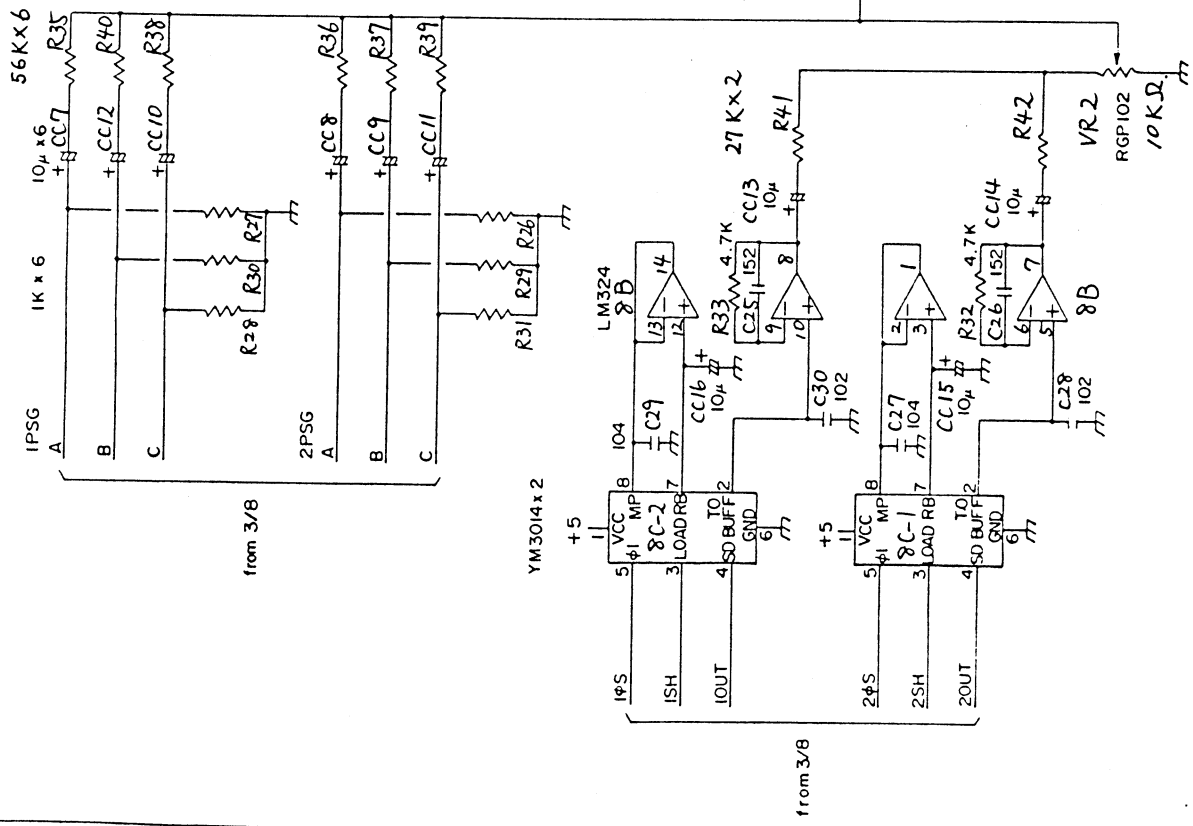


MAIN AMP	
60.4.1	R35~R40 55K→56K 55K→27K 55K→27K 55K→27K 55K→27K 55K→27K
4.1	R41, R42 55K→27K 55K→27K 55K→27K 55K→27K 55K→27K 55K→27K
85605-A-2-4/8	

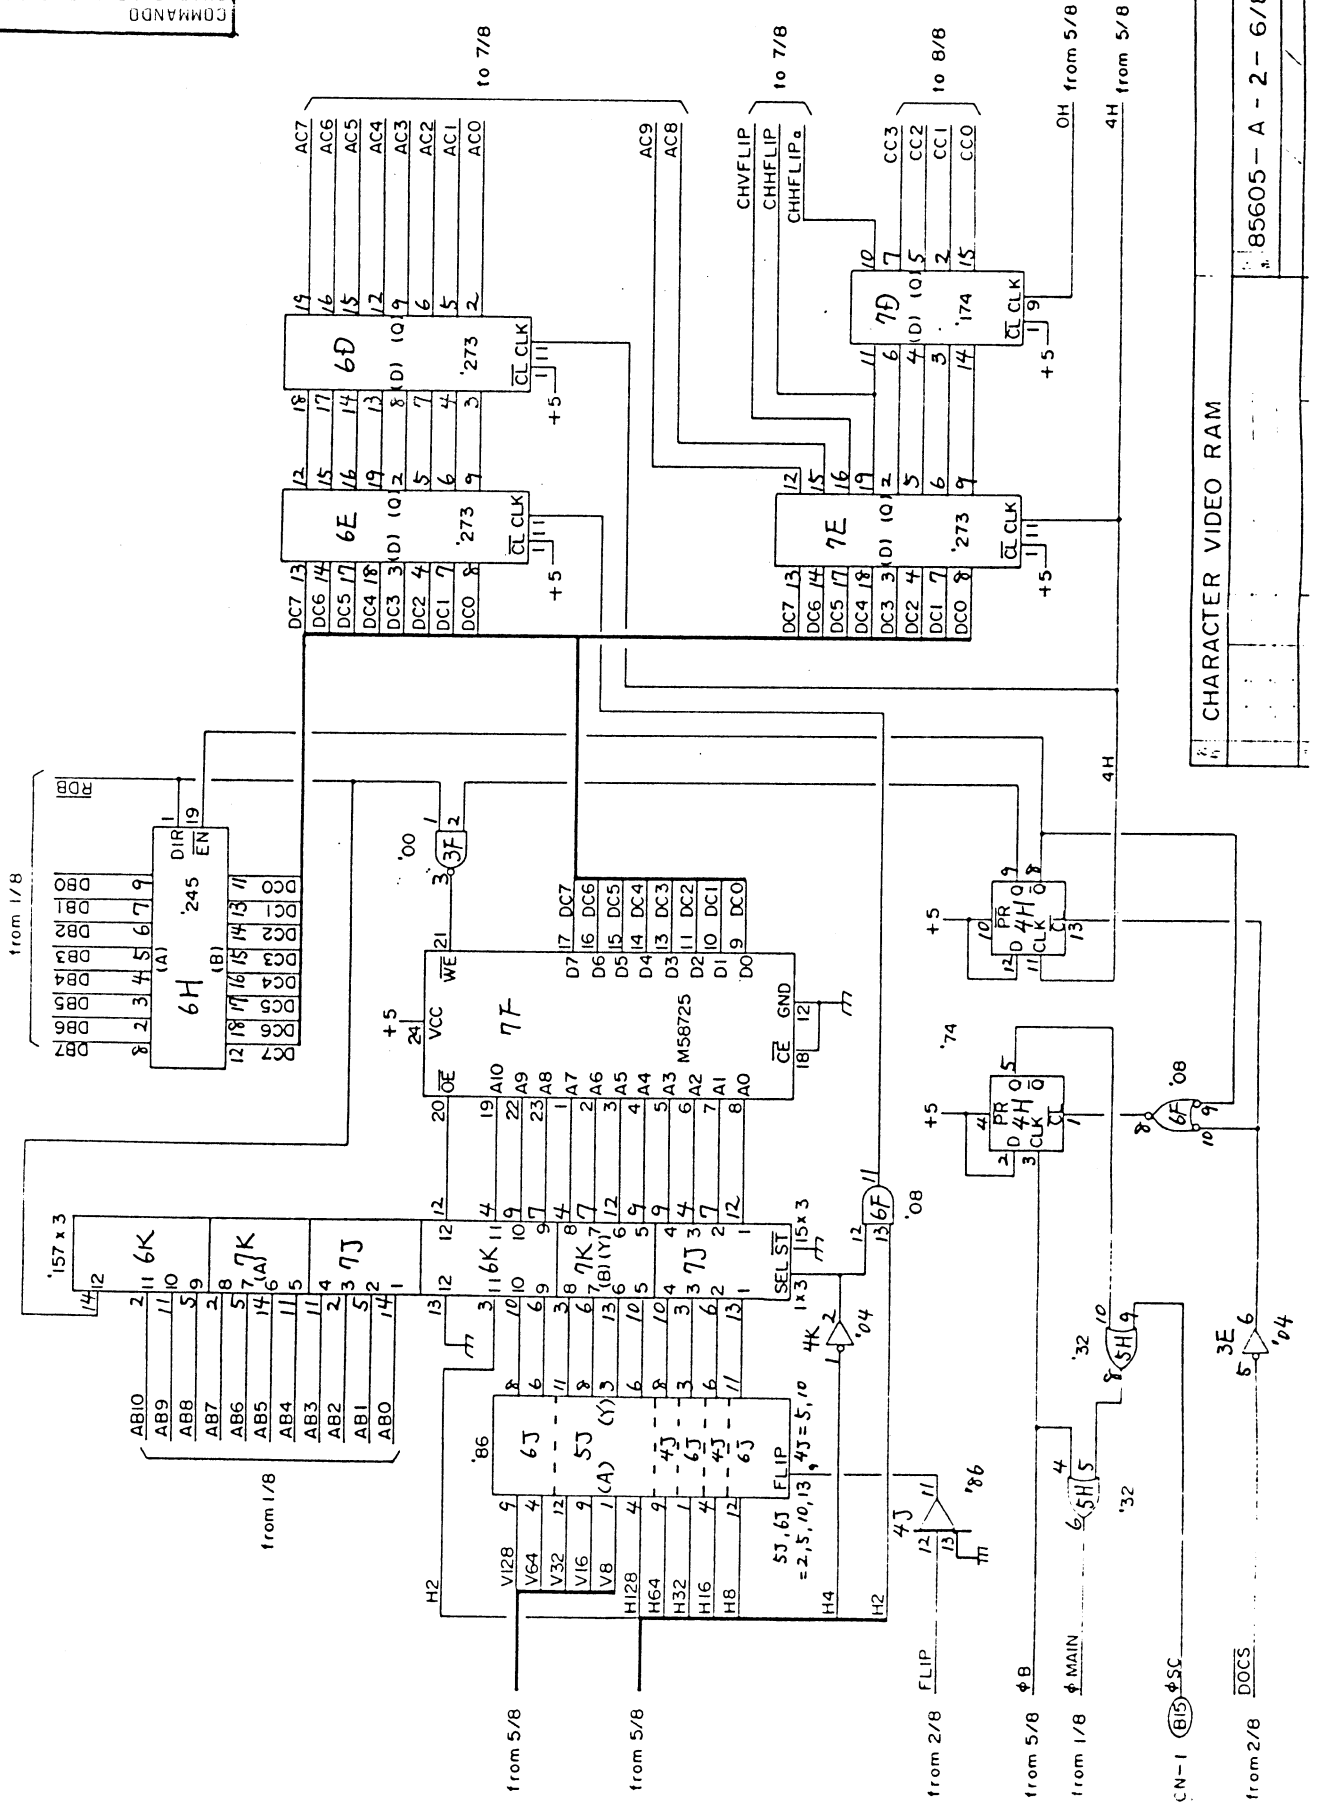

CHARACTER VIDEO RAM


85605-A-2-6/8

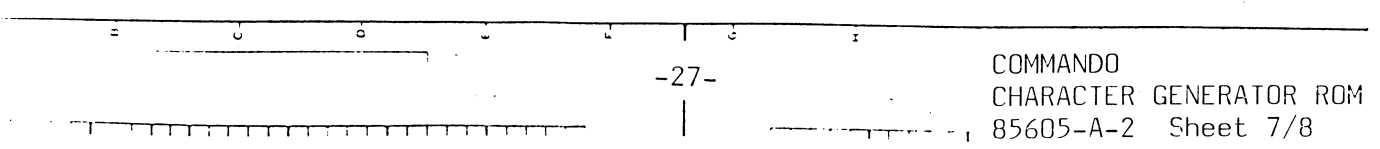[illegible]


CN - 1

SCRG (B2)


7611

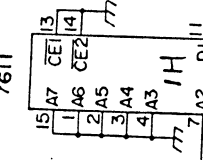


7611 x 3

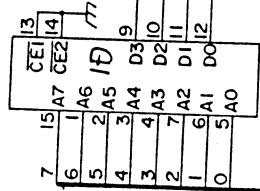













5

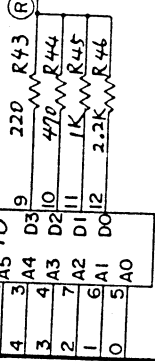

6

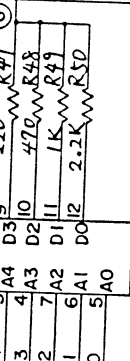

2E



CN - 2

CN - 1

CN - 2


COLOR MIXER

85606 - A - 2 - 8/8

CPU側

10 M

Memory側

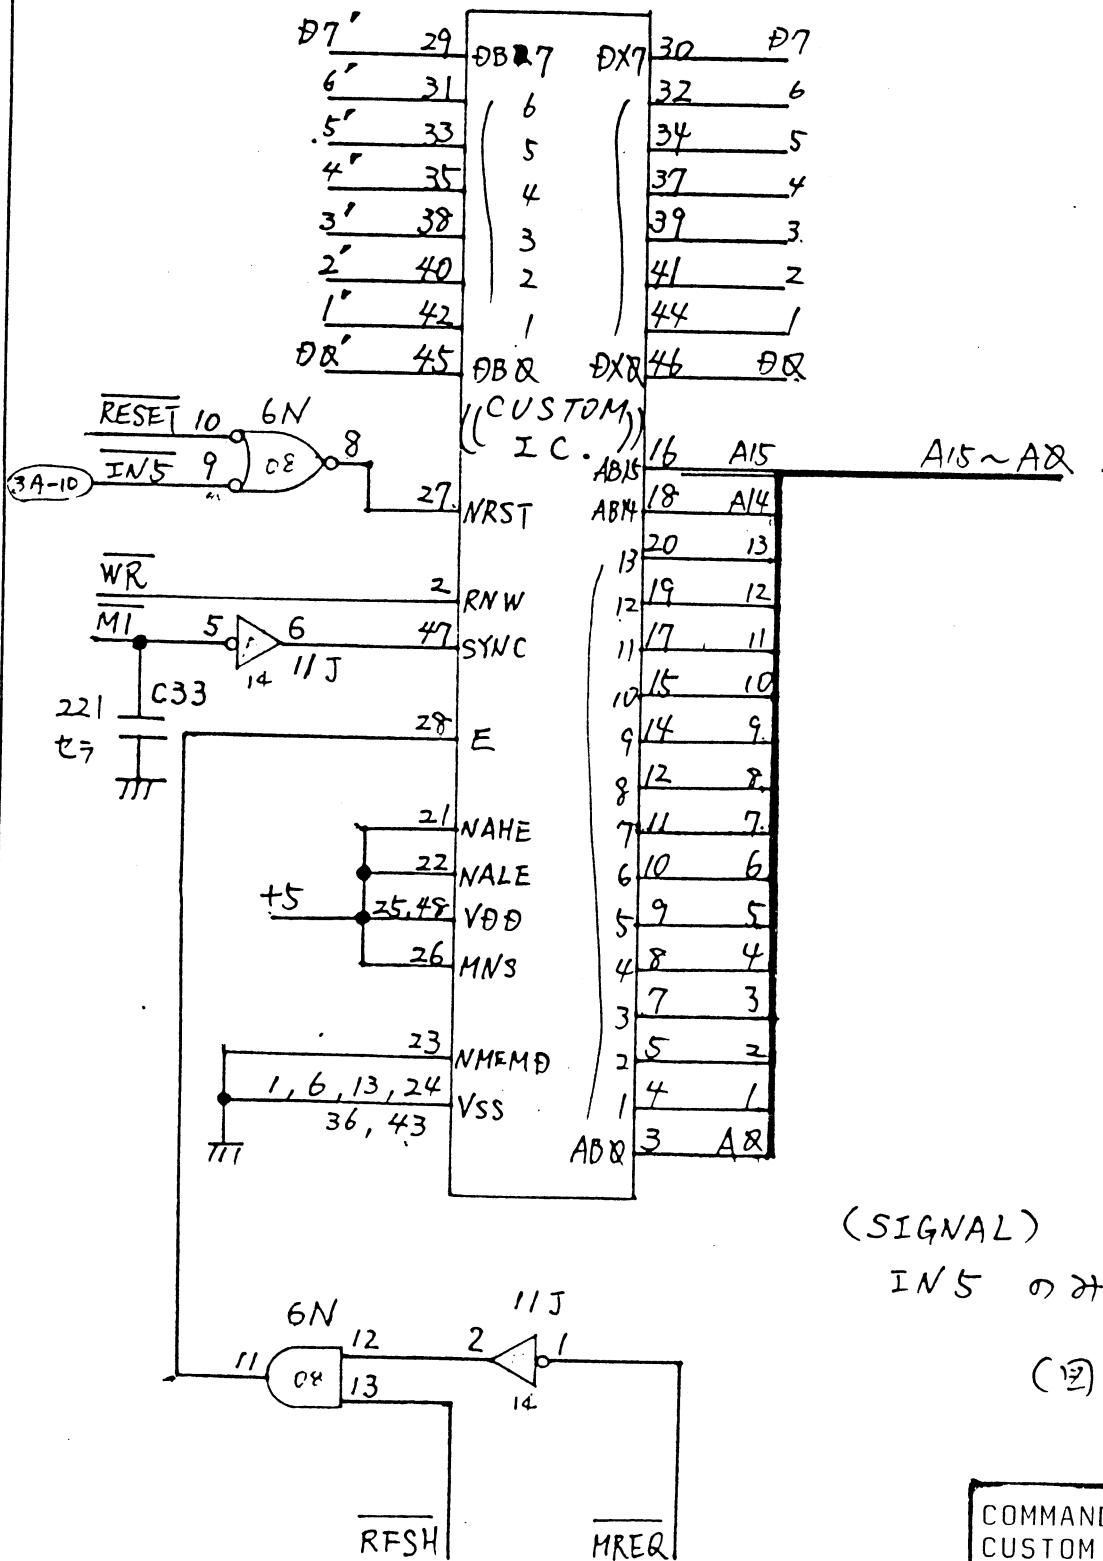



(SIGNAL)


IN5 のみ

2/8 81)

(図番)




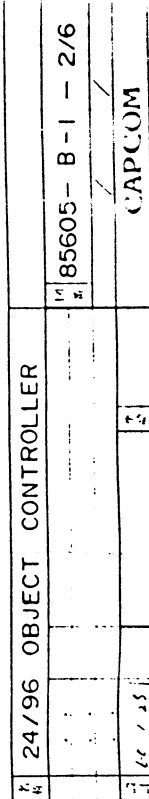

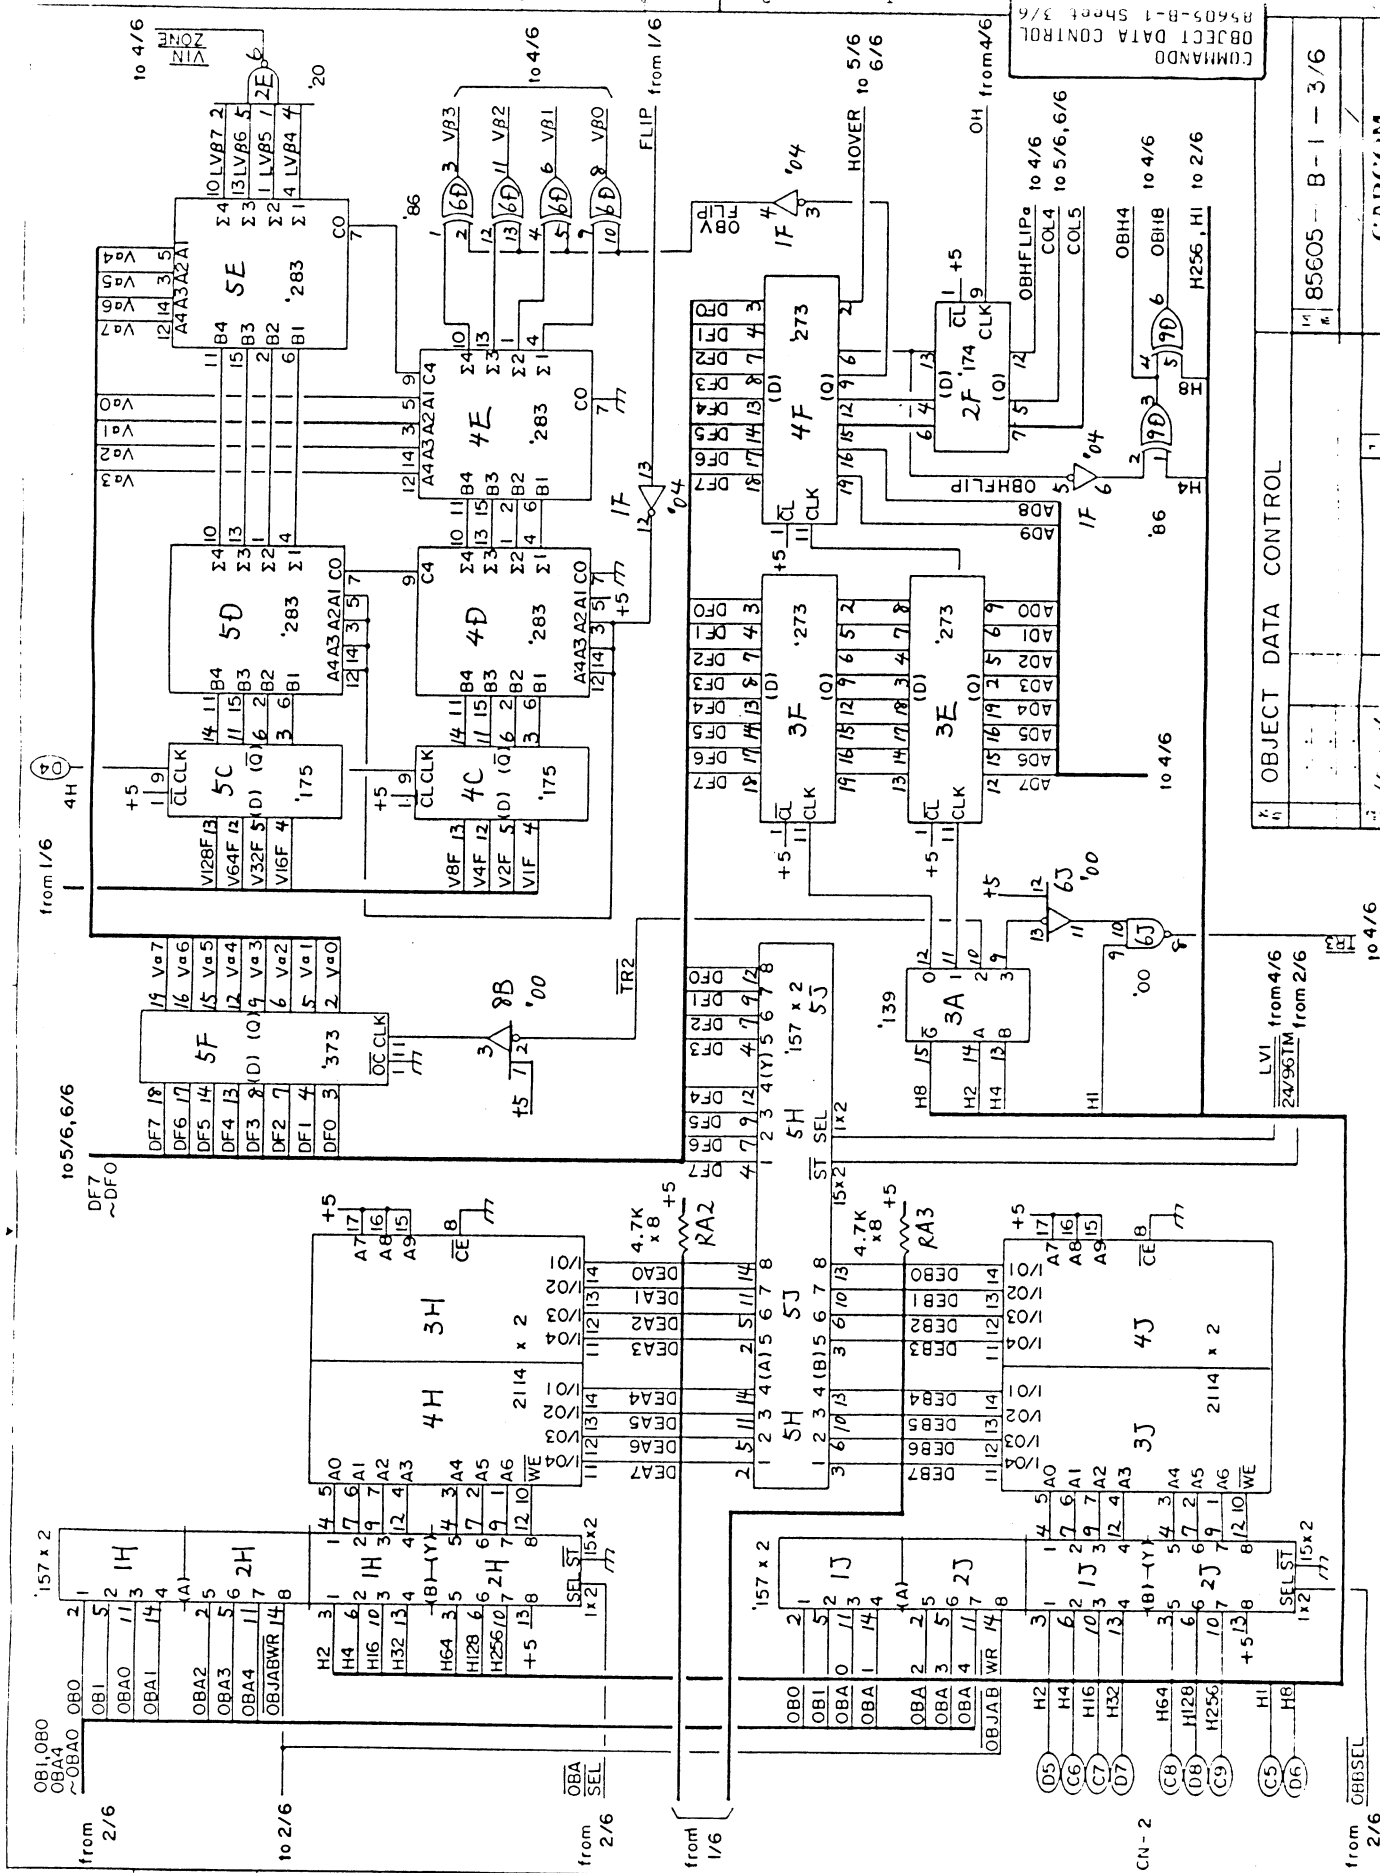

to 2/6, 3/6


from 1/6

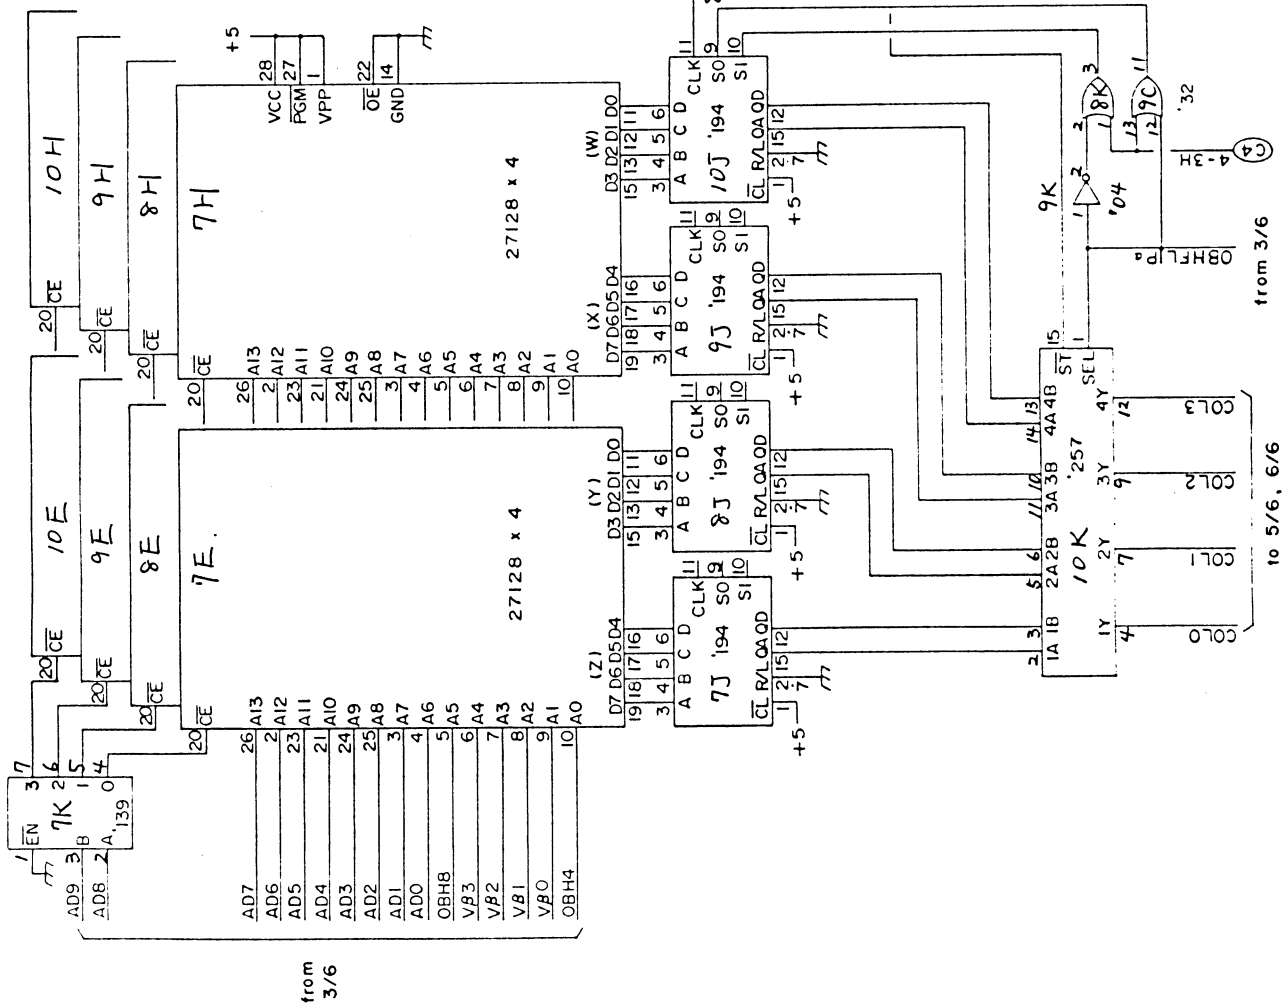

from 3/6

OBJECT ROM

85605-B-1	4/6
CAPCOM	

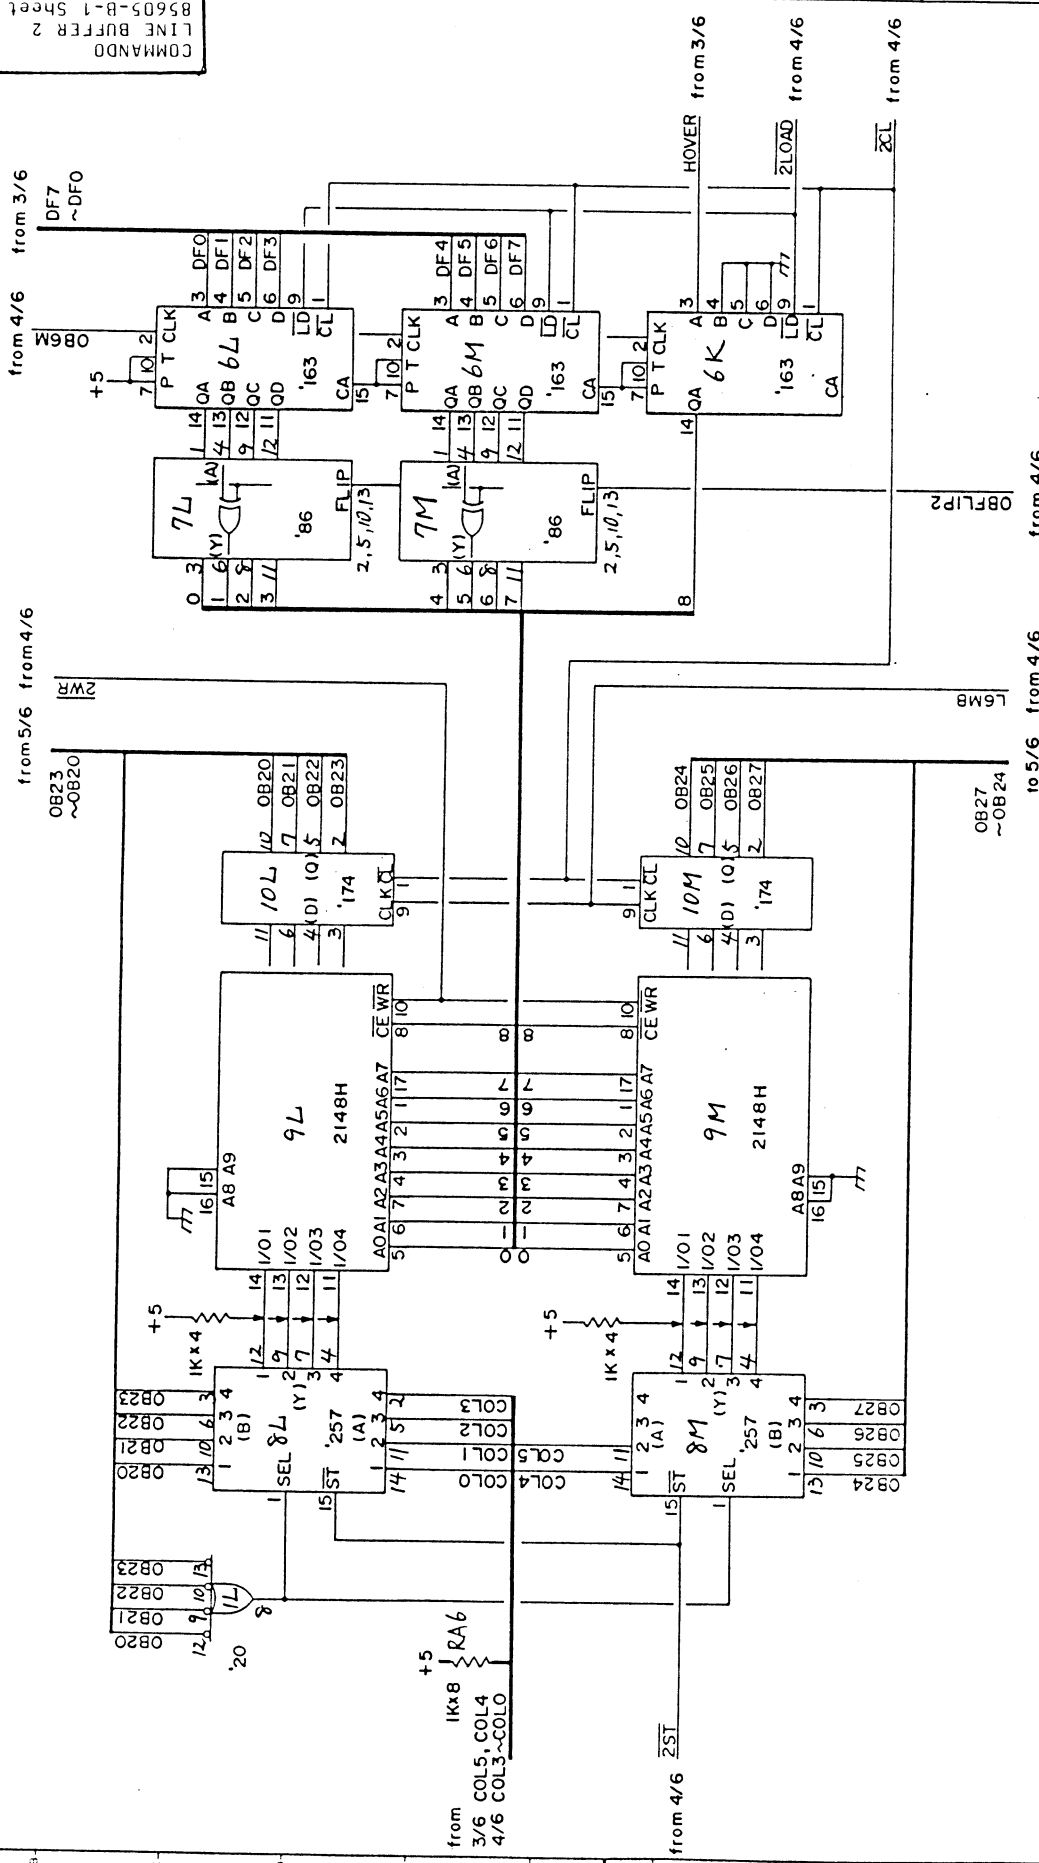

LINE BUFFER 2		85605-B-1 - 6/6	
1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
CAPCOM			

LIMITED WARRANTY

Data East USA, Inc. ("Seller"), warrants only to the initial purchaser of its products that the items listed below are free from defects in material and workmanship under normal use and service for the warranty periods specified:

- | | |
|---------------------------|-----------|
| A. Printed circuit boards | (90) days |
| B. Television monitor | (30) days |

No other parts of Seller's products are warranted.

Warranty periods are effective from the initial date of shipment from Seller to its authorized distributors.

Seller's sole liability shall be, at its option, to repair or replace products which are returned to Seller during the warranty periods specified, provided:


- A. Seller is notified promptly upon discovery by buyer that stated products are defective.
- B. Such products are properly packaged and then returned, prepaid to Seller's plant.

This warranty does not apply to any parts damaged during shipping or handling, or due to improper installation or usage, or alteration. In no event shall Seller be liable for any anticipated profits, loss of profits, loss of use, incidental or consequential damages or any other losses incurred by the customer in connection with the purchase of a Data East USA, Inc. product.

(WARRANTY DISCLAIMER)

EXCEPT AS SPECIFICALLY PROVIDED IN A WRITTEN CONTRACT BETWEEN SELLER AND PURCHASER, THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

DATE: 5-01-85

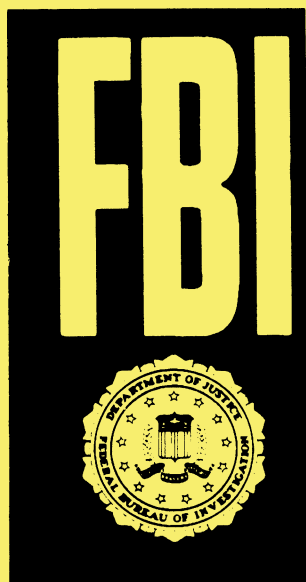

WARNING

Federal law provides severe civil and criminal penalties for the unauthorized reproduction, distribution, or exhibition of copyrighted audiovisual works and video games.

The Federal Bureau of Investigation investigates allegations of criminal copyright infringement.

