

36

Leg Length =


305/8"

POWER REQUIREMENTS


This game must be connected to a properly grounded outlet to reduce shock hazard and insure proper game operation. See the Yellow Pages (Schematics & Wiring), for transformer connections required for Normal, High, and Low Line conditions.




Normal Line:	110v AC - 1	25v AC @ 60Hz			
Domestic	AVG OPERATION	MAX OPERATION			
use an 8AMP 250v Slo-Blo Fuse.	CURRENT: 2.8AMP	CURRENT: 8AMP			
	WATTAGE: 329w WATTAGE: 940w				
High Line:	218v AC - 2	40v AC @ 50Hz			
Export	AVG OPERATION	MAX OPERATION			
use 2x 5AMP 250v Slo-Blo Fuses.	CURRENT: 1.8AMP	CURRENT: 5AMP   8AMP* England & Hong well & Hong use			
(*England & Hong Kong use an 8AMP 250v S/B Fuse.)	WATTAGE: <b>412w</b>	VVAITAGE: 1140W 1002W an 8A Fuse.			
Low Line:	95v AC - 108v	AC @ 50Hz / 60Hz			
Export Japan Only	AVG OPERATION	MAX OPERATION			
use an 8AMP 250v Slo-Blo Fuse.	CURRENT: 2.6AMP	CURRENT: 8AMP			
	WATTAGE: <b>264w</b>	WATTAGE: 812w			

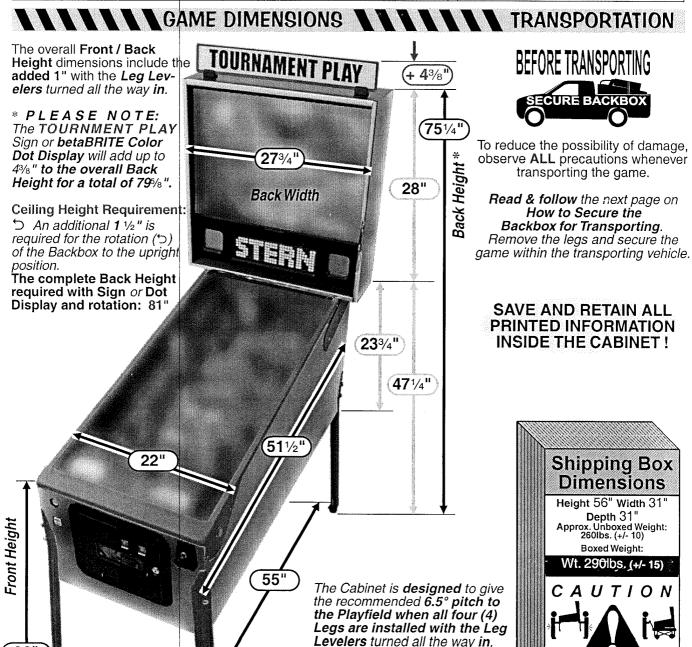

Front Height dimensions.

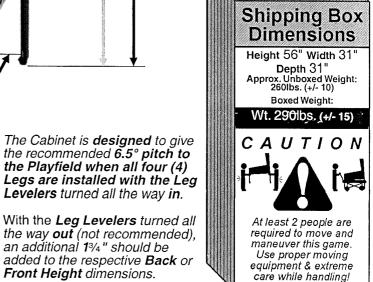

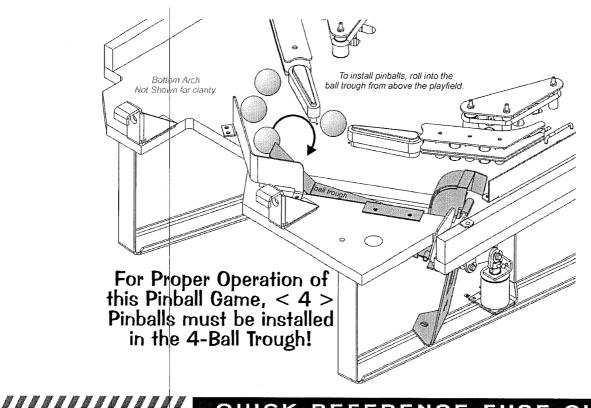

Backbox Fuses\*, Cabinet Fuses, Playfield Fuses and Cabinet Switches

\*Note: The CPU/Sound PCB does not have fuses.

### QUICK REFERENCE FUSE CHART 3448 SB 200-5000-17 |34 SB 200-5000-08 | 44 SB 200-5000-06 | 54 SB 200-5000-04 | 74 SB 200-5000-03 | 84 SB 200-5000-05

### **BACKBOX FUSES**

I/O POWER DRIVER BOARD

with F	ED LED STA	NTUS INDICATORS (if any RED LED is OFF, check the fuse)
F1	<b>5A</b> S.B.	5.7vac~G.I. Lamps [BROWN-WHITE≒WHT-BRN]
F2	<b>5A</b> S.B.	5.7vac~G.I. Lamps [YELLOW=WHITE-YEL Circuit]
F3	<b>5A</b> S.B.	5.7vac~G.I. Lamps [GREEN≒WHITE-GRN Circuit]
F4	<b>5A</b> S.B.	5.7vac~G.I. Lamps [VIOLET≒WHITE-VIO Circuit]
	75.00	(A) (D D O )   (C)   (A) (A) (A)   (A) (A) (A)   (A) (A) (A) (A) (A) (A) (A) (A) (A) (A)
F5	7 <b>A</b> S.B.	50VDC Coils / Flippers [48VAC feed to BRDG 1]
F6	3A S.B.	24vac~ Motor or Special Application
F7	4A S.B.	50VDC Magnet(s) or Special Application
F8	<b>3A</b> S.B.	50VDC Coils
F9	<b>8A</b> S.B.	18VDC Control Lamps [13VAC feed to BRDG 4]
F10	<b>5A</b> S.B.	20VDC Coils / Flashers [16VAC feed to BRDG 2]
F11	4A S.B.	5VDC Logic Power [ 8VAC feed to BRDG 5]
F12	<b>5A</b> S.B.	12VDC Audio [19VAC feed to BRDG 3]
F13	<b>5A</b> S.B.	12VDC Audio [19VAC feed to BRDG 3]

### **DISPLAY POWER SUPPLY BOARD**

F1 3/4 A S.B. 90VDC High Voltage Dot Display Board

CABINET FUSES
POWER (SERVICE OUTLET) BOX
Access through Coin Door inside cabinet, front bottom

8A S.B. 110-120V Main Line US / Canada / Jap 5A S.B. 220-240V Main Line International


### PLAYFIELD FUSES FLIPPER OR SPECIAL APPLICATION

(Coll Fuses are located under the playfield near assembly.)


3A S.B. | 50VDC | R. Flipper [BLU YEL = RED YEL]

3A S.B. 50VDC R. Flipper [GRY-YEL = RED-YEL]
3A S.B. 50VDC Additional Flipper Coil, if used
3A S.B. 50VDC Spcl. Application Coil, if used,
For location & more details on tuses, see Sec. 5. Chp. 2

ALL FUSES ARE 250V S.B. (ŚLŐ-BLO)
SEE FUSE OR TABLES FOR AMP RATING
CAUTION: FOR CONTINUED PROTECTION
AGAINST RISK OF FIRE REPLACE ONLY WITH
SAME TYPE FUSE WITH IDENTICAL ELECTRICAL RATING

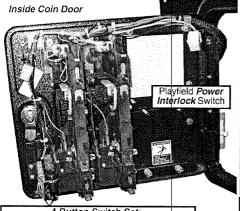


4-Button Switch Set:

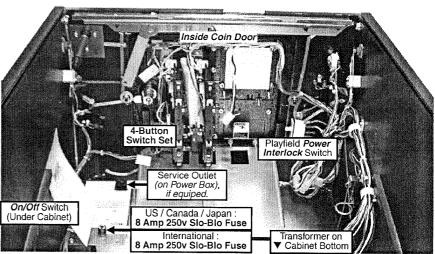


### How to Secure the Backbox for Transporting

For more Backbox details & part numbers, see the Pink Pages (Parts Identification & Location, Backbox ...).

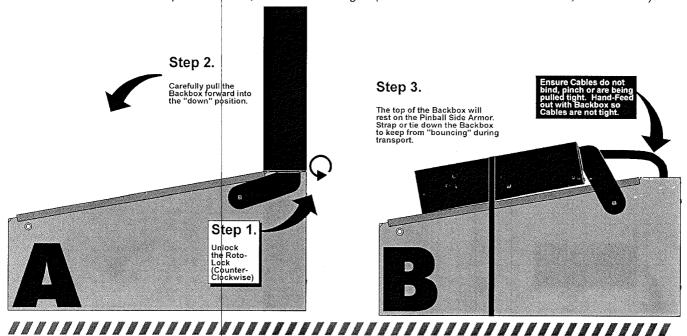

### Leg Leveler Adjustment

Attach the four (4) Leg Assemblies to cabinet corners with the eight (8) leg bolts provided .

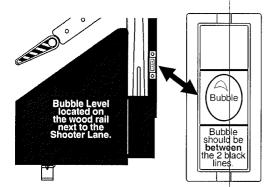

**Start** adjustment with the leg levelers *turned all the way in.* 

**View** the *bubble* in the level provided on the right side wood rail.

Adjust the front or rear levelers as necessary to cause the bubble to float between the two (2) black lines.

**Use** a pinball to roll down the center of the playfield for side-to-side leveling.

YOUR PLAYFIELD PITCH IS NOW AT 6.5° AS REQUIRED FOR PROPER GAME PLAY!

Cabinet Leg

3/8-16

Hex

Nut

Leg Leveler
turned all
the way in.


Note: For custom adjustment greater than >6.5° can be achieved by turning out the rear leg leveler(s), however, it is not recommended.

### Easy Access Service System - 2 Positions

With the front molding & glass removed, carefully lift the playfield (take care when using the Bottom Arch to hoist).


### Position 1

When lifted high enough, the *Playfield Support Slide Brackets* (Fig. 1A) can be seen and can clear the cabinet front (Fig. 1B). At this time, pull the playfield toward the front of the cabinet, checking that the mechanical components clear the capinet front, then rest the playfield on the *Playfield Support Slide Brackets* at the front channel of cabinet (Fig. 1C);

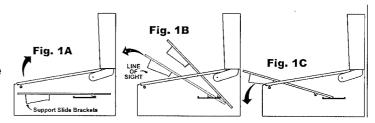


#### Position 2


With the playfield at rest, hold the sides & pull toward the front of the cabinet (approx. 6" to 8"), until resistance is felt from *Edge Slide Brackets* stopping against the *Slide & Pivot Support Brackets* located on either side of the cabinet (Fig. 2A). At this time, swivel the playfield toward the Backbox, then rest on the top edge (Fig. 2B & 2C).

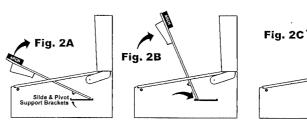


### Service Switch X4 Set Access & Use

The 4-Button Service Switch Set provides access for three (3) functions available for your use: 1: SERVICE CREDIT, 2: VOLUME [-]/[+] and 3: SERVICE MENU.

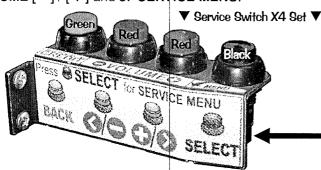

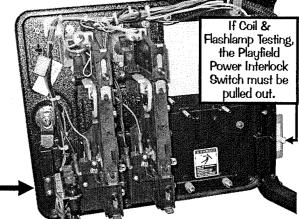

To access any of these three (3) functions you must first open the Coin Door (see pictorial above) with the Game in the Attract Mode (not already in any Function or Menu stated below) and then follow below.

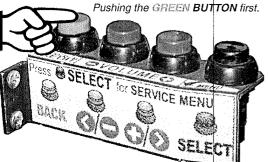


### ■ Function 1: SERVICE CREDITS MENU

Inside Coin Door

Pushing the Green [ SERVICE CREDIT ] Button first, adds a Service Credit per push (will not affect your audits as "paid" credits). This is useful for the technician to test games in regular play without affecting the game audits. Each depression adds 1 credit; up to 50 credits can be applied. Standard Adjustment 23, **Credit Limit**, determines this, however, it can be changed from 04-50; for details see the Adjustments Section.

Note: Once your credits are added, this menu will automatically exit a few seconds after the last button depression or when the Green [BACK] or Black
[SELECT] Button is pushed. This function is disabled if Standard Adjustment
38, Free Play, is set to YES. The Service Credits are limited to the Credit Limit in addition to any paid credits present in the game (e.g. If the


Credit Limit is 30, with 8 paid credits present, only 22 Credits can be applied.).

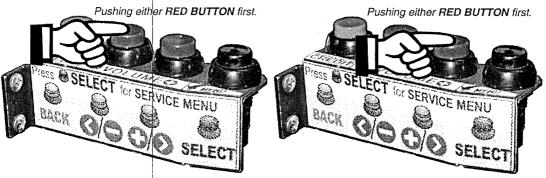

### ▲ Function 2: VOLUME MENU ▲

Pushing either of the Red [ VOLUME ] Buttons first, enters the VOLUME MENU. While in this Mode, to DECREASE the volume, hold down or depress the 1st Red [ < / - ] Button until desired the volume is achieved; to INCREASE the volume, hold down or depress the 2nd Red [ + / > ] Button until the desired volume is achieved.

Note: The volume can be set between 0-63; Once your adjustments are made, this menu will automatically exit a few seconds after the last button depression or when the Green [ BACK ] or Black [ SELECT ] Button is pushed.

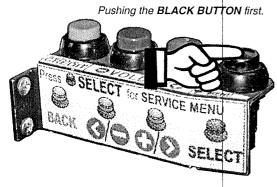

### ■ Function 3: SERVICE MENU

Pushing the Black [ SELECT ] Button first, enters the SERVICE MENU. Once in, navigate through all menus by depressing the Service Menu Buttons. Use the Red [</-] or [+/>] Buttons to move LEFT / RIGHT, NEXT/PREVIOUS (audits/adjustments) or to INCREASE / DESCREASE an adjustment (setting). Use the Black [ SELECT ] Button to select a highlighed Icon, move to the next line of text or to answer "OK" where applicable. Use the Green [ BACK ] Button to exit or escape back.

### 50V / 20V DI:SABL STORE POWER

This audible / visual alert display is shown when the 50V / 20V Power is disabled (by opening the Coin Door). PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL, SWITCH OR PLAY TESTING WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE! Pulling out the Power Interlock Switch or pressing the

'escape' Green [ BACK ] Button will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).

### OPERATOR ALERT! AUTO PLUMCER DEVICE MALFUNCTION

This alert display is shown momentarily during Game Mode or Power-Up to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly). OPERATOR ALERT! works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the Shooter Lane, Scoop or Eject Holes, etc.). This alert can

also appear if a switch associated with a device (e.g. Ball Trough, Auto Plunger, etc.) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in Switch Alerts and/or Technician Alerts.



Upon entering the **SERVICE MENU**, if an asterisk "  $\ast$  " is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the Red Buttons (short-cut to the TECHNICIAN ALERTS MENU) or continue into the SERVICE MENU (press the Black Button again), select the "DIAG" Icon

'TECH" *Icon* for the **Technician Alerts** information.

### CPU DIP SWITCH SETTINGS

The 8-Pos. Dip Switch ISW11 is on the CPU/Sound Board (between Conn. J3 & J13, lower left corner)

THE 0-PUS	. DIP SWITCH [	3W1] IS 0 	ii liie CPU/30u	na boara (betwe	en conn. 33 & 313	, lower leπ corner)
CPU COUNTRY SETTING:	Pos. 1 2 3 4 5	678	CPU COUNTRY SETTING:	Pos. 1 2 3 4 5 6 7	CPU COUNTRY SETT	NG: Pos. 1 2 3 4 5 6 7 8
USA	ON OFF V V V		Germany	ON ▲ ▲ ▲ ▼ ▼ ▼	Russia	ON A A V V
CPU COUNTRY SETTING:	Pos. 1 2 3 4 5	678	CPU COUNTRY SETTING:	Pos. 1 2 3 4 5 6 7		
Australia			Greece	OFF V V	So. Africa	OFF V V
CPU COUNTRY SETTING:	Pos. 1 2 3 4 5	678	CPU COUNTRY SETTING:	Pos. 1 2 3 4 5 6 7		NG: Pos. 1 2 3 4 5 6 7 8 ON
Austria	ON A V V V		Italy	ON A V		
					CPU COUNTRY SETT	
Belgium	ON A		CPU COUNTRY SETTING:	Pos. 1 2 3 4 5 6 7		ON A A V V V V
	OFF ▼ ▼ ▼		Capan	OFF V V		NG: Pos. 1 2 3 4 5 6 7 8
CPU COUNTRY SETTING:	Pos. 1 '2 3 4 5	678	CPU COUNTRY SETTING:	Pos. 1 2*3 4 5 6 7		
Canada 1		~~	Lithuania	OFF V V		
	T			*** **** *****************************	CPU COUNTRY SETT	
CPU COUNTRY SETTING:	Pos. 1 2 3 4 5	678	Middle East	Pos. 1 2 3 4 5 6 7	8 Taiwan	ON A A V
Carraua 2	OFF 🔻 🔻	VVV	Wildule East	OFF V		
	1- P				CPU COUNTRY SETT	NG: Pos. 1 2 3 4 5 6 7 8
CPU COUNTRY SETTING:	Pos. 1 2 3 4 5		Netherlands	Pos. 1 2 3 4 5 6 7		OFF V V V
Orodita	OFF ▼   ▼		Netherlands	OFF V V V	CPU/SND PCB SETTI	NG: Pos. 1 2 3 4 5 6 7 8
CPU COUNTRY SETTING:	Pos. 1 2 3 4 5	678	CPU COUNTRY SETTING:	Pos. 1 2 3 4 5 6 7		
Denmark	ON A A	$\overline{}$	New Zealand	ON A V	<b>∀</b>	OFF V V V V
CPU COUNTRY SETTING:	Pos. 1 2 3 4 5	678	CPU COUNTRY SETTING:	Pos. 1 2 3 4 5 6 7	8	
Finland	ON A A V		Norway	ON         ▲         ▲         ✓         ▼         ●         ▼         ▼         ▼		
CPU COUNTRY SETTING:	Pos. 1 2 3 4 5	678	CPU COUNTRY SETTING:	Pos. 1 2 3 4 5 6 7	8	
France	ON A A V		Portugal	ON A V V V	<b>_</b>	
		1				

Note: Slide Dip Switch 8 to Position ON (with Dip Switches 1-7 in the OFF Position) only to reboot the game with the latest version BOOT EPROM installed at U9 on the CPU/Sound Board (S.A.M. System only). Currently, this is also the procedure to update your game with the latest software code update file. For the latest version, visit our website. If you have questions about updating your game code, call Technical Support for assistance.

### Service Menu Introduction


Important: The Switch Bracket holds the Playfield Power Interlock. It is located just inside the Coin Door frame (see pictorial of the Coin Door on the previous page). The Button Switch for the Playfield Power Interlock Switch must be pulled out for electro-mechanical device testing or diagnostic purposes (this is required). If this button is pushed in, the Playfield Power is disabled while the Coin Door is OPEN.

To get into the **SERVICE MENU MODE** review **"Function 3: SERVICE MENU"** on the next page. After Power-Up, push down the **Black [ SELECT ] Button** to begin. Looking at the display you will momentarily see **"SERVICE MENU"** followed by the **MAIN MENU:** 



Use the **Red** [ < / - ] / [ + / > ] **Buttons** to move the selected *Icon* left or right, and the **Black** [ **SELECT** ] **Button** fto activate the selected *Icon*.

The MAIN MENU now appears with the "DIAG" Icon (GO TO DIAGNOSTICS MENU) highlighted:

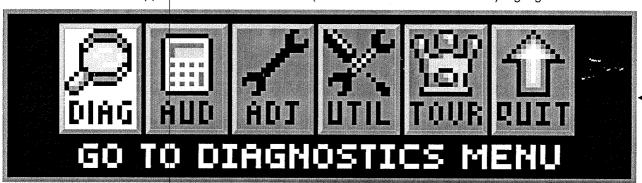



As the operator views the Menu Screen(s), the More Symbols indicates that there are more *lcons* to select in each direction. The *lcon* selected will blink. Pushing the **Black [ SELECT ] Button** will select the *lcon* and the Menu Screen will change to the menu selected. Select the **Green [ BACK ] Button** to move backwards through the menu levels. Press the **Green [ BACK ] Button** repeatedly or select the "QUIT" *lcon* to completely exit the **SERVICE MENU** Mode.

View the **SERVICE MENU Icon Tree** on the next pages for a complete overview of all menus used in this system. The "HELP" *Icon* provides an explanation of **ICON** usage *or* any other information in the Menu where the "HELP" *Icon* was selected *(when available)*.

DIAG: GO TO DIAGNOSTICS MENU

AUD: GO TO AUDITS MENU
ADJ: GO TO ADJUSTMENTS MENU
UTIL: GO TO UTILITIES MENU


(INSTALLS, CUSTOM MSG., CUSTOM PRICING,


SET TIME, RESET & USB)

TOUR: GO TO TOURNAMENT MENU (START TOURNAMENT, VIEW TOURNAMENT DATA, SIGN MESSAGES)

>> TO UPDATE THE GAME CODE, REVIEW THE STEPS ON THE INSIDE FRONT COVER OF THIS MANUAL.

Use both the manual and the display to help customize, troubleshoot and/or diagnose faults, if any.

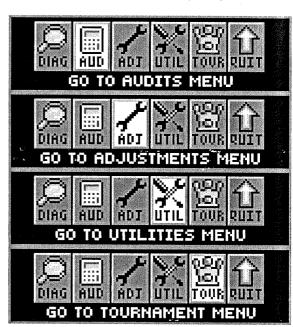

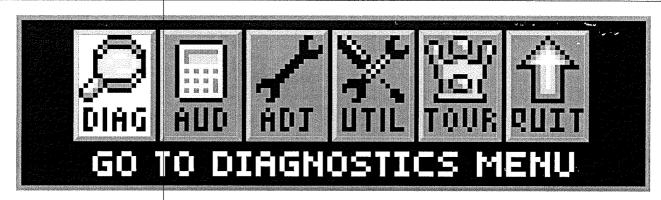

To initiate, from the MAIN MENU, select the "DIAG" *Icon*. The DIAGNOSTICS MENU provides tests for switches, coils, flash lamps, lamps, sounds and dots in the Dot Matrix Display. Each feature may be tested manually or automatically after entering the SERVICE MENU (see Service Menu Introduction Section). The [CYCLING COIL TEST]/[FLASH LAMP TEST] may be used for a quick verification of automatic test functions. The [SWITCH TEST]/[SINGLE COIL TEST]/[SINGLE LAMP TEST]/[ALL LAMPS TEST]/[ROW LAMPS TEST]/[COLUMN LAMPS TEST]/[FLASH LAMP TEST] may be used for troubleshooting.

All **DIAGNOSTICS MENU** *Idons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. *NOTE:* Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional *or* may not appear at all. Some *Icons* change depending on selections (e.g. Selecting and activating the "STRT" Icon [Start Tournament] will be replaced with the "STOP" Icon [Stop Tournament]). Icons and/or functions, order and operation are subject to change.

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [ **BACK** ], exit or escape, the **RED Buttons** to [ < / – ] MOVE BACK / LEFT / DECREASE / [ + / > ] MOVE FORWARD / RIGHT / INCREASE a value or setting, and the **BLACK Button** to [ **SELECT** ] next or as "OK / ENTER / ENERGIZE."

Important: Upon Power-Up (Game CPU Reset) or opening the Coin Door watch the Display for any Alerts.\*

### 50V / 20V DISABLED CLOSE COIN DOOR OR PULL INTERLOCK SWITCH TO RESTORE POWER

This audible / visual alert display is shown when the 50V / 20V Power is disabled (by opening the Coin Door). PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL OR SWITCH TESTING & BURN-IN WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE! Pulling out the Power Interlock Switch or

pressing the 'escape' **Green** [ **BACK** ] **Button** will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).

## OPERATOR ALERT! RUTO PLUNGER DEVICE MALFUNCTION

This *alert display* is shown momentarily during **Game Mode** or **Power-Up** to alert the operator of a device malfunction (*device or mechanism doesn't energize or is energized repeatedly*). **OPERATOR ALERT!** works by monitoring any *switch activated device* that has the potential to trap a ball when disabled (*e.g. in the Shooter Lane, Scoop or Eject Holes, etc.*). This alert can

also appear if a switch associated with a device (e.g. Ball Trough, Auto Plunger, etc.) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in **Switch Alerts** (next page) and/or **Technician Alerts**.



Upon entering the **SERVICE MENU**, if an asterisk " \* " is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the **Red Buttons** (short-cut to the TECHNICIAN ALERTS MENU) or continue into the **SERVICE MENU** (press the **Black Button** again), select the "DIAG" Icon

and "TECH" Icon for the Technician Alerts information.

CAUTION! Remove all pinballs from the Ball Trough prior to lifting the playfield to it's full upright position for servicing. PULL OUT the Power Interlock Switch for operation. To eject pinballs, select the "DIAG" lcon from the MAIN MENU to enter the DIAGNOSTICS MENU. Select the "CLR" lcon to enter the BALL TROUGH TEST MENU. Press the Black [ SELECT ] Button. To return to the DIAGNOSTICS MENU, press the Green [ BACK ] Button. This feature also useful to retrieve a pinball for game testing in Switch or Coil Tests.



### 止∾|Go To Switch Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "SW" *Icon*. Switches are configured in an 4 X 16 Matrix of Rows [Switch Drives] and Columns [Sw. Returns] with up to 64 possible switches. Dedicated Switches are configured in a 2 X 16 Matrix of Rows [ Dedicated Sw. Drives / Ground ] and Column [ Ded.

Switch Returns ] with up to 32 possible dedicated switches (includes the 8 dip switch positions). The SWITCH TEST MENU consists of three (3) parts: Switch & Active Switch Tests and Switch Alerts to test all switches.

Reminder: The Flipper & Start Buttons (part of Switch Tests) are temporarily disabled as Service Menu Navigation Buttons during these test(s) so they can be tested and shown on-screen. Pressinng the Green [BACK] Button (Dedicated Switch D-21), Light Green-Black / Black (GND), will exit Switch Test or Active Switch Test.

#### Switch Test

To initiate, from the SWITCH MENU, select the "TEST" Icon. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open and the activation of coils is required. Upon entering Switch Test, you will notice that some switches are already indicated as closed. In the examples, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (pinballs at rest in the ball trough), along with the Flipper E.O.S. Dedicated Switches **D-10** & **D-12** (End-of-Stroke Switches are 'normally closed'). If the game has more flippers with E.O.S. Dedicated Switches, CPU Dip Switch Setting other than 1-8 OFF or switches stuck closed, more dots will be indicated (enter Active Switch Test to reveal the names).

In Switch Test, close each switch and observe the display (switch closure is accompanied by a short audible tone). In the example, the Black [ SELECT ] Button Dedicated Switch D-24 is pressed. The Dot Matrix Display will light up (highlight) the corresponding dot in the on-screen matrix, display the switch name, switch number and the Switch Drive / Fleturn wire colors. When not closing a switch, the display indicates NONE and the last switch number closure. For the Switch Matrix Grid and Dedicated Switch Grid, see Find-It-In-Front: Dr. Pinball, DR. 4 or escape out of this test and enter Active Switch Test (described below) to view the names of the switches closed. Note: Pressinng the Green [ BAĆK ] Button (Ded. Switch D-21), Lt. Green-Black / Black (GND), will exit the Switch Test.

CAUTION! COIL MECHANISMS WHEN ACTIVATED HAVE FAST MOVING PARTS! While performing Switch Test with the Coin Door closed or open (with the Power Interlock Switch is pulled out), DO NOT USE YOUR


FINGER to test switches which are associated with a coil mechanism such as a Vertical Up-Kicker (hole with a switch). Slingshots, Bumpers, etc.,




### 🐴 Active Switch Test


To initiate, from the SWITCH MENU, select the "ACT" Icon. In Active Switch Test, if any switches are stuck

closed (or normally closed from the presence of pin-ball(s) as in the Ball Trough), the display will flash the corresponding dot(s) in the on-screen matrix, display the name and the Switch Drive / Return wire colors. If more than one switch is closed, the switch information will change with each switch. This cycle continues until all switches are cleared or until Active Switch Test is exited. In the example, the Black [ SELECT ] Button Dedicated Switch D-24 is pressed and held down. The display will cycle and flash each dot, haming each switch which is closed. To determine the switch number, compare the highlighted dot to the same position in the Switch Matrix Grid at the beginning of this manual.

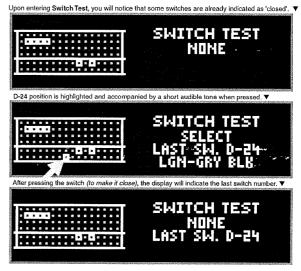

### Typical Switch Wiring & Schematic

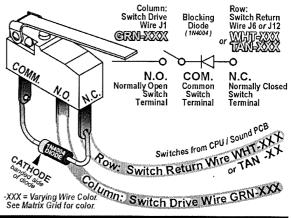

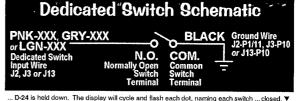

ACTIVE SWITCHES 

### Switch Alerts

To initiate, from the **SWITCH MENU**, select the "ALRT" *Icon*. In **Switch Alerts Menu**, possible inoperable switches are marked with an "X" (OUT OF SERVICE). Mark switches **IN** or **OUT OF SERVICE** by pressing the **Black Button** while the intended switch is highlighted and change with either of the **Red** Buttons. Switches which are determined as "OUT OF SERVICE" by the game or manually, will be automatically marked as "IN SERVICE" as soon as the game determines a valid switch closure (after adjusting, fixing or replacing the switch, then testing/actuating the switch). Note: A Factory Reset will also put the switch back "IN SERVICE" in which the game will need to redetermine if the switch should be marked OUT OF SERVICE.

### *.............* Go To Coil Menu

To initiate, from the DIAGNOSTICS MENU, select the "COIL" Icon. Coils #01 - #16 are typically High Current Coils (although Low Current Coils may be used in these positions & will be noted). Coils #17 -#32 are typically Low Current Coils. Flash Lamps are typically used in positions #25 - #32 (although Flash Lamps may be used in any position and will be noted). Auxiliary Coils may be used in positions #33 - #35.

Remember, use the **GREEN** Button to go [BACK], exit or escape, the RED Buttons to [</-] GO BACK [+/>] GO FORWARD, and the BLACK Button to [SELECT] ENERGIZE the coil (solenoid) or flash lamp.




### Single Coil Test

To initiate, from the **COIL MENU**, select the "TEST" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. Upon entering

Single Coil Test, you will notice the #1 coil is shown. The Dot Matrix Display will indicate the coil or flash lamp name, coil (solenoid) or flash lamp number and the Coil or Flash Lamp Power Line / Drive Transistor Control Line wire colors. To determine the "Pin-Outs" from the I/O Power Driver Board, the Coil Voltage Gauge-Turns (e.g. 23-800) or lamp type (e.g. #89 or #906 Bulb), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing, see the Yellow Pages (Schematics & Wiring).



### Typical Coil Wiring & Schematic

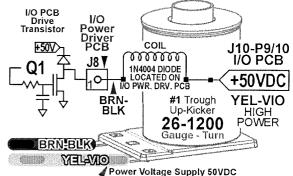

### Cycling Coil Test

To initiate, from the **COIL MENU**, select the "CYC" *Icon*. Ensure the **Power Interlock Switch** is pulled out if

testing with the Coin Door open. The test pulses each regular coil or flash lamp sequentially (cycling) on the Playfield and in the Backbox (if coils or flash lamps are used). The Dot

Matrix Display indicates the same information you will find in Single Coil Test.

# \*

### Go To Flash Lamps Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "FLASH" Icon. The two tests allows the technician to easily spot any burned-out flash lamps and replace them. Unlike Single Coil Test, which tests all coil (solenoids), including flash lamps, **Single** and **Cycling Flash Lamp Tests**, test only the flash lamps used in the game. Flash Lamps are typically used in positions #25 – #32 (although Flash Lamps may be used in any position and will be noted).

Remember, use the **GREEN** Button to go [ BACK ], exit *or* escape, the **RED** Buttons to [ < / - ] GO BACK / [ + / > ] GO FORWARD, and the **BLACK** Button to [ SELECT ] ENERGIZE the flash lamp.




### Single Flash Lamp Test

To initiate, from the FLASH LAMPS MENU, select the "TEST" Icon. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open. Upon entering Single Flash Lamp Test, you will notice the first Flash

Lamp is shown. The Dot Matrix Display will indicate the flash lamp name, flash lamp number and the Flash Lamp Power Line / Drive Transistor Control Line wire colors. To determine the "Pin-Outs" from the I/O Power Driver Board or lamp type (e.g. #89 or #906 Bulb), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing. see the Yellow Pages (Schematics & Wiring).



### Bulb Types used for Flash Lamps

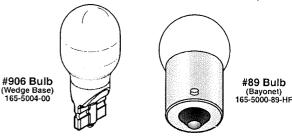

### Cycling Flash Lamp Test

To initiate, from the FLASH LAMPS MENU, select the

"CYC" Icon. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open. The test pulses each flash lamp sequentially (cycling) on the Playfield and in the Backbox (if flash lamps are used). The Dot Matrix Display indicates the same information you will find in Single Flash Lamp Test.

### Technician Alerts continued from previous page.

During game play, a pinball can get trapped or stuck. If after approximately 15 seconds of inactivity or "no scoring," Ball Search is startled. Note: If the pinball is



in the Plunger Lane or "held" on the flipper, no Ball Search will be performed. The game will perform one Ball Search in an attempt to "find" or free-up the pinball.

If the game does not see a switch closure (indicating the pinball has not been found), the Dot Matrix Display may indicate [ LOCATING PINBALLS PLEASE WAIT ... ], during which Ball Search will continue until the timer runs out (this feature will not happen if the game is in Competition Mode; Ball Search will continue until the pinball is found, unstuck and/or replaced manually). The display will momentarily acknowledge the missing pinball(s). The game will provide another pinball into play and will compensate for the lost pinball. Game play will appear normal.

Note: This detection and compensation will happen with every pinball, if each suffers the same fate of a ball trap. If all balls get trapped, the game cannot be played or started until the situation is rectified.

Important: Determine where the pinball is! Do not add pinball(s) until it is determined the pinball(s) are indeed missing and not just stuck. The most common places for a pinball to be stuck is in device holes (ejects and VUKs) or ball troughs. Determine that all devices are functionally properly. Check around plastic pieces and ramps to see if the pinball got jammed or stuck.

When the found pinball or a replacement pinball is added to the Ball Trough, the Technican Alert will immediately clear and will then indicate any remaining alerts (if present) or NO TECHNICIAN ALERTS.

Enter the BALL TROUGHTEST (review the previous page) to cycle the pinballs and to check proper switch and coil operation. If a pinball was added, and the originally stuck pinball has freed itself at a later time, the game will not operate correctly.

NOTE ON DEVICE MALFUNCTION: While in TECHNICIAN ALERTS MENU, if the following is displayed, the game has detected a "device malfunction." Check the device indicated (coil and/or switch).

TECHNICIAN ALERT - (2/2) DEUTCE MALFUNCTION JSE -/+ TO VIEW OTHER ALERTS



### Knocker Test

To initiate, from the DIAGNOSTICS MENU, select the "KNO- CKER" Icon. The digitally mastered "Knocker" is sounded. The knocker sound is used to alert the player if he/she has received a special, replay or a credit from the Match Award feature. Press the Black [ SELECT ] Button to activate the knocker. To return to the DIAGNOSTICS MENU, press the Green [ BACK ] Button.

..............

FACTOID: The knocker got it's name from the 'original knocker' (20th century pinball games), which used a coil and when energized (fired), the plunger would strike a wood panel inside the cabinet.

### Sound / Speaker Test

To initiate, from the **DIAGNOSTICS MENU**, select the "SPKR" Icon. This system produces true digital stereo sound from Backbox & Cabinet Speakers or "Mono" on

the Cabinet Speaker (when used by itself). This Menu is provided to allow the technician a simple method of testing the speakers if rewired or replaced.

Upon entering Sound / Speaker Test, you will notice the Dot Matrix Display indicating the first option of available music and/or sound(s) in this test. Press the Red [+/>] Button to cycle through the available music and/or sounds, and press the Black

SOUND / SPEAKER TEST JSIC: MAIN PL PRESS 'SELECT' TO PLAY

SOUND 🖊 SPEAKËR MUSIC: MAIN PL PLAYING SOUND #1

[ SELECT ] Button to play the option shown in the Dot Matrix Display. Press the Green [ BACK ] Button to exit.

### Speaker Phase Testing


Connections to each of speakers are polarized and each must be connected appropriately for the best quality sound. If one speaker has the positive and negative connections reversed with respect to the other one, bass frequencies will not be produced properly and the overall sound quality will be poor. To test for proper speaker phasing, use the Sound / Speaker Test to cycle through the available music and sound.

Speaker Phase Testing cont. next page.

## C())

### Speaker Phase Testing continued from previous page.

If the sound is not balanced or doesn't sound correct, check the speaker wiring.

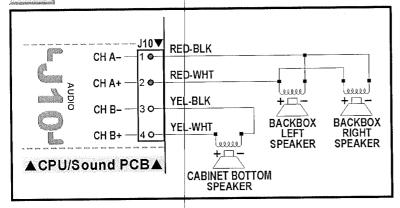

- 1. Check each speaker for polarity markings. If the speakers have polarity markings, verify that the Backbox Speaker's RED-BLK Wires and the Cabinet Speaker YEL-BLK Wire(s) are connected to the negative (–) terminal.
- 2. Disconnect the speaker output Connector J10 (AUDIO) from the CPU / Sound PCB (in the Backbox) and connect a 1.5-volt battery across each speaker pair one at a time while observing the speakers.
- 3. Make sure the positive (+) battery terminal is connected to the positive lead [ J10, Pin-2, CH A+ ] (RED-WHT) or [ J10, Pin-4, CH B+ ]

(YEL-WHT) each time. As the connection is made, check speaker cone movement; proper connections are indicated by outward movement.


### 

To initiate, from the **DIAGNOSTICS MENU**, select the "BURN" *Icon*. After selecting this *Icon*, press the **Black** [ **SELECT** ] **Button** to begin (initiate) the **Burn-In Test**. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open (required for coil function). Upon entering **Burn-In Test**, the game will exercise all CPU I/O Functions: **Dot Matrix Display Test**, **Coil Cycling Testing**, **All Lamps Test** and **Sound / Speaker Test**. Press the **Green** [ **BACK** ] **Button**, to pause and to view the cumulative Burn-In minutes. Press the **Green** [ **BACK** ] **Button** again to return to the **DIAGNOSTICS MENU**.

**Note:** To reset Burn-In minutes back to **0:00**, see Section **3**, Chapter **5**, **GO TO RESET MENU** (via the UTILITIES MENU), **Reset Factory Settings.** A CAUTION: Performing a FACTORY RESET will reset all other information as well (read the Utilities Section (**GO TO RESET MENU**), for more information).

## Dot Matrix Test

To initiate, from the DIAGNOSTICS MENU, select the "DOT TEST" *Icon*. After selecting this *Icon* the Dot Matrix Test immediately begins. The Dot Matrix Display will immediately and continuously illuminate and cycle each of the *5 Tests for 1 pass each*. To return to the DIAGNOSTICS MENU, press the Green BACK 1 Button.

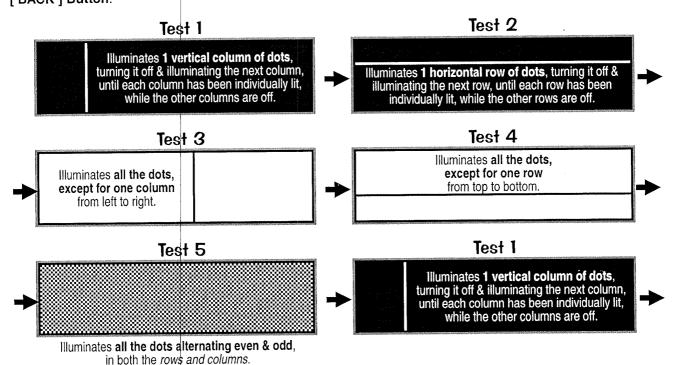

## Ticket Dispenser Test

To initiate, from the **DIAGNOSTICS MENU**, select the "TIX" *Icon*. This Menu *(Icon)* will only appear if **Standard Adjustment 56**, **Ticket Dispenser**, is set to **YES** (Default = **NO\***). \*Note: Some games shipped from the factory with a unique Dip Switch Setting will default to **YES**). To view and/or change your setting, see Adjustments Section (GO TO ADJUSTMENTS MENU). Please remember, if you install an optional Ticket Dispenser, and your default setting is "NO," you will have to reset it back to "YES" if a **Factory Reset** is performed.

After selecting this *Icon*, the *Ticket Dispenser Test* will start. With the Ticket Dispenser properly installed, manually feed your tickets into the dispenser. The dispenser will activate and pull in the first ticket. Press the **Black [ SELECT ] Button** (which energizes Coil #35, Aux 3: Switched Ground) to advance a ticket. Feeding your Tickets into the dispenser works because Coil #33, Aux 1: Ticket Advance (Enable) is always 'energized'. With a Ticket Meter installed, as one Ticket Passes through the Ticket Dispenser, one 'click' is fired to the Meter (Coil #34, Aux 2: Ticket Meter) for each ticket passing through. Dedicated Switch **D-19**, **Ticket Notch**, will also be indicated on-screen (in combination with a audible sound) as "closing" as the notch between the tickets passes through. In this test you can clear ticket jams and check and/or clear tickets in Escrow, if necessary. To return to the **DIAGNOSTICS MENU**, press the **Green [ BACK ] Button**.

CEUVSIAD BOOM	CPU/SND		Q4 SHV=37 GRN-YEL J1-P5	ORIVE 23 GRN-ORG J1-P4	O2 O2 OBIVES X GRN-RED J1-P3	OIV OI DRIVE GRN-BRN J1-P1	Sound Board
S.W.D-17	S.W. D.S S.W. D.S S.W	Wire Color				200	HELURNA WHI-BRN J6-P9
SILAM	PINK-RED 1/2-P3	Wire Color Abbreviations used: Black Blue Brown Gray Grown Light	S.W. #40 SHOOTER LANE (TOP) 500-8227-04 BELOW PF	The state of the s		8.W. #2 L 3 BANK #2 (MID) #15-7840-09 BELOW PF	HETURNA RETURNA RETURN
LGKET NOTCH FUSED	S.W. D-3 RIGHT BLOTH BLO	ons used:	S.W. #43			S.W. #3 L.3 BANK #3 (TOP) 515-7640-09 BELOW PF	IC-U22C RETURNAL RETURNAL JG-P7
LGN-YEL 113-PS S.W. D-20	PNK-YEL JZ-P6 S.W. D-4 FGN11 GCN SECT 180-620400 CON DOOR	BLX Black	S.W. #52			S.W. #4	MHI-YEL WHI-YEL WHI-YEL WHI-YEL
S.W.D-21 BACK			S.W. #/58 CENTER DCK/1 (BOT) 800-6227-04 BELOW PF			S.W. #5	REJURNA WHT-GRN J6-P5
LON-BLU LIB-PS S.W. D-222 MINUSS (RED)	PIK.BLU 12-18 3.W. D-6	BAN Brown	S.W. ##51 BOCK STAR STAR (LEST) 616-7568-02 BELOW PF	S.W. #813	S.W. #222 TROUGH JAM 515-0173-00 515-0174-00	S.W. #//6 TOP L'ANE RONNIE 500-8227-04 BELOW PF	REJURNA REJURNA 18-10-10-16-18-18-18-18-18-18-18-18-18-18-18-18-18-
GRAVIO GRAVIO GREDI		OTALA OTALA OTALA	S.W. #55 ROCK STAR STAR [RIGH]] 516-7568-02 BELOW PF	S.W. #39 MICK POS. #.5 520-5292-00 BELOW PF	S.W. #23 SHCOTER SHCOTER LANE LANE 180-5157-00 BELOW PF	S.W. #7 TOP LANE MICK 500-8227-04 BELOW PF	HEIURNY WHI-VIO J6-P2
LGN-GRY JIS-PIB SELECT (BLACK)	PINK-GRY JZ-P10 S.W. D-8 WICK- WICK- BELOW PF	CONTRACTOR OF THE CONTRACTOR O	S.W. #56 STAN TARGET TARGET RIGHD 615-5867-07 BELOW PF	S.W. #40	S.W. #22. LEFT OUTLANE 500-6227-04 BELOWPF	S.W. #8 TOP LANE KETH 500-6227-04 BELOW PF	NHI-GRY WHI-GRY
CPU/80	JUBOICERTED SWITCH  TO THE SWITCH  JUBOICERT  JUBOICER	Ligha Ganan	S.W. #57 STAR STAR STAR STAR STAR STAR STAR STAR	S.W. #41 LORBIT SPINNER 180-5010-04 ABOVE PF	S.W. #25 LETT RETURN CANE 500-6227-04 BELOW PF	S.W. #9 TOP LANE CHARLIE 600-8227-04 BELOW PF	IC-U16D IC-U36A IC-U16D IC-U36A ETURNA RETURNA IHI-GRY TAN-BLK J6-P1 J12-P9
CPU/8OUND BD. 8 W.D-25 8.W.D-26 8.W			S.W. #58	S.W. #42 L. RAMP EXIT 180-5087-00 ABOVE PF	S.W. #23 LEFT SLINGSHOT 180-5054-00 BELOW PF	#9 S.W. #10 ANE R.3 BANK IE #1 (BOT) 17-04 515-7640-07 V PF BELOW PF	IC-URGB RETURNA TAN-RED J12-P8
	LOCATIO	TIME	S.W. #59	S.W. #7.53 POP BUNIPER LANE 500-8775-01 ABOVE PF			
SWITCH	GINAVEL JAPPE S.W. DAD S. FLD ASM. FLD ASM.	Red	S.W. #60	S.W. EZZ	S.W. #23 RIGHT RETURN LANE 500-6227-04 BELOW PF	3 BANK R. 3 BANK 12 (MID) #3 (TOP) 15784047 515784047 BELOW PF	IC-U36C IC-U36D II IUMNINETUNNINET N-ORG TAN-YEL TAI 12-P7 J12-P6 J
(located L.W.D.29 S	LOCATIONS: next page)  IC ULL GREAGE GREATE GREATH GREATH SAPA LASE GREAGES GREATH SAPA LASE GREATH SAPA LASE GREATH SAPA LASE GREATH SAPA LASE GREATH FLORE RIGHT LEST FLORER POOT CABNET FLORAN. CASINET	TZALY!	S.W. #/51	S.W. E/15 R. RAMP EXIT 180-5087-00 ABOVE PF	S.W. #25 RIGHT OUTLANE 500-6227-00 BELOW PF	S.W. #18	IC-U40A REJUANYA TAN-GRN
between Co	D-14	Widen Widen	S,WJ #62	S.W. #/4/5 CENTER LOCK 2 (TOP) 500-6776-01 ABOVE PF	S.W. #30 LEFT POP BUMPER 180-5015-04 BELOWPF	S.W. #14	IC-U40B RETURNY TAN-BLU
W1 DIP \$WITCH (located between Connectors J3/J13) LD-27 S.W.D-28 S.W.D-29 S.W.D-30 S.W.D-31 S.W.D-32 LD-37 S.W.D-38 S.W.D-39 S.W.D-31 S.W.D-31 S.W.D-31	GHY-MO GRY-PLX JS-P3 SW-D-15 S-W-D-16 RIGHT POST SOC-8889-01 CABINET	OCCUPANTA LIGHTAN	S.W. #83	S.W. #47	S.W. #/ST RIGHT POP BUMPER 180-5015-04 BELOW PF	SW. #16 TOURN START START 180-5174-00 180-5174-00 CABINET CABINET	CCU22A CCU22B CCU22C CCU22D CCU32B CCU36B CC
J3/J13) 1.W.D-372	10 014 11 00 014 11 00 014	Assignant Assignation Assignat	S.W. #81	S.W. #48 RIGHT ORBIT 500-6227-04 BELOWPF	S.W. F. E.P. BOTTOM POP BUMPER 180-5015-04 BELOW PF	S.W. #16 START 180-5174-00 CABINET	HEIURIV TAN-WH









SWITCH MENU: SWITCH, ACTIVE, SINGLE & SERVICE

### **SWITCH LOCATIONS** {Switch Matrix Grid : previous page}

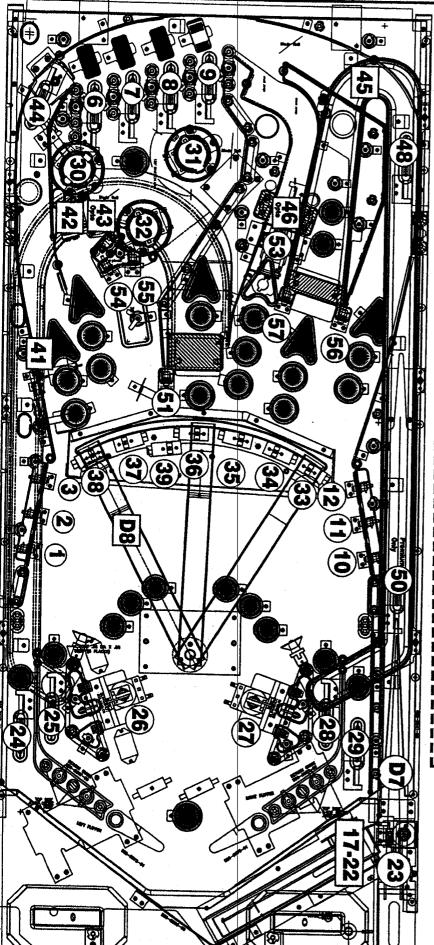

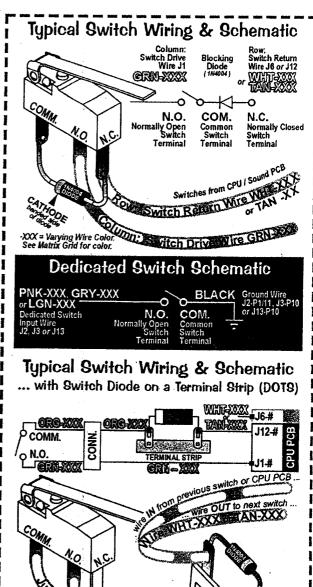


XXXXX Row: Switch Return

-XXX = Varying Wire Color. See Matrix Grid for color.

or witch Drive Wire GRN


<b>ā</b> \	IC-U16 //		U14	IC-U13 P	IC-U12   Comment of the comment of t	16-011 18/06 YEL-VIO	IC-DIS INVDE
YEL-BRN J13-P9	YEL-RED J13-P8	113-P7	JI3-P6	1	J13-P4	J13-P3 # 555 CLEARL P. #7	J13-P1 # 555 CLEARL P. #8
# 555 CLEAR LP. #1 GROUND START BUTTON	# 555 CLEAR LP. #12 # TOURN STADT DURTON	SHOOT AGAIN		LEFT RETURN	RIGHT RETU		(V)
RED-BRN J12-P1		185-5002-00					165-5002-0
# 555 CLEAR L.P.	# 555 CLEAR L.P. #10	# 555 CLEAR L.P. [//11]	2	# 26	*	# 555	# 555 CLEARL P. E. LO
		GUITAR#3	GUITAR#2 (MID)	GUI PAK#1 (BOT)		RECORD	ARROW
FIED-51 K		165-5002-00	165-5002-00	165-5002-00	165-5002-00		165-5002
	# 555 CLEAR L.P. #17 # 555 CLEAR L.P. #18 #		555 CLEAR L.P. #19 #44 CLEAR L.P. #20	#	# 555 CLEARLP. # 222	نن #	# 555 CLEARL P. E. Z.
CAST POP LANE	POPLANE	<u>C</u>	START#1	LEFT RAMP	LEFT RAMP	LEFT RAMP	PLAY RECORDS
RED-ORG (X)	RECORD	ARKOW 165-5002-00	(LEF!) 165-5000-44-HF	165-5002-00	165-5002-00	165-5002-00	165-5002
# 555 CI FAR	# 555 CLEAR	-	# 555 CLE	# 555 CLEAR L.P. 1/29	# 555 CLEAR LP. #80	# 555 CLEARL P. #81	# 555 CLEARL P. #32
GENTER LANE	CENTER LANE	CENTER LANE	RIGHT RAMP	RIGHT RAMP RECORD	RIGHT RAMP ARROW	WORLD TOUR	FAST SCORING
RED-YEL 112-P4 112-P4		165-5002-00	165-5002-00	165-5002-00	165-5002-00	165-5002-00	165-5002-00
# 555 CLEAR L.P. #88	# 555 CLEAR	# 555 CLEAR L.P. 1/485	# 555 CLEAR L.P. #86	# 44 CLEAR L.P. E. 87	#44 CLEAR L.P.E.83	# 555 CLEARL P. E. K.	# 555 CLEARL P. E. E.
GEOUND STAR	RECORDS	. <u> </u>	COMBOS	STAR#2 (CENTER)	STAR#3 (RIGHT)	EXTRA BALL	
J12-P5 165-5002-00	165-5002-00		165-5002-00	165-5000-44-HF			165-5002-00
# 555 CLEAR L.P. #44	# 555 CLEAR L.P. #41 # 555 CLEAR L.P. #42	*	70	¥ 22	# 22	# 22 #	# 555 CLEARLE.
GROUND RIGHT ORBIT RED-BLU (X)	RIGHT	RIGHT LOOP ARROW	TOP LANE (RONNIE)	TOP LANE (MICK) 185-5002-00	(KEITH)	(CHARLIE)	#7 (#WAY) 165-5002-00
165-5002-00	# 555 CI FAR 1 P # 50	# 555 CLEAR L.P. #51	# 555 CLEAR L.P. #52	# 555 CLEAR	L.P. #54	L.P. #55	F. #56
GROUND #6	MICK POS. #4	1. P. J. Tr.	MICK.	MICK POS. # 1 (RIGHT)			
165-5002-00	165-5002-00	165-5002-00 1 <b>D</b> #50 1 FD	1 P #50	165-5002-00	LED L.P. #62	L.P. #63	L.P. #64
Q40 FROUND			LEFT	RIG POD BI	BOTTOM POP BUMPER		
RED-GRY	MUL HBALL 165-5002-00		ם ס	112-6024-08	112-5024-08		
L.P. #65	5 LP, #66	L.P. #67	L.P. #68	l.P. #69	L.P. #70	L.P. #47	L.P. #72
GROUND RED-WHT							
L.P. #73	B L.P. #74	L.P. #75	L.P. #76	LP. #77	LP. #78	L.P. #79	L.P. #80
042 erejukb							
.112-P11							100

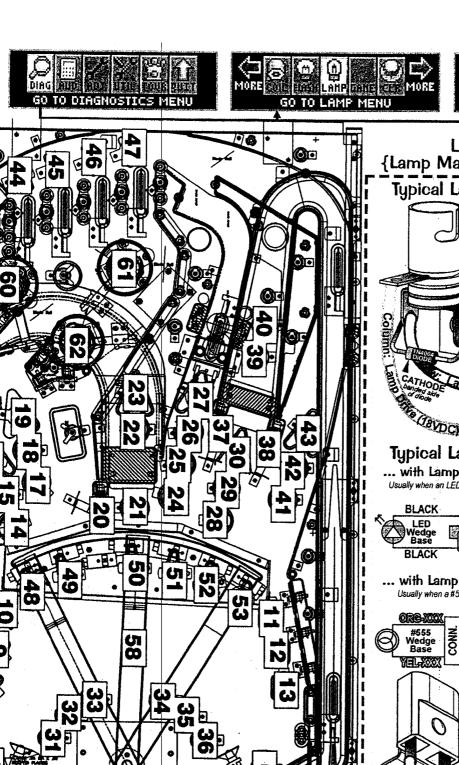



LAMP MENU: ONE, ALL, ROW, COLUMN & ORDERED

# LAMP LOCATIONS {Lamp Matrix Grid : previous page} Typical Lamp Wiring & Schematic

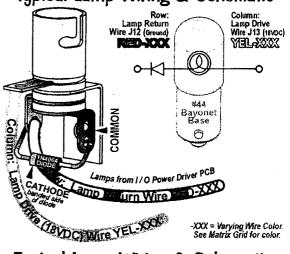


### Typical Lamp Wiring & Schematic

... with Lamp Diode on a Terminal Strip (DOTS)
Usually when an LED Module is used as a Controlled Lamp for a Pop Bumper.




... with Lamp Diode on a Terminal Strip (DOTS)
Usually when a #555 Bulb is used as a Controlled Lamp for a Spot Light.

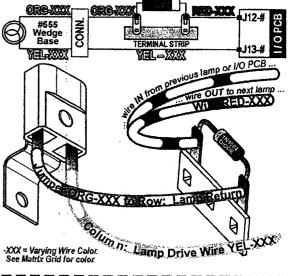


### **COILS DETAILED CHART TABLE**

	High Current Coils Gro	oup 1 T	Drive ransistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#1	TROUGH UP-KICKER		Q1		YEL-VIO	J10-P9/10	50VDC	BRN-BLK	J8-P1	26-1200 090-5044-ND
#2	AUTO LAUNCH		Q2		YEL-VIO	J10-P9/10	50VDC	BRN-RED	J8-P3	24-940 090-5036-ND
#3	CENTER LOCKUP (UP)		Q3	<b>A</b>	YEL-VIO	J10-P9/10	50VDC	BRN-ORG	J8-P4	26-1200 090-5044-ND
#4	CENTER LOCK UP (LAT	CH)	Q4	I/O Power	YEL-VIO	J10-P9/10	50VDC	BRN-YEL	<b>J8-P</b> 5	32-1800 5 090-5031-00
#5	MAGNET (LEFT)		Q5	Driver	VIO-YEL	J10-P8	50VDC	BRN-GRN	J8-P6	22-600 090-5076-00
#6	LEFT CONTROL GATE		Q6	▼	YEL-VIO	J10-P9/10	50VDC	BRN-BLU	J8-P7	32-1250 090-5060-01
#7	MAGNET (RIGHT)		Q7		VIO-YEL	J10-P8	50VDC	BRN-VIO	J8-P8	22-600 090-5076-00
#8	SHAKER MOTOR (OPT	ONAL)	Q8		RED-WHT	J17-P7	16VAC	BRN-GRY	J8-P9	502-5027-00
	High Current Coils Gr	oup 2 <sub>T</sub>	Drive ransistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turr or Bulb Type
#9	LEFT POP BUMPER		Q9		YEL-VIO	J10-P9/10	50VDC	BLU-BRN	J8-P1	26-1200 090-5044-ND
#10	RIGHT POP BUMPER		Q10		YEL-VIO	J10-P9/10	50VDC	BLU-RED	J8-P2	25-1200 090-5044-ND
#11	BOTTOM POP BUMPER	₹	Q11	•	YEL-VIO	J10-P9/10	50VDC	BLU-ORG	J8-P4	26-1200 090-5044-ND
#12			Q12	I/O Power			N.	8LU-YEL	J8-P5	C
#13	LEFT SLINGSHOT		Q13	Driver	YEL-VIO	J10-P9/10	50VDC	BLU-GRN	J8-P6	26-1200 090-5044-ND
#14	RIGHT SLINGSHOT		Q14		YEL-VIO	J10-P9/10	50VDC	BLU-BLU	J8-P7	26-1200 090-5044-ND
#15	LEFT FLIPPER (50V F	RED/YEL)	Q15		GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50v DC	ORG-GRY	J8-P8	23-1500 090-5062-ND
,										
#16	RIGHT FLIPPER (50V	RED/YEL)	Q16		BLU-YEL-3A Fuse-RED-YE	J10-P6/7	50v DC	ORG-VIO	J8-P9	22-1080 090-5032-ND
#16	RIGHT FLIPPER (50V	vin 1	Drive	Driver Output PCB	BLU-YEL-3A Fuse-RED-YEI		Power	ORG-VIO  Drive Transistor Control Line Color	D.T. Control	Coil GA-Turn
#16 #17		oup 1 T	Drive		BLU-YEL-3A Fuse-RED-YEI	J10-P6/7	Power	Drive Transistor	D.T. Control	Coll GA-Turn or Bulb Type 26-1200
	Low Current Coils Gro	oup 1 <sub>T</sub>	Drive ransistor		BLU-YEL-3A Fuse-RED-YEI Power Line Color	J10-P6/7 Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	090-5032-Nb Coil GA-Turn or Bulb Type 26-1200 # 090-5044-NB
#17	Low Current Coils Gro LEFT UP / DOWN POS	oup 1 <sub>T</sub>	Drive ransistor Q17		BLU-YEL-3A Fuse-RED-YEI Power Line Color BRN	J10-P6/7 Power Line Connection J7-P1	Power Voltage 20VDC	Drive Transistor Control Line Color VIO-BRN	D.T. Control Line Connect	090-5032-Nb Coil GA-Turn or Bulb Type 26-1200 # 090-5044-NB
#17 #18	LOW Current Coils Gro LEFT UP / DOWN POS MICK MOTOR RELAY (	oup 1 <sub>T</sub> T LEFT) RIGHT)	Drive ransistor Q17		BLU-YEL-3A Fuse-RED-YEI Power Line Color BRN BRN	J10-P6/7 Power Line Connection J7-P1 J7-P1	Power Voltage 20VDC 20VDC	Drive Transistor Control Line Color VIO-BRN VIO-RED	D.T. Control Line Connect J7-P2 J7-P3	090-5032-ND Coil GA-Turn or Bulb Type 28-1200 090-5044-ND 190-5004-01 190-5004-01 #89 BULB 165-5000-89
#17 #18 #19	LEFT UP / DOWN POST MICK MOTOR RELAY (	tup 1 T LEFT) RIGHT)	Drive ransistor Q17 Q18 Q19	A I/O	BLU-YEL-3A Fuse-RED-YEL Power Line Color BRN BRN BRN	J10-P6/7 Power Line Connection J7-P1 J7-P1 J7-P1	Power Voltage 20VDC 20VDC	Drive Transistor Control Line Color VIO-BRN VIO-RED VIO-ORG	J7-P2 J7-P3 J7-P4	090-5032-ND  Coll GA-Turn or Bulb Type 28-1200 990-5044-ND  190-5004-01  #89 BULB 185-5000-89
#17 #18 #19 #20	LOW CUrrent Coils Gro LEFT UP / DOWN POS <sup>2</sup> MICK MOTOR RELAY ( MICK MOTOR RELAY ( FLASH: BACKPANEL (F	tup 1 T LEFT) RIGHT)	Q17 Q18 Q19	i / O Power	BLU-YEL-3A Fuse-RED-YEL Power Line Color BRN BRN BRN ORG	Power Line Connection J7-P1 J7-P1 J7-P1 J6-P10	Power Voltage 20VDC 20VDC 20VDC	Drive Transistor Control Line Color VIO-BRN VIO-RED VIO-ORG VIO-YEL	D.T. Control Line Connect J7-P2 J7-P3 J7-P4 J7-P6	090-5032-ND  Coil GA-Turn or Bulb Type 28-1200 090-5044-ND  190-5004-01  190-5004-01  189-BULB 185-5000-89  #89-BULB
#17 #18 #19 #20 #21	LOW Current Coils Gro LEFT UP / DOWN POST MICK MOTOR RELAY ( MICK MOTOR RELAY ( FLASH: BACKPANEL (I FLASH: BACKPANEL (I	tup 1 T LEFT) RIGHT)	Drive rensister Q17 Q18 Q19 Q20 Q21	I / O Power Driver	BLU-YEL-3A Fuse-RED-YEL Power Line Color BRN BRN BRN ORG	J10-P6/7  Power Line Connection  J7-P1  J7-P1  J7-P1  J6-P10  J6-P10	Power Voltage 20VDC 20VDC 20VDC 20VDC	Drive Transistor Control Line Color VIO-BRN VIO-RED VIO-ORG VIO-YEL VIO-GRN	D.T. Control Line Connect J7-P2 J7-P3 J7-P4 J7-P6 J7-P7	090-5032-Nb  Coil GA-Turn or Bulb Type 28-1200 090-5044-Nb  190-5004-01  #89 BULB 165-5000-89  #89 BULB
#17 #18 #19 #20 #21 #22	LOW CUrrent Coils Gro LEFT UP / DOWN POS MICK MOTOR RELAY ( MICK MOTOR RELAY ( FLASH: BACKPANEL (I FLASH: BACKPANEL (I FLASH: RAMP (LEFT) FLASH: LIPS	RIGHT) LEFT)	Drive ransistor Q17 Q18 Q19 Q20 Q21 Q22	i / O Power Driver	BLU-YEL-3A Fuse-RED-YEL Power Line Color BRN BRN BRN ORG ORG	J10-P6/7  Power Line Connection  J7-P1  J7-P1  J7-P1  J6-P10  J6-P10  J6-P10	Power Voltage 20VDC 20VDC 20VDC 20VDC 20VDC 20VDC	Drive Transistor Control Line Color VIO-BRN VIO-RED VIO-ORG VIO-YEL VIO-GRN VIO-BLU	D.T. Control Line Connect J7-P2 J7-P3 J7-P4 J7-P6 J7-P7 J7-P8	090-5032-ND Coil GA-Turr or Bulb Type 28-1200 090-5044-ND 190-5004-01 190-5004-01 #99 BULB 165-5000-89 #85 BULB 165-5000-89 #161 BULB 165-5032-00
#17 #18 #19 #20 #21 #22 #23	LOW CUrrent Coils Gro LEFT UP / DOWN POS MICK MOTOR RELAY ( MICK MOTOR RELAY ( FLASH: BACKPANEL (F FLASH: BACKPANEL (LEFT) FLASH: RAMP (LEFT)	Dup 1 T LEFT) RIGHT) RIGHT) LEFT) METER)	Drive ransister Q117 Q18 Q19 Q20 Q21 Q22 Q23 Q24	i / O Power Driver	BLU-YEL-3A Fuse-RED-YEL Power Line Color  BRN  BRN  ORG  ORG  ORG  ORG  ORG	J10-P6/7  Power Line Connection  J7-P1  J7-P1  J7-P1  J6-P10  J6-P10  J6-P10  J6-P10  J6-P10  J6-P10	Power Voltage 20VDC 20VDC 20VDC 20VDC 20VDC 20VDC Power Powe	Drive Transistor Control Line Color VIO-BRN VIO-RED VIO-ORG VIO-YEL VIO-GRN VIO-BLU VIO-BLK VIO-GRY	D.T. Control Line Connect J7-P2 J7-P3 J7-P4 J7-P6 J7-P7 J7-P8 J7-P9 J7-P10	090-5032-ND Coil GA-Turr or Bulb Type 28-1200 090-5044-ND 190-5004-01 190-5004-01 # 89 BULB 165-5000-89 # 85 BULB 165-5000-89 # 161 BULB 165-5032-00 COIN METER
#17 #18 #19 #20 #21 #22 #23	LOW CUrrent Coils Gro LEFT UP / DOWN POST MICK MOTOR RELAY ( MICK MOTOR RELAY ( FLASH: BACKPANEL (L FLASH: BACKPANEL (L FLASH: RAMP (LEFT) FLASH: LIPS OPTIONAL (e.g. COIN M	Dup 1 T LEFT) RIGHT) RIGHT) LEFT) METER)	Drive ransister Q117 Q18 Q19 Q20 Q21 Q22 Q23 Q24	i / O Power Driver	BLU-YEL-3A Fuse-RED-YEL Power Line Color  BRN  BRN  ORG  ORG  ORG  ORG  ORG	J10-P6/7  Power Line Connection  J7-P1  J7-P1  J7-P1  J6-P10  J6-P10  J6-P10  J6-P10  J6-P10  J6-P10	Power Voltage 20VDC 20VDC 20VDC 20VDC 20VDC 20VDC Power Powe	Drive Transistor Control Line Color VIO-BRN VIO-RED VIO-ORG VIO-YEL VIO-GRN VIO-BLU VIO-BLK VIO-GRY	J7-P2 J7-P3 J7-P4 J7-P6 J7-P7 J7-P8 J7-P9 J7-P10	090-5032-ND Coil GA-Turr or Bulb Type 28-1200 990-5044-ND 190-5004-01 190-5004-01 #99 BULB 165-5000-89 #89 BULB 165-5000-89 #161 BULB 165-5032-00 COIN METER Coil GA-Turr or Bulb Type #89 BULB
#17 #18 #19 #20 #21 #22 #23	LOW Current Coils Gro LEFT UP / DOWN POS MICK MOTOR RELAY ( MICK MOTOR RELAY ( FLASH: BACKPANEL (F FLASH: BACKPANEL (F FLASH: RAMP (LEFT) FLASH: LIPS OPTIONAL (e.g. COIN F LOW Current Coils Gro	Dup 1 T LEFT) RIGHT) RIGHT) LEFT) METER)	Drive ransistor Q17 Q18 Q19 Q20 Q21 Q22 Q23 Q24 Drive ransistor	i / O Power Driver	BLU-YEL-3A Fuse-RED-YEL Power Line Color  BRN  BRN  ORG  ORG  ORG  ORG  Power Line Color	Power Line Connection  J7-P1  J7-P1  J7-P1  J6-P10  J6-P10  J6-P10  J6-P10  J6-P10  Power Line Connection	Power Voltage 20VDC 20VDC 20VDC 20VDC 20VDC 20VDC 5VDC	Drive Transistor Control Line Color VIO-BRN VIO-RED VIO-ORG VIO-YEL VIO-GRN VIO-BLU VIO-BLK VIO-GRY  Drive Transistor Control Line Color BLK-BRN	D.T. Control Line Connect J7-P2 J7-P3 J7-P4 J7-P6 J7-P7 J7-P8 J7-P9 J7-P10 D.T. Control Line Connect J6-P1	090-5032-ND Coil GA-Turror Buib Type 28-1200 090-5044-ND 190-5004-01 190-5004-01 #89 BULB 165-5000-89 #89 BULB 165-5000-89 #161 BULB 165-5032-00 COIN METER
#17 #18 #19 #20 #21 #22 #23 #24	LOW CUrrent Coils Ground LEFT UP / DOWN POST MICK MOTOR RELAY (MICK MOTOR MOTO	Dup 1 T LEFT) RIGHT) RIGHT) LEFT) METER)	Drive rensister Q117 Q118 Q19 Q20 Q21 Q22 Q23 Q24 Drive rensister Q25	i / O Power Driver	BLU-YEL-3A Fuse-RED-YEL Power Line Color  BRN  BRN  ORG  ORG  ORG  ORG  ORG  ORG  ORG  O	J10-P6/7  Power Line Connection  J7-P1  J7-P1  J6-P10  J6-P10  J6-P10  J6-P10  J6-P10  J6-P10  J16-P4-8	Power Voltage 20VDC 20VDC 20VDC 20VDC 5VDC 5VDC 20VDC 20VDC 5VDC	Drive Transistor Control Line Color VIO-BRN VIO-RED VIO-ORG VIO-YEL VIO-GRN VIO-BLU VIO-BLK VIO-GRY	J7-P2 J7-P3 J7-P4 J7-P6 J7-P7 J7-P8 J7-P9 J7-P10	090-5032-ND  Coil GA-Turd or Bulb Type 28-1200 090-5044-ND  190-5004-01  #89 BULB 165-5000-89  #89 BULB 165-5000-89  #161 BULB 165-5000-89  #161 BULB 165-5000-89  #161 BULB 165-5000-89  #161 BULB 165-5000-89

# 89 BULB 165-5000-89 #29 FLASH: BOTTOM ARCH (X2) Driver ORG J6-P10 Q29 20VDC **BLK-GRN** J6-P5 CENTER UP / DOWN POST BRN J7-P1 Q30 20VDC **BLK-BLU** J6-P6 # 89 BULB 165-5000-89 #31 FLASH: ROCK STAR Q31 **ORG** J6-P10 20VDC BLK-VIO J6-P7 26-1200 090-5044-ND RIGHT UP / DOWN POST Q32 BRN J7-P1 20VDC **BLK-GRY** J6-P8

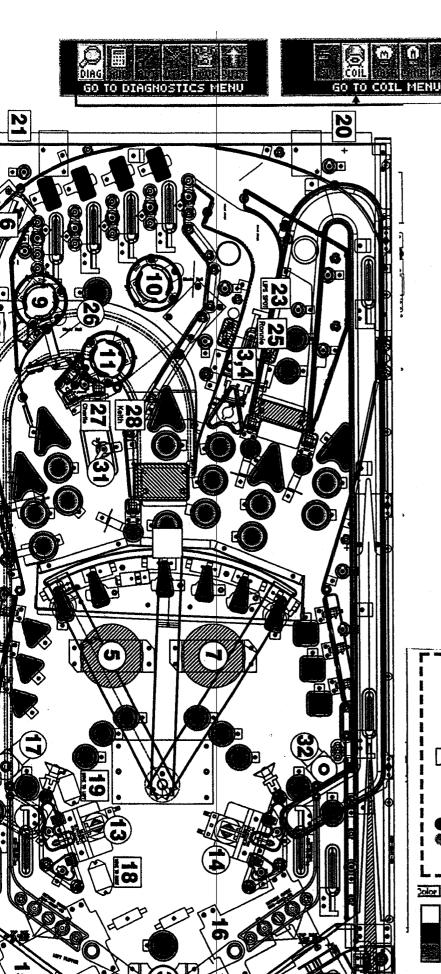



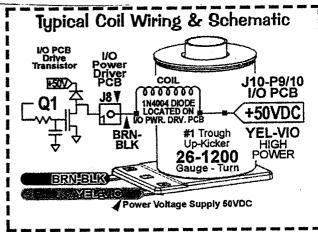


Color of Mini-Mars or Flash Lamp Bulb.

= Coils / Flash Lamps above Playfield.


= Coils / Flash Lamps below Playfield. = Coils / Flash Lamps on Back Panel. # Flash

Coil Q24 is Optional.
If either a Coin Meter, Token
Dispenser or Knocker (all
optional equipment) is
required, call Technical
Support for more information, 1-800-542-5377 or
1-708-345-7700.

### Pinball Service Menu Icon Tree

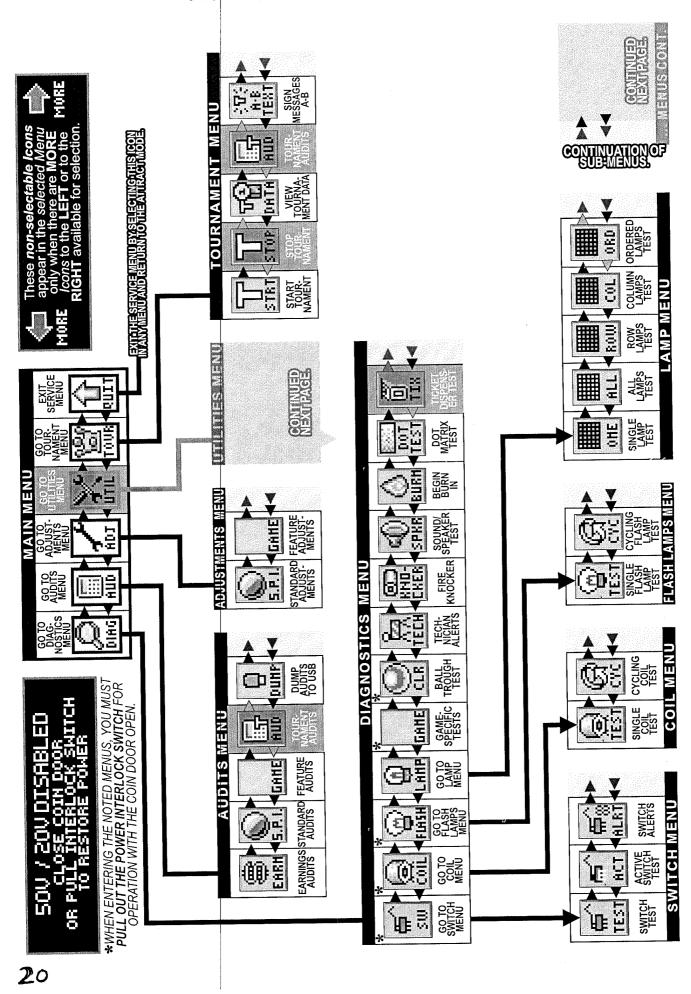

### Pinball Service Menu Icon Tree Continued

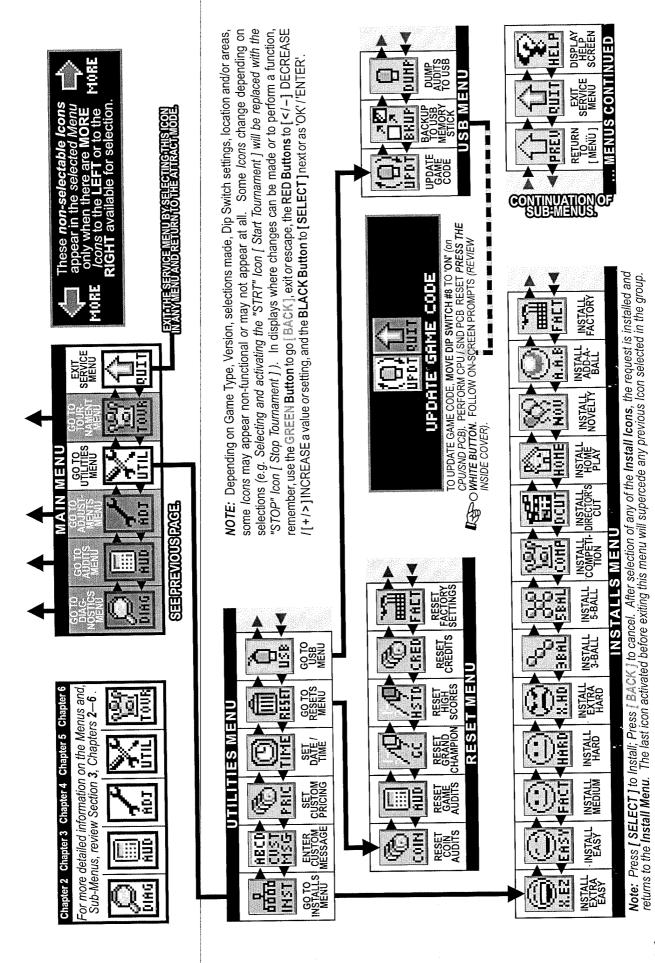



To initiate, from the MAIN MENU, select the "AUD" *Icon*. The AUDITS MENU provides 99\* Audits for accounting purposes and for evaluation of *Game Programming*. The Audits are divided into 4 groups: • Earnings Audits [#1 – #13], • Standard Audits [#1 – #59], • Feature Audits (Programming Use Only) [#1 – #+] and \* Tournament Audits [#1 – #4], "T AUD" *Icon* provided as an alternate access to Tournament Audits (\*if data is available). For more information on the TOURNAMENT MENU, review the Tournament Section (GO TO TOURNAMENT MENU). Try the "DUMP AUDITS TO USB" feature to create a text file of your audits. Don't forget to set the DATE & TIME in the UTILITIES MENU. See the Utilities Section (GO TO UTILITIES MENU), for more information.

Audits which are named **Proprietary** are also for *Future Expansion* or *Programming*. Game code may get upgraded during production; compare all Audits in the Dot Matrix Display with the manual and make any corrections, as necessary. Audits are subject to change (with or without notice).

All **AUDITS MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional *or* may not appear at all. **Icons** and/or **functions**, **order** and **operation** are subject to change.

In displays where changes can be made *or* to perform a function, use the **GREEN Button** to go [ **BACK** ], exit *or* escape, the **RED Buttons** to [ </-] MOVE BACK / LEFT / [ + / > ] MOVE FORWARD / RIGHT to view the next audit in the group, and the **BLACK Button** to [ **SELECT** ] the sub-menus.

### 


### Earnings Audits [ #1 - #13 ]

To initiate, from the AUDITS MENU, select the "EARN" *Icon*. The Dot Matrix Display will indicate the audit number (in this group), audit name and the audit total or value. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- #1 TOTAL PAID CREDIT\$ [0]: Total number of Paid Credits.
- #2 FREE GAME PERCENTAGE [ 0% ]: Percentage value is 'Total Free Plays' (Standard Audit 15) divided by 'Total Plays' (Standard Audit 16).
- #3. AVERAGE BALL TIME [ 0:00 ]: In seconds, the average ball time is derived from the total play time divided by Standard Audit | 1, Total Balls Played.
- #4 AVERAGE GAME TIME [0:00]: The average game time is expressed in minutes and seconds.
- #5 COINS THROUGH LEFT SLOT [0]: Total 'Left Coin Slot' Dedicated Switch (D-1) closures.
- #6 COINS THROUGH RIGHT SLOT [0]: Total 'Right Coin Slot' Dedicated Switch (D-3) closures.
- #7 COINS THROUGH CENTER SLOT [ 0 ]: Total 'Center Coin Slot' Dedicated Switch (D-2) closures.
- #8 COINS THROUGH FOURTH SLOT [0]: Total '4th Coin Slot' Dedicated Switch (D-4) closures.
- #9 COINS THROUGH FIFTH SLOT [0]: Total '5th Coin Slot' Dedicated Switch (D-5) closures.
- #10 TOTAL COINS [0]: Total amount of coins registered through all the Coin Slots.
- #11 **TOTAL EARNINGS [ USD 0.00 ] :** Total cash value accumulated since the last Factory Reset occurred (reveiw the Utilities Section (GO TO RESET MENU), Reset Coin Audits).
- #12 **METER CLICKS [ 0 ]** Total number of money clicks accumulated.

  Based on the country's lowest coin denomination used for the game credit.
- #13 **SOFTWARE METER [ 0 ] :** Continuing total of Meter Clicks. This audit cannot be reset; the display shows the constant addition of Meter Clicks.

## 

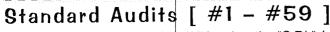

To initiate, from the **AUDITS MENU**, select the "S.P.I." *Icon*. The Dot Matrix Display will indicate the *audit number (in this group)*, *audit name* and the *audit total or value*. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- TOTAL BALLS PLAYED [ 0 ]: Total number of Regular and Extra Balls. #1
- TOTAL EXTRA BALLS [0]: Total number of Extra Balls awarded. #2
- EXTRA BALLS PERCENTAGE [ 0% ]: Percentage value is 'Total Extra Balls' (Standard Audit 2) divided by #3 'Total Plays' (Standard Audit 16).
- REPLAY 1 AWARDS [0]: Total Awards (Credits, Extra Balls or Scores) for Level 1. #4
- REPLAY 2 AWARDS [0]: Total Awards (Credits, Extra Balls or Scores) for Level 2. #5
- REPLAY 3 AWARDS [0]: Total Awards (Credits, Extra Balls or Scores) for Level 3. #6
- REPLAY 4 AWARDS [0]: Total Awards (Credits, Extra Balls or Scores) for Level 4. #7
- TOTAL REPLAYS [0]: Total Awards (Credits, Extra Balls or Scores) for exceeding Replay Score Levels. #8
- REPLAY PERCENTAGE [ 0% ]: Percentage value is 'Total Replays' (Standard Audit 8) divided by 'Total Plays' (Standard Audit 16). The percentage reflects replay total awards for exceeding replay score levels. #9
- #10 TOTAL SPECIALS [0]: Total Awards (Credits, Extra Balls, or Scores) for making Specials.
- SPECIAL PERCENTAGE [ 0% ]: Percentage value is 'Total Specials' (Standard Audit 10) divided by 'Total Plays' (Standard Audit 16).
- #12 **TOTAL MATCHES [ 0 ] :** Total *Credits* awarded for matching the last two digits of the score with the *System-Generated Match Number* at the end of the game. Percentage of *Match Credits* is adjustable from **0%** to 10% or OFF by Standard Adjustment 19, Match Percentage, if enabled (review the Adjustments Section (GO TO ADJUSTMENTS MENU), Standard Adjustments).
- #13 HIGH SCORE AWARDS [0]: Total Awards (Credits, Extra Balls, or Scores) for exceeding the High-Score-To-Date scores
- HIGH SCORE PERCENT [ 0% ]: Percentage value is 'High Score Awards' (Standard Audit 13) divided by 'Total Plays' (Standard Audit **16**).
- #15 TOTAL FREE PLAYS [0]: Total Free Credits for Replays, High-Score-To-Date, Specials and Match.
- #16 **TOTAL PLAYS** [ 0 ]: This total is derived by adding the sum of 'Total Paid Credits' (Earnings Audit 1) and 'Total Free Plays' (Standard Audit 15). Note: Free credits are not recorded in the Audit until actually used.
- 0.0M-1.99M SCORES [ 00 ]: Total number of games the Player's final score was between 0 and 1,999,990 points.
- #18 2.0M-3.99M SCORES [ 00 ]: Total number of games the Player's final score was between 2,000,000 and 3,999,990 points.
- #19 4.0M-5.99M SCORES [00]: Total number of games the Player's final score was between 4,000,000 and 5,999,990 points.
- #20 6.0M-7.99M SCORES [ 00 ]: |Total number of games the Player's final score was between 6,000,000 and 7,999,990 points.
- 8.0M-9.99M SCORES [ 00 ]: |Total number of games the Player's final score was between #21 8,000,000 and 9,999,990 points.
- #22 10.0M-12.49M SCORES [ 00 ]: Total number of games the Player's final score was between 10,000,000 and 12,499,990 points.
- #23 12.5M-14.99M SCORES [ 00 ]: Total number of games the Player's final score was between 12,500,000 and 14,499,990 points.
- #24 15.0M-17.49M SCORES [ 00 ]: Total number of games the Player's final score was between 15,000,000 and 17,499,990 points.
- #25 17.50M-19.99M SCORES [00]: Total number of games the Player's final score was between 17,500,000 and 19,999,990 points.
- 20.0M-24.99M SCORES [ 00 ]: Total number of games the Player's final score was between #26 20,000,000 and 24,999,990 points.
- #27 25.0M-29.99M SCORES [ 00 ]: Total number of games the Player's final score was between 25,000,000 and 29,999,990 points.

Standard Audits 28-59 continued on the next page.

### Standard Audits Continued

- #28 30.0M-39.99M SCORES [ 00 ]: Total number of games the Player's final score was between 30,000,000 and 39,999,990 points.
- #29 **40.0M-49.99M SCORES [ 00 ] :** Total number of games the Player's final score was between **40,000,000** and **49,999,990** points.
- #30 50.0M-74.99M SCORES [00]: Total number of games the Player's final score was between 50,000,000 and 74,999,990 points.
- #31 **75.0M-99.99M SCORES [ 00 ] :** Total number of games the Player's final score was between **75,000,000** and **99,999,990** points.
- #32 **100.0M-149.99M SCORES [ 00 ] :** Total number of games the Player's final score was between **100,000,000** and **149,999,990** points.
- #33 150.0+M SCORES: Total number of games the Player's final score was 150,000,000 points and over.
- #34 **AVERAGE SCORES [ 00 ]**: This total is derived by adding the Final Score of each game to a table and dividing this sum by 'Total Plays' (Standard Audit **16**).
- #35 SERVICE CREDITS [ 0 ]: Total 'Green [ SERVICE CREDIT ] Button' Dedicated Switch (D-21) closures in Attract Mode (not while in the SERVICE MENU). See the Service Menu Section, Service Switch X4 Set Access & Use, for how to receive Service Credits. See the Utilities Section (GO TO RESET MENU), Reset Credits, for how to delete credits.
- #36 BALL SEARCH STARTED [0]: Total number of times the game performed a Ball Search.
- #37 LOST BALL FEEDS [ 0 ]: Total number of times the game added a pinball to play when it could not find a pinball after Ball Search (review the Diagnostics Section (GO TO DIAGNOSTICS MENU), Technicians Alert [ Pinball Detection ]).
- #38 LOST BALL GAME STARTS [0]: Total number of times the game started with a pinball missing from the ball trough at the start of a game (review the Diagnostics Section (GO TO DIAGNOSTICS MENU), Technicians Alert [ Pinball Detection ]).
- #39 LEFT DRAINS [0]: Total 'Left Outlane' Switch (24) closures.
- #40 **CENTER DRAINS [ 0 ]**: Total number of times the pinball had drained when the last switch closed was not the 'Left Outlane' (24) *or* the 'Right Outlane' Switch (29).
- #41 RIGHT DRAINS [ 0 ]: Total 'Right Outlane' Switch (29) closures.
- #42 TILTS [0]: Total 'Tilt Pendulum' Dedicated Switch (D-17) closures.
- #43 **TOTAL BALLS SAVED** [ 0 ]: Total number of times this feature was used. This feature is adjustable from 0:01–0:15, AUTO or NO BALL SAVES (review the Adjustments Section (GO TO ADJUSTMENTS MENU), Standard Adj. 48, Ball Save Time). This feature is enabled at the start of each pinball and is disabled as soon as a predetermined number of switches are "closed" or the allocated time has expired.
- #44 LEFT FLIPPER USED [ 0 ]: Total 'Left Flipper Button' Dedicated Switch (D-9) closures in Game Mode.
- #45 RIGHT FLIPPER USED [0]: Total 'Right Flipper Button' Dedicated Switch (D-11) closures in Game Mode.
- #46 0 1 MINUTE GAMES [0]: Total games in which the total game time was between 0:00 and 1:00 minute.
- #47 1-1.5 MINUTE GAMES [0]: Total games where play time was between 1:00 and 1:30 minutes.
- #48 1.5 2 MINUTE GAMES [0]: Total games where play time was between 1:30 and 2:00 minutes.
- #49 2-2.5 MINUTE GAMES [0]: Total games where play time was between 2:00 and 2:30 minutes.
- #50 2.5 3 MINUTE GAMES [0]: Total games where play time was between 2:30 and 3:00 minutes.
- #51 3-3.5 MINUTE GAMES [0]: Total games where play time was between 3:00 and 3:30 minutes.
- #52 3.5 4 MINUTE GAMES [0]: Total games where play time was between 3:30 and 4:00 minutes.
- #53 4-5 MINUTE GAMES [0]: Total games where play time was between 4:00 and 5:00 minutes.
- #54 5 6 MINUTE GAME\$ [0]: Total games where play time was between 5:00 and 6:00 minutes.
- #55 6 8 MINUTE GAME\$ [0]: Total games where play time was between 6:00 and 8:00 minutes.
- #56 8-10 MINUTE GAMES [0]: Total games where play time was between 8:00 and 10:00 minutes.
- #57 10 15 MINUTE GAMES [0]: Total games where play time was between 10:00 and 15:00 minutes.
- #58 15+ MINUTE GAMES [ 0 ]: Total games in which the total game time was 15:00 minutes and over.
- #59 **RECENT REPLAY PERCENT [ 0% ] :** Percent figured with programming thresholds for a determined number of games. The % reflects replay total awards for exceeding replay score levels.

## | Feature Audits [ #1-#+ ]

To initiate, from the **AUDITS MENU**, select the "GAME" *Icon*. The Dot Matrix Display will indicate the audit number (in this group), audit name and the audit total or value. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

Feature Audits Definition: Programming Use Only. The proprietary information Total number of times a feature was started, awarded, lit, played and/or completed (awarded); also, the total number of Switch Closures during certain modes or features are tracked (a predetermined single/multiple variations of switch closures are used to determine the lighting and/or completion of the feature stated). SEE THE DOT MATRIX DISPLAY FOR CURRENT FEATURE AUDITS.

Feature Audits are subject to change (with or without notice). View Feature Audits on the Dot Display only. To export all audits to your memory stick (creating a text file), perform the following. Enter the AUDITS MENU, then enter the DUMP AUDITS TO USB. Note: The "DUMP" Icon can also be accessed in the USB MENU via the UTILITIES MENU (see the Utilities Section (GO TO USB MENU) for details).



"T AUD" Icon provided as an alternate access to Tournament Audits (if data is available). For more information on the TOURNAMENT MENU, review the Tournament Section (GO TO TOURNAMENT MENU).

### Dump Audits To USB (Memory Stick)

To initiate, from the **USB MENU**, select the "DUMP" *Icon*. Follow the on-screen prompts to perform a **Data Dump** (download). A dated text file will be created on your USB Memory Stick.



AUDIT DATA DUMP

INSERT USB MEMORY STICK
OR
DUMP AUDITS TO USB

AUDIT DATA DUMP

AUDIT DATA DUMP

GENERATED\_DATED\_FILE\_NAME.TXT PRESS 'SELECT' TO SAVE AUDITS

OR PRESS 'BACK' TO EXIT

AUDIT DUMP

COMPLETE

PRESS' 'SELECT' TO CONTINUE

Step 1 Insert your USB Compatible Memory Stick into the USB port on the CPU/Sound Board (S.A.M. System). If the Memory Stick has space available and is free of errors, a dated file\* is generated (\* ensure your Date & Time is set prior to selecting or the dated file will have the default date of 20XX\_01\_01; see the Utilities Section (SET DATE / TIME) for details).

Step 2 Press [ SELECT ] to save the file to your Memory Stick. Press [ SELECT ] again to continue or [ BACK ] to exit or escape at any time.

Step 3 Remove the Memory Stick and insert into your PC or Mac to save the file (which can then be copied, printed or emailed). The audits are numbered sequentially without a number restart between the three types of audits (Earnings, Standard and Feature).

**Note:** The "DUMP" Icon can also be accessed in the **USB MENU** via the **UTILITIES MENU** (see the Utilities Section (**GO TO USB MENU**) for details).







GO TO AUDITS MENU: EARNINGS AUDITS [ #1 - #13 ] / STANDARD AUDITS [ #1 - #59 ]

Perform the below steps to review the audits. Enter the **SERVICE MENU**, then enter the **EARNINGS AUDITS** or **STANDARD AUDITS MENUS**. For audit definitions or summary, review the Audits Section (**GO TO AUDITS MENU**). Try the "**DUMP AUDITS TO USB**" Feature to create a text file of your audits. Don't forget to set the DATE & TIME in the **UTILITIES MENU**. See the Utilities Section (**GO TO UTILITIES MENU**).

Step 1 Press [ SELECT ].
Press [ BACK ] to exit for escape at any time.

Step 2 Press [ > ]. Go to the "AUD" *lcon*.
Press [ SELECT ].

Step 3 Press [ > ]. Go to the "EARN" or "S.P.I." *Icon.* Press [ SELECT ].

Step 4 Press [ < ] [ > ] to move between audits.



### **EARNINGS AUDITS** [ #1 − #13 ] **▼**

Nr.	EARNINGS AUDIT	YOUR RESULT
1	TOTAL PAID CREDITS	
2	FREE GAME PERCENTAGE	
3	AVERAGE BALL TIME	
4	AVERAGE GAME TIME	
5	COINS THROUGH LEFT SLOT	
6	COINS THROUGH RIGHT SLOT	
7	COINS THROUGH CENTER SLOT	

Nr.	EARNINGS AUDIT	YOUR REBULT
8	COINS THROUGH FOURTH SLOT	
9	COINS THROUGH FIFTH SLOT	
10	TOTAL COINS	
11	TOTAL EARNINGS	
12	METER CLICKS	
13	SOFTWARE METER	

### STANDARD AUDITS [#1 – #59] ▼

Nr.	STANDARD AUDIT NAME	YOUR RESULT
1	TOTAL BALLS PLAYED	
2	TOTAL EXTRA BALLS	
3	EXTRA BALL PERCENTAGE	
4	REPLAY 1 AWARDS	
5	REPLAY 2 AWARDS	
6	REPLAY 3 AWARDS	
7	REPLAY 4 AWARDS	
8	TOTAL REPLAYS	
9	REPLAY PERCENTAGE	
10	TOTAL SPECIALS	
11	SPECIAL PERCENTAGE	
12	TOTAL MATCHES	
13	HIGH SCORE AWARDS	
14	HIGH SCORE PERCENT	
15	TOTAL FREE PLAYS	
16	TOTAL PLAYS	
17	0.0M - 1.99M SCORES	
18	2.0M - 3.99M SCORES	
19	4.0M - 5.99M SCORES	
20	6.0M - 7.99M SCORES	

Nr.	STANDARD AUDIT YOUR NAME RESULT
21	8.0M - 9.99M SCORES
22	10.0M - 12.49M SCORES
23	12.5M - 14.99M SCORES
24	15.0M - 17.49M SCORES
25	17.5M - 19.99M SCORES
26	20.0M - 24.99M SCORES
27	25.0M - 29.99M SCORES
28	30.0M - 39.99M SCORES
29	40.0M - 49.99M SCORES
30	50.0M - 74.99M SCORES
31	75.0M - 99.99M SCORES
32	100.0M - 149.99M SCORES
33	150.0M+ SCORES
34	AVERAGE SCORES
35	SERVICE CREDITS
36	BALL SEARCH STARTED
37	LOST BALL FEEDS
38	LOST BALL GAME STARTS
39	LEFT DRAINS
40	CENTER DRAINS

Nr.	STANDARD AUDIT NAME	YOUR RESULT
41	RIGHT DRAINS	
42	TILTS	
43	TOTAL BALLS SAVED	
44	LEFT FLIPPER USED	
45	RIGHT FLIPPER USED	
46	0 - 1 MINUTE GAMES	
47	1 – 1.5 MINUTE GAMES	
48	1.5 – 2 MINUTE GAMES	
49	2 – 2.5 MINUTE GAMES	
50	2.5 – 3 MINUTE GAMES	
51	3 – 3.5 MINUTE GAMES	
52	3.5 – 4 MINUTE GAMES	
53	4 – 5 MINUTE GAMES	
54	5 – 6 MINUTE GAMES	
55	6 – 8 MINUTE GAMES	
56	8 – 10 MINUTE GAMES	
57	10 – 15 MINUTE GAMES	
58	15+ MINUTE GAMES	
59	RECENT REPLAY PERCENT	
Note:	Audits are subject to chang	e (with or without notice).

Note: Audits are subject to change (with or without notice)



### Standard Adjustment 18, Game Pricing, continued.

### USA & International (non-Euro) Standard Pricing Select Table

						0	ect lable	
CPU/SOUND PCB COUNTRY	COIN	MECHANIS	SMS (SW	ITCHES)	PI	RICING SCHE	ME	Requires SPI
DIP SWITCH SW1 SETTING		IS THR		SLOT:	2002/00/00/00 2007	s (Credits) for Pric		Coin Card(s)
SETTING OPTION(S)	LEFT	CENTER		471	<ul> <li>4.000000000000000000000000000000000000</li></ul>	J" for Coin Cards		Part Number
		OLIVILI	HIGHTI			and the second s	and district of the special in the field of the control of the con	Tare Harrison
Pos. 1 2 3 4 5 6 7 8 Default High lighted	¬ ———	<del></del>	т	7	USD // UNITED :	STATES DOLLAR	<u>}</u> //(\$)	755 5400 04 34
OOAT					1/0.25	0/0 75	0/4.00	755-5400-01-Y
	-	1			1/0.50	2/0.75	3/1.00	755-5400-09-Y
HIGHLIGHTED USA 3	-			351-54-54	1/0.50	For USA 6 and USA USA 6 Note: If playe	7 use: 755-5400-02-Y r uses X4 25¢ quarters = vr, \$1 bill = 3 plays!	755-5400-02-Y
Contain Defends				district the second	1/0.50			755-5400-02-Y
03A3	0.25	1.00	0.25	40000000	1/0.50 2/1.00		5/2.00	755-5400-08- <b>Y</b>
HIGHLIGHTED USA 6	-{	1		100-100-	1/0.50	2 /'4 X 25¢'	3 /\$ 1.00 Bill	Used to promote the Bill Validator.
= Not Shown on Coin USA 7		1	İ		1/0.50 2/1.00	4/1.50	6/2.00	
Card USA 8	<b>-   </b>				1/0.50	3/1.00	Martin Brazilia	755-5400-00-Y
USA 9	41			214000000000000000000000000000000000000	1/1.00	7,146	10000	755-5400-07-Y
USA 10			l		1/0.75	2/1.50	3/2.00	755-5400-11-Y
Pos. 1 2 3 4 5 6 7 8 Default Highlighted	al [	- <sub>1</sub>	1		AUD // AUSTRA		<u> </u>	
ON A A A AUSTRALIA 1	0.20	1.00	2.00	10000	1/1.00	3/2.00		755-5406-00-Y
OFF V VV AUSTRALIA 2	] [ 0.20	1100		in the second	1/1.00			(1 Side)
Pos. 1 2 3 4 5 6 7 8 Default Highlighted	¬	т			CAD // CANADIA	N DOLLARS // [	\$CAN1	
ON A A CANADA 1	0.25	0.25	1.00	2.00	1/0.50	2/0.75	3/1.00	755-5400-00-Y
off	0.20	U.Z.	1.00	2.00	1/0.50	2/0.73	3/1.00	-01-Y or -02-Y
ON A A CANADA 2	1.00		2.00		4/4.00	2/2 00	F1.71	755-5400-10-Y
OFF ▼ ▼ ▼ ▼ [dollar door]	1.00		2.00	0.00	1/1.00	3/2.00		線
Pos. 1 2 3 4 5 6 7 8 Default Highlighted					HRK // CROATIA	N KUNA // [ kun	a ]	
ON A CROATIA	1		_			-	100 TO 10	755-5410-00-Y
OFF V V V		2	5		1/3	2/5	1,445	(2-Sided)
Pos. 1 2 3 4 5 6 7 8 Default Highlighted	~,				DKK // DANISH I	KRONER // [ Kr ]	- · · · · · · · · · · · · · · · · · · ·	
ON A DENMARK 1	1 1	_	40	20	1/3	2/5	]	755-5402-00-Y
OFF VV V DENMARK 2		5	10	20	1/2 2/4	3/5 4/7	5/9 7/10	(2-Sided)
Pos. 1 2 3 4 5 6 7 8 Default Highlighted	-				JPY // JAPANES	E YEN // [¥]		
ON A A JAPAN 1	100		400	or being	1/100			755-5408-01-Y
OFF ▼ ▼ ▼ JAPAN 2	100		100	States and	1/100	3/200		(2-Sided)
Pos. 1 2 3 4 5 6 7 8 Default High lighted	-			_	LTL // LITHUANI	A LITAI // [ Lt ]		
ON A A A L LITHUANIA	4	-	<b>J</b>					755-5416-00-Y
OFF V V CITTOANIA	1	2	5		1/2		Carlo Maria	(1 Side)
Pos. 1 2 3 4 5 6 7 8 Default Highlighted	_				TOKEN // Middle	East currency us	sed to buy token //	[ TOKEN]
ON A A A A MIDDLE EAST	1 4-1		4-1					755-5416-00-Y
OFF V V V WINDLE EAST	token	Property of	token	Photography and the second	1/1			(use Side 1)
Pos. 1 2 3 4 5 6 7 8 Default Highlighted								
au la					NZD // NEW ZEA	LAND DOLLAR	// [ \$NZD ]	
ON NEW ZEALAND 1					NZD // NEW ZEA	LAND DOLLAR	//[\$NZD]	
THE VICEALAND	1		2		NZD // NEW ZEA 1/1 1/1	SEALER ON	//[\$NZD]	755-5406-00-Y
THE WALALAND	1		2		1/1 1/1	3/2		
OFF V V V V NEW ZEALAND	1		2		1/1 1/1 NOK // NORWEG	3/2	]=	755-5406-00-Y (Side 2)
OFF V V V V V NEW ZEAL AND 2  Pos. 1 2 3 4 5 6 7 8 Default Highlighted  ON A NORWAY 1	] [		L		1/1 1/1 NOK // NORWEG 1/10	3/2 BIAN KRONE // [	]=	755-5406-00-Y (Side 2) 755-5403-01-Y or
OFF   V   V   V   V   V   NEW ZEAL AND ZEAL ZEAL ZEAL ZEAL ZEAL ZEAL ZEAL ZEAL	1 10	5	20		1/1 1/1 NOK // NORWEG 1/10 1/10	3/2	]=	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided)
OFF	] [	5	L		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20	3/2 GIAN KRONE // [ 3/20	]=	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y
OFF	10		20	CCEPTOR ▼	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20	3/2 GIAN KRONE // [ 3/20 3/40	] <b>Kr</b> 1 ]	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided)
OFF   V   V   V   V   V   V   V   V   V	10  ▼LEFT SV	WITCH CAN BE W	20	CCEPTOR ▼	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN	3/2 GIAN KRONE // [ 3/20 3/40	] <b>Kr</b> 1 ]	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)
Pos.   1 2 3 4 5 6 7 8   Default Highlighted	10		20	CCEPTOR ▼	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20	3/2 GIAN KRONE // [ 3/20 3/40	] <b>Kr</b> 1 ]	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y
Norway 1	10  ▼LEFT SV	WITCH CAN BE W	20	CCEPTOR ▼	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5	3/2 GIAN KRONE // [ 3/20 3/40 RUBLE // [ Rubi	] Kr l ] j le l	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)
New Architecture   New Archite	10  VLEFT SV  10	WITCH CAN BE W	20 IRED TO BILL A		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A	3/2 GIAN KRONE // [ 3/20 3/40 RUBLE // [ Rubi	] Kr l ] 	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y/(2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided)
New Art   New	10  V LEFT SV 10	WITCH CAN BE W	20	CCEPTOR ▼  5.00	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00	3/2 SIAN KRONE // I 3/20 3/40 RUBLE // I Rubi	] Kr l ] 	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5409-01-Y
OFF	10  VLEFT SV  10	WITCH CAN BE W	20 IRED TO BILL A		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00	3/2 GIAN KRONE // I 3/20 3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00	] Kr] ]  e	755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y/(2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided)
OFF         ▼	10  **LEFT SV 10  0.50	5 1.00	20 IRED TO BILL A 1 2.00		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH	3/2 BIAN KRONE // [ 3/20  3/40 RUBLE // [ Rubi FRICAN RAND // 2/5.00 LKBONOR // L kr	] Kr] ]  e	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)
New Age   New	10  VLEFT SV  10	WITCH CAN BE W	20 IRED TO BILL A		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH	3/2 GIAN KRONE // I 3/20 3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00	] Kr] ]  e	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)
New Agriculture   New Agricu	10  **LEFT SV 10  0.50	5 1.00	20 IRED TO BILL A 1 2.00		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5	3/2 GIAN KRONE // I 3/20 3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00 LKRONOR // I Kr 2/15	] Kr] ]  e	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFT SV 10  0.50	5 1.00	20 IRED TO BILL A 1 2.00		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF	3/2 GIAN KRONE // [ 3/20 3/40 RUBLE // [ Rubi FRICAN RAND // 2/5.00 LKRONOR // [ kr 2/15	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5404-00-Y (2-Sided)
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFTSV 10  0.50	5 1.00	20 IRED TO BILL A 1 2.00		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/11 2/2	3/2 GIAN KRONE // [ 3/20  3/40 RUBLE // [ Rubi  FRICAN RAND // 2/5.00 LKRONOR // L kr 2/15  BANCS // [ Sf] 3/3 4/4	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFTSV 10  0.50	5 1.00	20 IRED TO BILL A  1  2.00		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/1 2/2 1/1 3/2	3/2 GIAN KRONE // [  3/20  3/40  RUBLE // [ Rubi  FRICAN RAND //  2/5.00  LKRONOR // Lkr  2/15  RANCS // [ Sf ]  3/3 4/4  5/3 7/4	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5404-00-Y (2-Sided)
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFT SV 10  0.50	5 1.00	20 IRED TO BILL A  1  2.00  10		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/11 2/2	3/2 GIAN KRONE // [  3/20  3/40  RUBLE // [ Rubi  FRICAN RAND //  2/5.00  LKRONOR // Lkr  2/15  RANCS // [ Sf ]  3/3 4/4  5/3 7/4	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFTSV 10  0.50	5 1.00	20 IRED TO BILL A  1  2.00		1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/1 2/2 1/1 3/2	3/2 GIAN KRONE // [  3/20  3/40  RUBLE // [ Rubi  FRICAN RAND //  2/5.00  LKRONOR // Lkr  2/15  RANCS // [ Sf ]  3/3 4/4  5/3 7/4	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFTSV 10  0.50  1  1  10	5 1.00 5 2	20   RED TO BILL A   1   2.00   10   5   10	5.00	1/1 1/1 NOK // NORWEG 1/10 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/1 2/2 1/1 2/2 TWD // TAIWANE 1/10	3/2 SIAN KRONE // I 3/20 3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00 LKRONOR // L kr 2/15  BANCS // I Sf1 3/3 4/4 5/3 7/4 SSE DOLLAR // I	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFT SV 10  0.50  1  1  10  V STH COIN SI	5 1.00 5 2 LOT NOT AVAILABLE WITCH CAN BE WI	20 IRED TO BILL A  1  2.00  10  5  10  BLE WITH CUS	5.00	1/1 1/1 NOK // NORWEG 1/10 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/11 2/2 1/1 3/2 TWD // TAIWANE 1/10 GPB // UNITED K	3/2 SIAN KRONE // I 3/20 3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00 IKRONOR // I kr 2/15 RANCS // I Sf 1 3/3 4/4 5/3 7/4 SE DOLLAR // I	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)
OFF         ▼	10  VLEFT SV 10  0.50  1  1  10  V STH COIN SI	5 1.00 5 2	20 IRED TO BILL A  1  2.00  10  5  10  BLE WITH CUS	5.00	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/1 2/2 1/1 3/2 TWD // TAIWANE 1/10 GPB // UNITED K 3/1.00	3/2 SIAN KRONE // I 3/20 3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00 LKRONOR // L kr 2/15  BANCS // I Sf1 3/3 4/4 5/3 7/4 SSE DOLLAR // I	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)  755-5405-00-Y (2-Sided)
OFF         ▼	10  VLEFT SV 10  0.50  1  1  10  V STH COIN SI	5 1.00 5 2 LOT NOT AVAILABLE WITCH CAN BE WI	20 IRED TO BILL A  1  2.00  10  5  10  BLE WITH CUS	5.00	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/11 2/2 1/11 3/2 TWD // TAIWANE 1/10 GPB // UNITED K 3/1.00 4/1.00	3/2 GIAN KRONE // I 3/20  3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00 LKRONOR // I kr 2/15  BANCS // [ S f ] 3/3 4/4 5/3 7/4 SE DOLLAR // I KINGDOM POUN 7/2.00	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)  755-5405-00-Y (use Side 1)
OFF         ▼	10  VLEFT SV 10  0.50  1  1  10  VSTH COINSI LEFT C	5 1.00 5 2 LOT NOT AVAILABEENTER RIG	20 IRED TO BILL A  1  2.00  10  5  10  BLE WITH CUS	5.00  TOM PRICING V  5TH	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHE // SWISS FF 1/1 2/2 1/1 3/2 TWD // TAIWANE 1/10 GPB // UNITED K 3/1.00 4/1.00 1/0.50 2/1.00	3/2 GIAN KRONE // I 3/20  3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00 LKRONOR // I kr 2/15  BANCS // I Sf1 3/3 4/4 5/3 7/4 SE DOLLAR // I CINGDOM POUN 7/2.00  3/1.50	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)  755-5412-00-Y (use Side 1)  755-5407-01-Y 755-5407-01
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFT SV 10  0.50  1  1  10  VSTH COINSI LEFT C	5 1.00 5 2 LOT NOT AVAILABLE WITCH CAN BE WI	20 IRED TO BILL A  1  2.00  10  5  10  BLE WITH CUS	5.00  TOM PRICING V  5TH	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/1 2/2 1/1 3/2 TWD // TAIWANE 1/10 GPB // UNITED K 3/1.00 4/1.00 1/0.50 2/1.00 1/0.30 2/0.60	3/2 GIAN KRONE // [  3/20  3/40 RUBLE // [ Rubi  FRICAN RAND //  2/5.00 LKRONOR // L kr  2/15  RANCS // [ S f ]  3/3 4/4 5/3 7/4 SE DOLLAR // [ SE DOLLAR // [ SINGDOM POUN  7/2.00  3/1.50  3/0.90	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)  755-5412-00-Y (use Side 1)  755-5407-01-Y* 755-5407-01-Y*
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFT SV 10  0.50  1  1  10  VSTH COINSI LEFT C	5 1.00 5 2 LOT NOT AVAILABEENTER RIG	20 IRED TO BILL A  1  2.00  10  5  10  BLE WITH CUS	5.00  TOM PRICING V  5TH	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/1 2/2 1/1 3/2 TWD // TAIWANE 1/10 GPB // UNITED K 3/1.00 4/1.00 1/0.50 2/1.00 1/0.30 2/0.60 1/1.00	3/2 GIAN KRONE // I 3/20  3/40 RUBLE // I Rubi FRICAN RAND // 2/5.00 LKRONOR // I kr 2/15  BANCS // I Sf1 3/3 4/4 5/3 7/4 SE DOLLAR // I CINGDOM POUN 7/2.00  3/1.50	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5405-00-Y (2-Sided)  755-5412-00-Y (use Side 1)  755-5407-01-Y* 755-5407-01 755-5407-01
Pos.   1   2   3   4   5   6   7   8   Default Highlighted	10  VLEFT SV 10  0.50  1  1  10  VSTH COINSI LEFT C	5 1.00 5 2 LOT NOT AVAILABEENTER RIG	20 IRED TO BILL A  1  2.00  10  5  10  BLE WITH CUS	5.00  TOM PRICING V  5TH  D 2£	1/1 1/1 NOK // NORWEG 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5 ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/1 2/2 1/1 3/2 TWD // TAIWANE 1/10 GPB // UNITED K 3/1.00 4/1.00 1/0.50 2/1.00 1/0.30 2/0.60	3/2 GIAN KRONE // [  3/20  3/40 RUBLE // [ Rubi  FRICAN RAND //  2/5.00 LKRONOR // L kr  2/15  RANCS // [ S f ]  3/3 4/4 5/3 7/4 SE DOLLAR // [ SE DOLLAR // [ SINGDOM POUN  7/2.00  3/1.50  3/0.90	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5404-00-Y (2-Sided)  755-5405-00-Y (2-Sided)  755-5412-00-Y (use Side 1)  755-5407-01-Y* 755-5407-01-Y*
OFF	10  VLEFT SV 10  0.50  1  1  10  VSTH COINSI LEFT C	1.00  5  LOT NOT AVAILAL ENTER RIG	20 IRED TO BILL A  1  2.00  10  5  10  BLE WITH CUSSIHIT 4TH	5.00  TOM PRICING V  5TH  D 2£	1/1 1/1 NOK // NORWEG 1/10 1/10 1/10 1/20 1/20 RUB // RUSSIAN 1/5  ZAR // SOUTH A 1/2.00 1/3.00 SEK // SWEDISH 1/10 1/5 CHF // SWISS FF 1/1 2/2 1/1 3/2 TWD // TAIWANE 1/10 GPB // UNITED K 3/1.00 4/1.00 1/0.50 2/1.00 1/0.30 2/0.60 1/1.00 3/2.00	3/2 GIAN KRONE // [  3/20  3/40 RUBLE // [ Rubi  FRICAN RAND //  2/5.00 LKRONOR // L kr  2/15  RANCS // [ S f ]  3/3 4/4 5/3 7/4 SE DOLLAR // [ SE DOLLAR // [ SINGDOM POUN  7/2.00  3/1.50  3/0.90	Kr	755-5406-00-Y (Side 2)  755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided)  755-5411-00-Y (2-Sided)  755-5409-01-Y (2-Sided)  755-5405-00-Y (2-Sided)  755-5412-00-Y (use Side 1)  755-5407-01-Y* 755-5407-01 755-5407-01

Standard Adjustment 18, Game Pricing, continued on the next page.



### Standard Adjustment 18, Game Pricing, continued.

### Euro 1-12 Summary & International (Euro) Standard Pricing Select Table

		0			•	•	~	•	
CPU/SOUND PCB DIP SWITCH SW1 SETTING	COUNTRY SETTING OPTION(S)	r	COIN MECHANISMS (SWITCHES) COINS THRU SLOT: LEFT CENTER RIGHT ATH			PR Number of Plays See "Appendix J	Requires SPI Coin Card(s) Part Number		
Pos. 1 2 3 4 5 6 7 8  ON S E E B E L O W  OFF S E T T I N G S  Euro 1-12 are alternate settings for countries using the Euro.  HIGHLIGHTED	Default Highlighted  Euro 1  Euro 2  Euro 3  Euro 4  Euro 5  Euro 6				optional	See "Appendix J" EUR // EUROPEA 1/0.50 1/0.50 2/1.00 1/0.50 2/1.00 1/0.50 3/1.00 2/0.50	MATERIAL SAFATE LINE STATES STATES AND	ent-enter a constitue companies de	755-5401-01-Y 755-5401-02-Y 755-5401-03-Y 755-5401-04-Y 755-5401-05-Y 755-5401-06-Y
= Factory Default  HIGHLIGHTED  = Not Shown on Coin Card	Euro 7 Euro 8 Euro 9 Euro 10 Euro 11 Euro 12	0.50	1.00	2.00	<b>0.20</b> oplional	1/1.00 2/2.00 1/1.00 1/1.00 1/1.00 1/1.00 2/1.00 4/2.00	3/3.00 3/2.00 2/1.50 3/2.00 4/2.00 6/3.00	5/4.00 3/2.00 7/3.00 9/4.00	755-5401-07-Y 755-5401-08-Y 755-5401-09-Y 755-5401-10-Y 755-5401-11-Y 755-5401-12-Y

For a different **Euro Pricing Scheme** (other than Factory Default listed below), scroll through **Standard Adjustment 18**: Euro 1-12 or CUSTOM\* for new setting (reference above Euro 1-12 Summary). Keep the Country Dip Switch Setting the same as listed below.

Pos. 1 2 3 4 5 6 7 8	Default Highlighted	_					EUR // EUROPE/	AN UNION EUR	os#r€1	
ON 🛦	AUSTRIA	1	0.50	1.00	2.00	250	4/4.00	2/4 50	2/2 22	755-5401-09-Y
0FF	Euro 9	L	0.50	1.00	2.00		1/1.00	2/1.50	3/2.00	
Pos. 1 2 3 4 5 6 7 8	Default Highlighted	_								
ON 🛕	BELGIUM		0.50	1.00	2.00		1/0.50		100	755-5401-01-Y
OFF V V V V	Euro 1	L	0.50	1.00	2.00		1/0.50	Appropriate Control of the Control o		
Pos. 1 2 3 4 5 6 7 8	Default Highlighted	_	-	· · · · · · · · · · · · · · · · · · ·	r					
ON 🛦 🛕	FINLAND		0.50	1.00	2.00	200	1/1.00	3/2.00		755-5401-08-Y
OFF		L	0.50	1.00	2.00	The second second	1/1.00	3/2.00	State of the last	
Pos. 1 2 3 4 5 6 7 8		_								
ON A A	FRANCE		0.50	1.00	2.00	Killenger, and	1/1.00	3/2.00	7/3.00	755-5401-10-Y
OFF V V V V	Euro 10	L	0.50	1.00	2.00		1/1.00	3/2.00	7/3.00	
Pos. 1 2 3 4 5 6 7 8			ļ			-				
ON A A A	GERMANY 1					1000	1/0.50	70.00	Tribuges 1	755-5401-01-Y
OFF V V V		ı	0.50	1.00	2.00		1/0.50 2/1.00	3/1.50	5/2.00	755-5401-02-Y
	GERMANY 3	L				and the state of t	1/0.50 2/1.00	3/1.50	6/2.00	755-5401-04-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted	_								
ON A A A A	GREECE		0.50	1.00	2.00		1/1.00	2/2.00	100	755-5401-08-Y
OFF V	Euro 8		0.50	1.00	2.00	and the same of the same of	1/1.00	3/2.00		
Pos. 1 2 3 4 5 6 7 8	TENTO CONT. 10. (\$20.00.00.00.00.00.00.00.00.00.00.00.00.0	_		FALURAS NO LAS PARA ASPARANCES, ES						,
ON A	ITALY 1	1	0.50		0.50	1000000	1/0.50	Theorem 1	6900	755-5401-01-Y
OFF V V V V	ITALY 2	L	0.50		0.50	and the state of the state of	1/1.00	3/2.00		755-5401-08-Y
Pos. 1 2 3 4 5 6 7 8		_								
ON A	NETHERLANDS		0.50	1.00	2.00	Marie Barrer	1/0.50	2/4 00		755-5401-03-Y
OFF ▼ ▼ ▼ ▼ ▼	Euro 3	L	0.50	1.00	2.00	and the state of the state of	1/0.50	3/1.00		
Pos. 1 2 3 4 5 6 7 8	Default Highlighted									
ON 🛕 📗	PORTUGAL	Γ						07004	distriction	755-5401-01-Y
OFF VVV	Euro 1		0.50		0.50	STATE OF THE STATE	1/0.50			
Pos. 1 2 3 4 5 6 7 8	Default Highlighted	_						LEVEL OF THE STREET, THE STREE		· · · · · · · · · · · · · · · · · · ·
ON 🛕	SPAIN	Γ	0.50	4.00	0.00	and the second	4/4.00			755-5401-08-Y
OFF V V V V	Euro 8	L	0.50	1.00	2.00		1/1.00	3/2.00		
									<b>1</b> -000000000000000000000000000000000000	·

For the associated Coinage Card required if the Factory Default Setting was changed, view on-line at: http://www.sternpinball.com/coinagecards.shtml

HIGHLIGHTED = Not Shown on Coin Card

You can download and print the replacement card. Adobe® Reader 5.0 or higher required (links on site). Use Yellow Card Stock: ASTROBRIGHTS® SOLAR YELLOW #65 FROM WAUSAU PAPER PRODUCTS (Stock #22731)

- #19 **MATCH PERCENTAGE:** Set between **0% 10%** or **OFF**. Factory Default = **9%**. At **0%** the *Match Animation Feature* occurs at the end of the game but never awards the **Match Award** (Standard Adjustment **20**). Set to **OFF**, no **Match Animation Feature** is shown.
- #20 MATCH AWARD: Set to CREDIT, TICKET\* or TOKEN\*. Factory Default = CREDIT. This adjustment is not shown if OFF is installed in Match Percentage (Standard Adjustment 19).
- \*Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.
- #21 BALLS PER GAME: Set between 1 10. Factory Default = 3. Set the number of balls per game.

Standard Adjustments 22-36 continued on the next page. Standard Adjustments continued.

HIGHLIGHTED = Factory Default



- #22 **TILT WARNINGS:** Set between **0 3**. Factory Default = **2**. Set the number of Plumb Bob Tilt Switch closures before the ball in play is tilted. *Each closure generates an audible alert and/or display alert.*
- #23 CREDIT LIMIT: Set between 4 50. Factory Default = 30. Set the maximum credits allowed.
- #24 **ALLOW HIGH SCORES:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, if a player exceeds the Default Grand Champion or 1-4 High Scores, the player may receive a **High Score Award** (Standard Adjustment **25**) and enter their **3 Initials** or **10-Letter Name** (Standard Adjustment **36**). Set to **NO** to disable this feature. The following Standard Adjustments 25-37 are not shown if **NO** is installed.
- #25 **HIGH SCORE AWARD:** Set to **CREDIT**, **TICKET\*** or **TOKEN\***. Factory Default = **CREDIT**. Set the type of award to be given to the player when the appropriate **Grand Champion Score** or **High Score** #1 #4 threshold or level is acheived. If awarding a **CREDIT**, **TICKET** or **TOKEN** is prohibited in your area, install **NO** in **Allow High Scores** (Standard Adjustment **24**). This adjustment is <u>not shown</u> if **NO** is installed in **Allow High Scores** (Standard Adjustment **24**).
- \*Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.
- #26 **GRAND CHAMPION AWARDS:** Set between **0 5**. Factory Default = **1**. Set the number of **High Score Award**(s) (Std. Adj. 25), awarded for exceeding the Grand Champion Score (Standard Adjustment 31). This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).
- #27 **HIGH SCORE #1 AWARDS:** Set between **0 3**. Factory Default = **1**. Set the number of **High Score Award**(s) (Std. Adj. 25), awarded for exceeding the High Score #1 (Standard Adjustment 32).

  This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).
- #28 HIGH SCORE #2 AWARDS: Set between 0 2. Factory Default = 0. Set the number of High Score Award(s) (Std. Adj. 25), awarded for exceeding the High Score #2 (Standard Adjustment 33). This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #29 **HIGH SCORE** #3 **AWARDS:** Set between 0 1. Factory Default = 0. Set the number of **High Score Award**(s) (Std. Adj. 25), awarded for exceeding the High Score #3 (Standard Adjustment 34).

  This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).
- #30 **HIGH SCORE #4 AWARDS:** Set between **0 1**. Factory Default = **0**. Set the number of **High Score Award**(s) (Std. Adj. 25), awarded for exceeding the High Score #4 (Standard Adjustment 35). This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).
- #31 GRAND CHAMPION SCORE: Set between 1,000,000 1,000,000,000 (increments of 1,000,000).

  Factory Default = \_\_\_,000,000. Set the desired Grand Champion Score level a player needs to exceed to earn the High Score Award (Standard Adjustment 25). A score higher than the default, cannot be reset by Standard Adjustment 37, HSTD Reset Count. The Grand Champion Score will revert to the Factory Default Score ONLY if a Reset Grand Champion is performed in the RESET MENU (via the UTILITIES MENU) or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #32 HIGH SCORE #1: Set between 1,000,000 1,000,000,000. Factory Default = \_\_\_,000,000. Set the desired High Score #1 level a player needs to exceed to earn the High Score Award (Standard Adjustment 25). A score higher than the default, will be reset by Standard Adjustment 37, HSTD Reset Count. The High Score will revert to the Factory Default Score ONLY if a Reset High Scores is performed in the RESET MENU (via the UTILITIES MENU) or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #33 **HIGH SCORE** #2: Set between 1,000,000 1,000,000,000. Factory Default = \_\_\_,000,000. Set the desired **High Score** #2 level a player needs to exceed ... (continued in Standard Adjustment **32** definition above).
- #34 **HIGH SCORE** #3: Set between 1,000,000 1,000,000,000. Factory Default = \_\_\_,000,000. Set the desired **High Score** #3 level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #35 **HIGH SCORE** #4: Set between 1,000,000 1,000,000,000. Factory Default = \_\_\_,000,000. Set the desired **High Score** #4 level a player needs to exceed ... (continued in Standard Adjustment **32** definition above).
- #36 HSTD (HIGH SCORE TO DATE) INITIALS: Set to 3 INITIALS or 10 LETTER NAME. Factory Default = 3 INITIALS. When set to 3 INITIALS, the player is allowed only 3 initials to input. When set to 10 LETTER NAME, the player is allowed to enter 10 initials to input. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).



### Standard Adjustments continued.

- #37 HSTD (HIGH SCORE TO DATE) RESET COUNT: Set between 100 9900 or OFF (increments of 100).
  Factory Default = 2000. Set the number of games between "automatic resets" of High Scores back to the Factory Defaults for ONLY Standard Adj. 32 35, High Score #1 #4. The High Score will revert to the Factory Default Scores when the number of games stated is reached. Reset High Scores can be performed in the RESET MENU (via the UTILITIES MENU) anytime or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adj. 24).
- #38 **FREE PLAY:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **YES**, no coins are required for *Game Play*.
- #39 **LANGUAGE:** Set to **ENGLISH**, **GERMAN**, **FRENCH**, **SPANISH** or **ITALIAN**. Factory Default = **ENGLISH**. Set the language for the game. Language of game is also shown in the Dot Display (along with the Game Title and code version) at the start-up routine which follows a game reset or power-up.
- PLAYER LANGUAGE SELECT: Set to YES or NO. Factory Default = YES. When set to YES, after the player presses the Start Button (to start a game with adequate credit), the player has the option to choose a language by pressing either Flipper Button before game start (options of languages installed are shown on the Dot Display). Note: If set to NO or if only one language is installed and the setting is set to YES, the game will start immediately after the Start Button press. Language(s) available are dependent on game destination from the factory. Other languages may be available on-line for download and installed on your game. With the proper dip switch installed, the language option(s) can be changed. For more information or help, call Technical Support at 800-542-5377 (708-345-7700).
- #41 CUSTOM MESSAGE: Set to ON, CHANGE or OFF. Factory Default = ON. Shortcut: Enter Custom Message and instructions, review the Utilities Section, Enter Custom Message.
- #42 FLASH LAMP POWER: Set to NORMAL, OFF or DIM. Factory Default = NORMAL. When set to DIM, the Flash Lamps impulse power is reduced by 25% and when set to OFF the Flash Lamps will not flash. For Flash Lamps used in this game, Go To Flash Lamps Menu via the DIAGNOSTICS MENU (see the Diagnostics Section).
- #43 **COIL PULSE POWER:** Set to **NORMAL**, **HARD** or **SOFT**. Factory Default = **NORMAL**. When set to **HARD**, the coil pulse power is *increased* by 12.5% of the normal pulse rate. When set to **SOFT** the coil pulse power is *decreased* by 12.5% of the normal pulse rate. This adjustment is provided to compensate for *Low Line* or *High Line voltage* conditions where the solenoids (coils) appear to *kicking too weak* or too hard. Adjust as required.
- #44 KNOCKER VOLUME: Set to NORMAL, OFF or LOW. Factory Default = NORMAL. When set to LOW, the volume is decreased 50%. When set to OFF, no sound is heard when the "knocker" is sounded. Test the knocker sound in the Fire Knocker Test via the DIAGNOSTICS MENU (see Section 3, Chapter 2, GO TO DIAGNOSTICS MENU, Page 19).
- #45 **GAME RESTART:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, a new game may be started during any ball after the first ball is completed (*if credits allow*). Pressing the Start Button during the first ball will add additional players (*up to 4, if credits allow*). When set to **NO**, the game disables the Start Button after the first ball until the final ball is in play.
- #46 **BILL VALIDATOR:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **YES**, in *Game Attract Mode* an "Insert Bill Animation" is shown in the display (or just the absense of the Coin Animation). When set to **NO**, an "Insert Coin Animation" is shown. (*This adjustment will appear when implemented*).
- #47 **MUSIC VOLUME:** Set between 1 15. Factory Default = 1. After volume is set via Service Buttons this adjustment can be utilized to adjust the background music (1 all the way on, 15 all the way off) while keeping the Special Sound Effects at the same level.
- #48 **BALL SAVE TIME:** Set between 0:01 0:15, **AUTO** or **NO BALL SAVES**. Factory Default = 0:05. When set to **NO BALL SAVES** this feature is unavailable. Set between 0:01 through 0:15 (single increments) for the ball to be sent back into play if the time set is not met (per ball). Set to **AUTO** to automatically adjust the Ball Save Timer based on the average ball time.
- #49 **TIMED PLUNGER:** Set to **OFF** or **0:01 1:00**. Factory Default = **OFF**. The plunger will "Autoplunge" the ball (at the time set) when the ball is at the beginning of play, waiting for the player.
- #50 FLIPPER BALL LAUNCH: Set to OFF, LEFT FLIPPER, RIGHT FLIPPER, EITHER FLIPPER or BOTH FLIPPERS. Default is OFF. This feature allows the player to operate the Auto Ball Launch with the Flipper Button(s) depending on which setting is chosen.



### Standard Adjustments continued.

- #51 **COINDOOR BALL SAVER:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **NO**, this feature is not available. When set to **YES**, this feature allows the Coin Door to be opened during game play; the ball will drain but the game will be placed "on hold". When the Coin Door is closed, the pinball will return to the Shooter Lane, and the game will resume. Useful at locations where technicians change the cash box regularly at exact times of the day where players can be on the game.
- #52 **COMPETITION MODE:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **NO**, this feature is not available. Set to **YES**, this feature will equalize random game features and global score values during multi-player games by predetermined competition rules set by programming. If an **Install Competition** was made via the **INSTALLS MENU** (which automatically changes this setting to **YES**), and this setting was changed back to **NO**, the **Competition Mode** will be turned **OFF** (cancelled).
- #53 **CONSOLATION BALL:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, the **EXTRA BALL** (lamp insert, location varies) will be lit on the last ball in play, if certain programming criteria is met.
- **FAST BOOT:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **NO** or if you hold both **Flipper Buttons** during Power-Up, this feature is not available and will display all normal Power-Up screens. When set to **YES**, the game will not display the normal informative Power-Up screens, specifically the CPU Version screen and the Location/Game ID screen. Regardless of the setting, normal Power-Up safety checks are still performed. *(This adjustment will appear when implemented)*.
- #55 **Q24 OPTION:** Set to **COIN METER**, **TOKEN DISPENSER** or **KNOCKER**. Factory Default = **COIN METER**. This Coil (Solenoid) Location is left "open" at the Factory to allow for these optional Mechanisms to be added to the game. If selecting **TOKEN DISPENSER**, Standard Adjustments 3, 14, 20 & 25 should be changed to **TOKEN**. Call Tech. Support at 1-800-542-5377 if more information is required on this option.
- #56 **TICKET DISPENSER:** Set to **YES** or **NO**. Factory Default = **NO**. This adjustment is required only for games which have an optional Deltronics (DL-1275-2 PCB Style, SPI Part Nr. 515-7275-00) Ticket Dispenser installed. Unique CPU Sound Bd. Dip Switch Setting required, changes the Default to **YES**.
- #57 PLAYER COMPETITION: Set to YES or NO. Factory Default = YES. Competition Mode unrandomizes feature events, and standardizes game play and rule sets (varies from game to game) for fair competitions. With at least one credit posted, or with the game set for 'FREE PLAY', during the game-over Attract Mode, press the Left Flipper Button and hold it in for approximately one second. The following message will appear on the display for approximately 10 seconds: 'COMPETITION MODE READY ... PRESS START NOW'. If a game is started (either by pressing the 'START' button for a regular game, or by pressing the 'TOURNAMENT START' button for a tournament game) while this message appears on the display, then competition mode will be enabled for all players during the game. General rules are covered in the Instruction Card. Other Hints and/or Rules can be made known on this game either visually (the Dot Display or Flashing Light Inserts) or can be audible.
- #58 **TEAM SCORES:** Set to **YES** or **NO**. Factory Default = **NO**. Set to **YES**, then Team Play will be made available. *Team Play only works in a 4-Player Game*. The totals for Players 1 / 3 (Team 1) & Players 2 / 4 (Team 2) are then displayed individually *as well as* the combined score for **BOTH TEAMS** to enable **Team Play** (**Doubles**). *(This adjustment will appear when implemented).*
- #59 **LOCATION ID:** Set between **0** to **9999**. Factory Default = **0**. This adjustment allows the operator to assign a location identification number to the audit print-out sheet. (Will not be affected by a Factory Reset.)
- #60 **GAME ID:** Set between **0** to **9999**. Factory Default = **0**. This adjustment allows the operator to assign a game identification number to the audit print-out sheet. (Will not be affected by a Factory Reset.)
- #61 **TIME FORMAT:** Set to **12-HOUR** or **24-HOUR**. Factory Default = **12-HOUR**. This adjustments determines how the time is displayed. *Time used for Tournament and Data Dumps where a time stamp is required.*
- #62 **COIN INPUT DELAY:** Set between **30** to **60** or **OFF**. Factory Default = **30**. This adjustment creates a short time delay between the moment the coin is inserted into the **Coin Slot** to the moment the CPU/Sound PCB registers the coin (30 = approxiamately 1/2 second).
- #63 **LOST BALL RECOVERY:** Set to **YES** or **NO**. Factory Default = **NO**. Set to **YES**, at the start of the 5th consecutive ball search (with no scoring between searches), the game will consider any balls in play to be permanently lost and will attempt to recover from this situation by serving a new ball into play from the ball trough. Set to **NO** (to suppress this adjustment behavior) for the game to perform the "ball search" indefinitely until the lost balls are found or replaced.

### STANDARD ADJUSTMENTS [#1 - #63] ▼


		, (I CD / 1D3	0.011				
Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING	Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING
1	REPLAY TYPE	AUTO		32	HIGH SCORE #1	,000,000	<u></u>
2	# REPLAY PERCENTAGE	10%		33	HIGH SCORE #2	,000,000	
3	‡ REPLAY AWARD	CREDIT		34	HIGH SCORE #3	,000,000	
4	* REPLAY LEVELS	1		35	HIGH SCORE #4	,000,000	* *************************************
5	‡ AUTO REPLAY START	,000,000		36	HSTD INITIALS	3 INITIALS	
6	* DYNAMIC REPLAY START	,000,000		37	HSTD RESET COUNT	2000	
7	‡ REPLAY LEVEL #1	,000,000		38	FREE PLAY	NO	
8	‡ REPLAY LEVEL #2	,000,000		39	LANGUAGE	ENGLISH	
9	‡ REPLAY LEVEL #3	,000,000		40	<b>PLAYER LANGUAGE SELECT</b>	YES	
10	‡ REPLAY LEVEL #4	,000,000		41	CUSTOM MESSAGE	ON	
11	* REPLAY BOOST	YES		42	FLASH LAMP POWER	NORMAL	
12	SPECIAL LIMIT	1		43	COIL PULSE POWER	NORMAL	
13	* SPECIAL PERCENTAGE	10%		44	KNOCKER VOLUME	NORMAL	
14	SPECIAL AWARD	CREDIT		45	GAME RESTART	YES	
15	FREE GAME LIMIT	5		46	BILL VALIDATOR	NO	
16	EXTRA BALL LIMIT	5		47	MUSIC VOLUME	1	
17	‡ EXTRA BALL PERCENTAGE	25%		48	BALL SAVE TIME	0:05	
18	GAME PRICING	USA 10		49	TIMED PLUNGER	OFF	
19	MATCH PERCENTAGE	9%		50	FLIPPER BALL LAUNCH	OFF	
20	MATCH AWARD	CREDIT		51	COINDOOR BALL SAVER	NO	
21	BALLS PER GAME	3		52	COMPETITION MODE	NO	
22	TILT WARNINGS	2		53	CONSOLATION BALL	YES	
23	CREDIT LIMIT	30		54	FAST BOOT	YES	
24	ALLOW HIGH SCORES	YES		55	Q24 OPTION	COIN METER	
25	HIGH SCORE AWARD	CREDIT		56	TICKET DISPENSER	NO	
26	GRAND CHAMPION AWARDS	1		57	PLAYER COMPETITION	YES	
27	HIGH SCORE #1 AWARDS	1		58	TEAM SCORES	NO	
28	HIGH SCORE #2 AWARDS	0		59	LOCATION ID	0	
29	HIGH SCORE #3 AWARDS	0		60	GAME ID	0	
30	HIGH SCORE #4 AWARDS	0		61	TIME FORMAT	12-HOUR	
31	GRAND CHAMPION SCORE	,000,000		62	COIN INPUT DELAY	30	
				63	LOST BALL RECOVERY	YES	

Factory Defaults Settings are subject to change during production (especially Standard Adjustments 2, 4, 5, 13, 16-17, 19, 31-35 & 47). 
‡ Not all Standard Adjustments are shown. Depending on the setting (whether Factory Default or if changed by the operator), associated adjustments do not appear, if not required. Note: If Game Dip Switch other than USA is installed, different Defaults will appear.

### Feature Adjustments [ #1 - #+ ]

To initiate, from the ADJUSTMENTS MENU, select the "GAME" lcon. The Dot Matrix Display will indicate the adjustment number (in this group), adjust. name, adjust. setting and comment line. The current adjustment will remain on the display until the next adjustment is viewed or when this sub-menu is exited.

- >>> FACTORY RESET or CODE UPDATE NOTE: Don't forget, any changes you make to your adjustments will revert back to the Factory Default settings if you perform a Factory Reset or update your Game Code. See Utilities Section (GO TO RESETS MENU and GO TO USB MENU).
  - View the Coils Detailed Chart Menu to see if this game is Shaker Motor Enabled. If it is, set the options in the Feature Adjustment as seen below. (typically the last one).
- # SHAKER MOTOR (OPTIONAL): Set to NONE, MINIMAL USE, MODERATE USE or MAXIMAL USE.
  Factory Default = MODERATE USE. Set to any of the varying "... USES" if an Optional Shaker Motor Kit (SPI Part Number 502-5027-00) was installed correctly in this pinball machine. See the assembly (kit) on the last page of Blue Pages (Major Assemblies). Also see Shaker Motor Coil (Q8) in the Coils Detailed Chart Table at the beginning of this Service Game Manual or the beginning of the Yellow Pages.

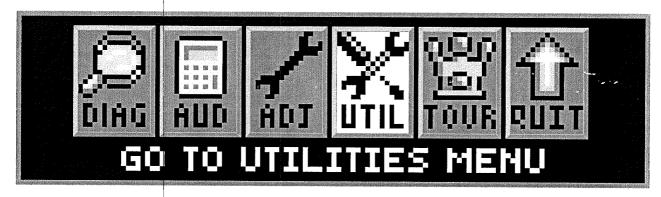

To initiate, from the MAIN MENU, select the "UTIL" Icon. The UTILITIES MENU provides ways to quickly and easily customize your game with Installs (pre-sets for game Standard & Feature Adjustments), set-up a Custom Message (short-cut to Standard Adjustment 41, Custom Message), set-up Custom Pricing (short-cut to Standard Adjustment 18, to the Custom Pricing Sub-Menu), set-up the Date and Time (required if the date and time is needed to be accurate for data dumps and for tournaments), reset certain particular game data or perform a complete Factory Reset and to download game data, update or backup game code in the USB MENU.

All UTILITIES, INSTALLS, RESETS MENU and USB MENU Icons and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. NOTE: Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some Icons may appear non-functional or may not appear at all. Installs (Adjustments), Icons and/or functions, order and operation are subject to change. If in doubt use the Factory Default Settings (review Install Factory on the next page).

In displays where changes can be made or to perform a function, use the GREEN Button to go [ BACK ], exit or escape, the RED Buttons to [ < / - ] MOVE BACK / LEFT / [ + / > ] MOVE FORWARD / RIGHT to view the next audit in the group, and the BLACK Button to [SELECT] the sub-menus.

# 

### Go To Installs Menu

To initiate, from the UTILITIES MENU, select the "INST" Icon. The INSTALLS MENU provides 13 Installs to vary Game Play Difficulty (set with Feature Adjustments) or Game Play Type and Install Factory (restores all adjustments to Factory Defaults).

For detailed customization or to check current Adjustments Defaults (either changed by YOU in the Adjustments Menu or by this INSTALLS MENU or for Factory Default Settings), see Section 3, Chapter 4, GO TO ADJUSTMENTS MENÚ. After completing one or more of the Installs in this chapter, go back to the ADJUSTMENTS MENU to see which Standard and/or Feature Adjustments have changed (Feature Adjustments and/or settings are subject to change during production, and may differ than what is described in the tables at the end of this chapter). The Dot Display will indicate if a setting is a Factory Default or not. If the settings are not to your liking, perform one of the following:

- Manually change the \$tandard & Feature Adjustments Settings (perform this task in the ADJUSTMENTS MENU, see the Adjustments Section).
- 2.: Install Factory (see the last install) on how to reset all of the Standard & Feature Adjustments back to the Factory Default Settings.

Multiple Installs can be set to vary game play; however, for Installs that have one or more Adjustments in common, the *last* "Install" selected & activated, will supersede any previously changed Adjustment(s) from any prior Installs. Any adjustments which you changed and are not affected by the Install will remain as set.

For example, if you want a **5-BALL Game** set to **EXTRA EASY**: Select and activate the "5BAL" Icon first (which will typically change any **Feature** Difficulty Adjustments to **HARD**), then select & activate the "X.EZ" Icon to change back the Difficulty Adjustments to EXTRA EASY. However, if the "X.EZ" Icon was selected & activated first, then the "5BAL" Icon was selected & activated, the game will be set to a 5-BALL Game set to HARD.

Remember, use the GREEN Button to go [ BACK ], exit or escape and the BLACK Button to [ SELECT ] to INSTALL your new setting(s).



#### Install Extra Easy

To initiate, from the INSTALLS MENU, select the "X.EZ" Icon. The Dot Matrix Display will indicate the INSTALL EXTRA EASY. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.

Installs Menu continued on the next page.



### Install Easy

To initiate, from the INSTALLS MENU, select the "EASY" Icon. The Dot Matrix Display will indicate the INSTALL EASY. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty



### Install Medium (Normal or Factory Settings)

To initiate, from the INSTALLS MENU, select the "FACT" Icon. The Dot Matrix Display will indicate the INSTALL MEDIUM. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.



### Install Hard

To initiate, from the INSTALLS MENU, select the "HARD" Icon. The Dot Matrix Display will indicate the INSTALL HARD. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.



#### Install Extra Hard

To initiate, from the INSTALLS MENU, select the "X.HD" Icon. The Dot Matrix Display will indicate the INSTALL EXTRA HARD. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.





### Install 3-Ball or 5-Ball

To initiate, from the INSTALLS MENU, select either the "3BAL" or "5BAL" Icons. The Dot Matrix Display will indicate the INSTALL 3-BALL or 5-BALL depending on choice. Follow the on-screen prompts to perform the Install. Set the Game Play Type to 3 Balls per game

(Factory Default is 3 Balls per game, not including extra balls earned by the player, if any).



### 🖳 🔐 Install Competition

To initiate, from the INSTALLS MENU, select the "COMP" Icon. The Dot Matrix Display will indicate the INSTALL COMPETITION. Follow the on-screen prompts to perform the Install.

Set the Game Play Type to "Tournament" Rules. Programming varies and is subject to change.



#### Install Director's Cut

To initiate, from the INSTALLS MENU, select the "DCUT" Icon. The Dot Matrix Display will indicate the INSTALL DIRECTOR'S CUT. Follow the on-screen prompts to perform the Install. Set the Game Play Type to programmer's choice. Programming varies and is subject to change.



#### Install Home Plau

To initiate, from the INSTALLS MENU, select the "HOME" Icon. The Dot Matrix Display will indicate the INSTALL HOME PLAY. Follow the on-screen prompts to perform the Install. Set the Game Play Type to "Home" Rules. Programming varies and is subject to change.



### Install Novelty

To initiate, from the INSTALLS MENU, select the "NOV" Icon. The Dot Matrix Display will indicate the INSTALL NOVELTY. Follow the on-screen prompts to perform the Install. \*\*\*\*\* This setting is recommended where local laws restrict certain game features. \*\*\*\*\*\*\*\*

Set the Game Play Type to "Restricted" Rules. Programming varies and is subject to change.



### Install Add-A-Ball

To initiate, from the INSTALLS MENU, select the "A.A.B." Icon. The Dot Matrix Display will indicate the 

Set the Game Play Type to "Restricted" Rules. Programming varies and is subject to change.



#### Install Factory

To initiate, from the INSTALLS MENU, select the "FACT" Icon. The Dot Matrix Display will indicate the INSTALL FACTORY. Follow the on-screen prompts to perform the Install. A CAUTIÓN! All Standard and Feature Adjustments which were changed in the INSTALLS MENU or ADJUSTMENTS MENU are returned to the Factory Defaults (as indicated in the Dot Display in the ADJUSTMENTS MENU). Note: To perform a complete Factory Reset, GO TO THE RESETS MENU. Escape back to the UTILITIES MENU, select the "RESET" Icon, then select the "FACT" Icon in the RESETS MENU (review the end of this section, Reset Factory Settings).

### HECD Enter Custom Message

To initiate, from the UTILITIES MENU, select the "ABCD CUST MSG" *Icon*. The SET CUSTOM MESSAGE (a short-cut for Standard Adjustment 41, Custom Message) provides an opportunity to have a text message appear in the the Attract Mode. Follow the on-screen prompts to complete [ END ].

Remember, use the **GREEN Button** to go [ **BACK** ], exit *or* escape, the **RED Buttons** to [ < /-] MOVE LEFT / CHOOSE NEXT [ + />] MOVE RIGHT / CHOOSE PREVIOUS, and the **BLACK Button** to [ **SELECT** ] as 'OK'.

### Set Custom Pricing

CUST

Step 1

To initiate, from the UTILITIES MENU, select the "PRIC" *Icon*. The CUSTOM PRICING MENU (a short-cut for Standard Adjustment 18, Game Pricing, and setting selected is CUSTOM) provides an opportunity to set Custom Pricing.

Note! MONETARY AMOUNT MUST BE SELECTED FIRST! Press [BACK] to - DECREASE or [SELECT] to + INCREASE the [<\$>] monetary amount (e.g. look at the right side of the display from \$0.25 to \$0.50). Press [</- ] to - DECREASE or [+/>] to + INCREASE the credit quantity (e.g. look at the left side of the display from 0 CREDITS AT: to 1 CREDIT AT:).

IF EXAMPLE CUSTOM PRICING SETTING DESIRED IS: 1 Play for \$0.50, 3 Plays for \$1.00 and 7 Plays for \$2.00

THEN YOU WILL NEED TO PERFORM THE FOLLOWING:

The starting display appears as below if no

Step 2 Press [ SELECT ] to + INCREASE to \$0.50.
Press [ + / > ] to + INCREASE to 1 CREDIT AT:

In these menus:

Press [ BACK ] to - DECREASE [ < \$ ]


Press [ SELECT ] to + INCREASE [ \$ > ]

prior Custom Pricing was installed.

CUSTOM PRICING

CREDITS AT: \$0.25

USE -/+ TO CHANGE CREDITS

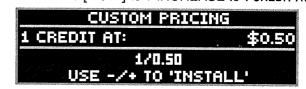

Step 3 Press [ SELECT ] to + INCREASE to \$1.00. Step 4 Press [ + / > ] to + INCREASE to 2 CREDITS AT:

.CUSTOM PRICING
2 CREDITS AT: \$1.00
1/0.50 3/1.00
USE -/+ TO CHANGE CREDITS

Press [ **SELECT** ] to + INCREASE to **\$2.00**. Press [ + / > ] to + INCREASE to **4 CREDITS AT**:



Step 5 Press [ SELECT ] to + INCREASE the amount once (example = \$2.25).

CUSTOM PRICE	ikie	
O CREDITS AT:	ţ	\$2.25
1/0.50 3/1.00 7/	2.00	
USE -/+ TO 'INS'	TALL	•

Press [ < l -] once or press [ + l > ] eleven times until INSTALL appears.

Step 6 Press [ SELECT ] to INSTALL. Press [ </- ] / [ + / > ] or [ BACK ] to edit.

CUSTOM PRICING
INSTALL
1/0.50 9/1.00 7/2.00
PRESS 'SELECT' TO INSTALL

Step 7 Press [ SELECT ], press [ BACK ] twice to exit the SERVICE MENU with your Custom Pricing installed.

CUSTOM PRICING INSTALLED PRESS 'SELECT' TO CONTINUE

To correct or make new changes, reenter, which brings you to **Step 6**. Press [BACK] repeatedly until the monetary amount shown is the desired amount and then continue following the above steps with your new or corrected settings. If you are still having difficulty or if you have any questions, please call Technical Support 800-542-5377 or 708-345-7700, option 1.



### Set Date / Time

To initiate, from the **UTILITIES MENU**, select the "TIME" *Icon*. The **SET TIME MENU** appears with the **MONTH** flashing. Setting the date and time is required for 'Data Dumps' and Tournament Start and End Dates. If the setting of Standard Adjustment 61, Time Format, is set to 12-HOUR (Factory Default) the time will be expressed in the AM / PM format. If Standard Adjustment 61, Time Format, is set to 24-HOUR the time will be expressed in the 24-hour format.

### Go To Resets Menu

To initiate, from the UTILITIES MENU, select the "RESET" Icon. The RESETS MENU provides six (6) functions to reset only the Coin Audits, reset only the Game Audits, reset only the Grand Champion Score, reset only the High Score(s), reset only the paid Credits (includes Service Credits) or to reset ALL DATA back to the Factory Default Settings.



### Reset Coin Audits

To initiate, from the RESET MENU, select the "COIN" Icon. A ONLY the Coin Audits [ Earnings Audits 5-12 ], will be reset to zero (0), Factory Default Settings. Follow the on-screen prompts to perform the Reset.



### Reset Game Audits

To initiate, from the RESET MENU, select the "AUD" Icon. A ONLY the Game Audits [ Earnings Audits 1-4, Standard Audits 1-59 and Feature Audits 1-XX\*], will be reset to zero (0). Factory Default Settings. Follow the on-screen prompts to perform the Reset. \*varies per game title.



### Reset Grand Champion (Score)

To initiate, from the RESET MENU, select the "GC" Icon A ONLY the Grand Champion Score [ adjustable via Standard Adjustment 31 ], will be reset to Factory Default Setting. Follow the on-screen prompts to perform the Reset.



### Reset High Scores

To initiate, from the RESET MENU, select the "HSTD" *lcon.* A ONLY the High Score(s) [adjustable via Standard Adjustments 32–35], will be reset to Factory Default Setting(s). Follow the on-screen prompts to perform the Reset. Note: High Scores (but not Grand Champion Score) are reset automatically every 2,000 games (Factory Default Setting) [adjustable via Standard Adjustment 37, HSTD Reset Count ].



### Reset Credits

To initiate, from the RESET MENU, select the "CRED" Icon. A ONLY the Credits (includes Service Credits) [ adjustable via Standard Adjustment 23, Credit Limit ], will be reset to zero (0), Factory Default Settings. Follow the on-screen prompts to perform the Reset.



### Reset Factory Settings

To initiate, from the RESET MENU, select the "FACT" Icon. A ALL GAME DATA IS RESET! (with the exception of Earnings Audit 13, Software Meter). NOTE: IF YOU HAD SET-UP CUSTOM PRICING OR HAD CHANGED ANY ADJUSTMENTS OR PERFORMED INSTALLS, IT IS SUGGESTED TO WRITE DOWN YOUR CHANGES PRIOR TO THE FACTORY RESET. Follow the on-screen prompts to perform the Reset.



### Go To USB Menu

To initiate, from the UTILITIES MENU, select the "USB" Icon. The USB MENU provides three (3) functions to download game data, update your game code or backup your code onto a USB Memory Stick. Review the inside cover for information on how to update your game code.



### Update Game Code

To initiate, from the USB MENU, select the "UPDT" Icon. Follow the on-screen prompts or review the inside cover for more information.




### Dump Audits to USB

To initiate, from the USB MENU, select the "DUMP" icon. Follow the on-screen prompts to perform a Data Dump (download). Note: If Icon is not present, access via the Audits Menu, see the Audits Section.



### Backup to USB Memory Stick

To initiate, from the USB MENU, select the "BKUP" Icon. Follow the on-screen prompts to perform a Backup (game code only). This backup feature does not retain adjustments and/or settings changes

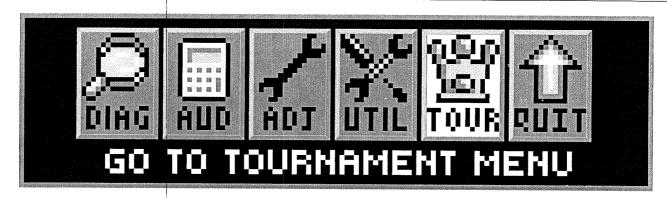

To initiate, from the MAIN MENU, select the "TOUR" Icon. The TOURNAMENT MENU provides ways to quickly and easily start and stop a tournament. Also, tournament data can be viewed (audits, prize info, etc.).

All TOURNAMENT MENU Icons and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. NOTE: Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some | cons may appear non-functional or may not appear at all. | lcons and/or functions, order and operation are subject to change.

In displays where changes can be made or to perform a function, use the GREEN Button to go [ BACK ], exit or escape, the RED Buttons to [ < / - ] HIGHLIGHT PREVIOUS or DECREASE / [ + / > ] HIGHLIGHT NEXT or INCREASE to highlight the desired option, and the BLACK Button to [ SELECT ] it or activate.

### ⊐ Start Tourhament

To initiate, from the TOURNAMENT MENU, select the "STRT" *Icon*. The START TOURNAMENT MENU allows the operator to start a tournament. Select QUICK START or CUSTOM Tournament Start. For the first time Tournament Set-Up, it is recommended to select CUSTOM. Follow the on-screen prompts. After completion of all options in QUICK START or CUSTOM, the Tournament is started, the START TOURNA-MENT MENU is exited and returns to the TOURNAMENT MENU.

### **OUICK START:**

Increase or decrease the: • DAYS, HOURS and MINUTES • PRIZE POOL \$ (DOLLAR) and ¢ (CENT) AMOUNT • INCREMENT THE PRIZE POOL PER PLAY INCREASES \$ and ¢ AMOUNT

### **CUSTOM START:**

- Confirm the current date and time (if it was not set previous via the UTILITIES MENU it can be set-up in this display as well). Enter the MONTH, DAY, YEAR and TIME
- Choose the Tournament Start Date: MONTH, DAY, YEAR and TIME
  Choose the Tournament End Date: MONTH, DAY, YEAR and TIME
- Choose the CREDITS per play desired (01-10). Set the maximum number of Credits that may be accumulated per game. Note: The current pricing is displayed; to change pricing GO TO THE ADJUSTMENTS MENU.

Increase or decrease the: • PRIZE POOL \$ (DOLLAR) and ¢ (CENT) AMOUNT
• INCREMENT THE PRIZE POOL PER PLAY INCREASES \$ and ¢ AMOUNT

- MAXIMUM (CAP) PRIZE POOL \$ and ¢ AMOUNT.

• Increase or decrease the number of PRIZES (01-05 HIGH SCORE; 02-05 B'N'W). Set the maximum # of Prize Positions to be awarded during a Tournament. Selections are as follows (% distribution cannot be changed):

HIGH SCORE: BUMP N' WIN: 1 Winner Set to **01** Set to **02** 2 Winners Set to **03** 3 Winners Set to **04** 4 Winners Set to **05** 5 Winners

• Select the AWARD TYPE (CASH, POINTS, PRIZE, TICKETS or NONE). Select CASH for the displays to represent the Prize Pool amount (based on Jackpot Base and Max.) in \$Dollars. Select POINTS for the display to represent the Prize Pool amount in Points. Select PRIZE, if applicable. Select TICKET for the display to represent the Prize Pool amount in Tickets. Select NONE NOT TO represent anything.

Custom Start continued on the next page.

HUD

#### CUSTOM START Continued.

The following option is available only if CASH was selected as the AWARD TYPE.

- Select the option to SHOW PLAYER CASH (YES or NO). Select YES for the display to represent the >>> previous <<< Tournament Winners & Cash amount (or Points, Prizes, etc.) will show in the Attract Mode.
- Select the kind of TOURNAMENT desired (BUMP 'N' WIN or HIGH SCORE).

- The following options are available only if **BUMP** 'N' WIN was selected as the **TOURNAMENT TYPE**.

   Select or confirm the **BASE POINT AMOUNT** (00 or 1,000,000 4,294,967,295 increments of 1,000,000.
- Select or confirm the **RANGE AMOUNT** (00 or 1,000,000 4,294,967,295 increments of 1,000,000).
- Select the **BALLS** per game (1 1|0).

## \* STOP TOURNAMENT

To initiate, from the TOURNAMENT MENU, select the "STOP" Icon. The STOP TOURNAMENT MENU allows the operator to stop a tournament. Note: This Icon only appears if a Tournament was set-up and is running (in place of the Start Icon).

#### STOP TOURNAMENT ARE YOU SURE?

• Use the BLACK Button to [ SELECT ] to confirm. Press the BLACK Button again to continue.

The STOP TOURNAMENT MENU is exited and returns to the TOURNAMENT MENU.

# TA VIEW TOURNAMENT DATA

To initiate, from the TOURNAMENT MENU, select the "DATA" Icon. If no data is available, the display will LIHTH indicate NO PREVIOUS DATA. Press the GREEN Button to escape [BACK] to the TOURNAMENT MENU.

## TOURNAMENT AUDITS [ #1 - #14 ]

To initiate, from the TOURNAMENT MENU, select the "AUD" Icon. The Dot Matrix Display will indicate the audit number (in this group), audit name and the audit total or value. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- 01 TOTAL PLAYS: Total number of Regular and Tournament Games played while a Tournament is in progress. This total is derived by adding the below Tournament Audit 02 with Regular Plays.
- 02 TOURNAMENT PLAYS: Total humber of Tournament Games played while a Tournament is in progress.
- TOTAL QUALIFYING PLAYS: Total number of times a player qualified (invited to enter name). 03
- TOTAL GAME EARNINGS: Total Gross Earnings accepted, while a Tournament is active (in progress) 04
- TOTAL TOUR. EARNINGS: Earnings (Audit 04 less Reg. Game Earnings) while a Tournament is in progress. 05
- PRIZE POOL TOTAL: Total Prize Pool (Jackpot) Amount to be paid out while a Tournament is in progress. 06
- 07 NET EARNINGS: Provides the total Net Earnings (Gross Earnings less Prize Pool) while a Tournament is active.
- ACCUM. TOTAL PLAYS: Accumulative total amount of Regular & Tournament Games played since the first 08 Tournament was played.
- ACCUM. TOUR. PLAYS: Accumulative total amount of Tourn. Games played since 1st Tournament was played. 09
- ACCUM. QUALIFYING PLAYS: Accumulative total number of times a player qualified (invited to enter name). 10
- ACCUM. EARNINGS: Total Gross Earnings accepted, since the first Tournament was played 11
- ACCUM. TOUR EARNINGS: Accumulative total Tournament Game Earnings since the first Tournament was played. 12
- ACCUM. JACKPOT: Accumulative total of Prize Pool Amounts paid out since the first Tournament was played. 13
- # TOURNAMENTS: Number of Tournaments (not individual Games) since the first Tournament was played. 14

## ÷ប÷ SIGN MESSAGES A−B

To initiate, from the TOURNAMENT MENU, select the "A-B TEXT" Icon. At time of print, menu TEXT non-functional. If made available in future code updates, this menu will allow the operator to display "Location" and "Prize" Messages. Follow the on-screen prompts to complete [ END ].


Remember, use the **GREEN Button** to go [ **BACK** ], exit *or* escape, the **RED Buttons** to [ < / - ] MOVE LEFT / CHOOSE NEXT [ + / > ] MOVE RIGHT / CHOOSE PREVIOUS, and the **BLACK Button** to [ **SELECT** ] *as 'OK'*.

H-B



#### Exit Service Menu

In the MAIN MENU and in all SUB-MENUS (where the "QUIT" Icon is present), if the "QUIT" Icon is selected and activated, or the Green [BACK] Button is selected repeatedly (depending on which sub-menu you're in...), the SERVICE MENU Session will be exited and returned to the Attract Mode.

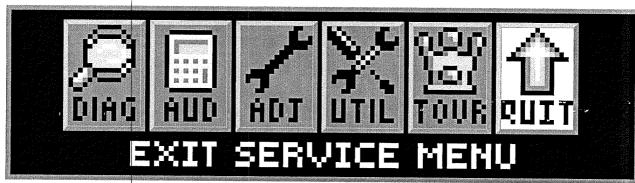



Turning the game on/off will start the *Power-Up Routine*. Upon **Power-Up**, the DISPLAY will indicate the COUNTRY, FILE VERSION and LANGUAGE(S) installed. LANGUAGE/COUNTRY: change via Dip Switch.



The below Problem / Solution Table was designed to answer some common problems frequently asked.

## Problem / Solution Table

SOLUTION
<ul> <li>Check the Service Switches [ GREEN, RED (x2) &amp; BLACK Buttons ] for loose connections or bad ground.</li> <li>Check the associated wiring harness to/from the CPU/Sound Board, Connector J13.</li> <li>Check CPU/Sound Board for possible failure.</li> </ul>
Check the Service Switches wiring harness for poor or no connection and/or broken wires.
<ul> <li>Check to make sure the Game is not in "Free Play." If the game is set to Free Play, adding Service Credits is not required.</li> <li>Check the Service Switches wiring harness for poor or no connection and/or broken wires.</li> </ul>
<ul> <li>Check the Dot Matrix Display for loose wiring harness for poor or no connection and/or broken wires.</li> <li>Check F1 (3/4A Fuse) on the Display Power Supply Board. Refer to the Yellow Pages (SCHEMATICS &amp; TROUBLESHOOTING).</li> </ul>
Check for a stuck switch on either of the <b>Red Buttons</b> .
This is normal. These switches are deactivated, as they are a part of the Switch Test.  Refer to the Diagnostics Section (GO TO DIAGNOSTICS MENU, Switch Test).
<ul> <li>Check the Flipper Buttons for loose connections or bad Ground and refer to Section 5, Chapter 2, Playfield Wiring, #-Flipper Circuit Wiring Diagram.</li> <li>This is normal only in Diagnostic's Switch &amp; Active Switch Tests (see previous Problem).</li> </ul>
• Some functionality of the Service Menu may not have been completed during development. If exists, it should only be a non-critical function, such as the "HELP" <i>lcon</i> , which will explain the usage of icons. When completed, a software update will correct the problem. Software updates are announced via Service Bulletins (if critical) and on our website http://www.sternpinball.com/GAME-code.shtml; view the Game Code Library Message Board Marquee or click Previous Messages for past announcements.
Ensure the POWER INTERLOCK SWITCH is pulled out (see the start of this Chapter).
The Volume adjustment can only be made when in the Attract Mode (see the start of this Chapter).
If you cannot clear the situation by exiting back one Menu, exit completely out of the SERVICE MENU, and re-enter. If the problem persists, call Technical Support for additional help.

IF YOU NOTE ANY OTHER PROBLEMS OF HAVE ANY SYMPTOMS NOT DESCRIBED ABOVE, PLEASE CALL TECHNICAL SUPPORT 800-542-5377 (708-345-7700 OPTION #1), SO WE MAY ASSIST YOU.

## Optional Kits available through your Distributor:

Pinball Location Maintena	nce <u>Standard</u> Kit (for Rolling Stones Pinball)502-600 <u>2</u> -B8
nlavfield). Bulbs (Bulb quanti	8 oz. Novus Wax #2 Fine (Red) ( <b>675-0003-01</b> ), Cloth, Rubber Rings (used above ties vary and is limited to 25 per type), Fuses (1/per type) and 4 Pinballs. <b>Note:</b> subject to change without notice.
Pinball Location Maintena	nce <u>Deluxe</u> Kit (for Rolling Stones Pinball)502-600 <u>3</u> -B8
- Rebuild Kits <b>Note:</b> Quantii	inball Location Maintenance <u>Standard</u> Kit as described above plus a quantity of Flipper y varies which equals the same quantity of flippers used in this game.  HIS GAME KIT INCLUDES ( 2 ) FLIPPER REBUILD KITS A
Plastics*Kit (for Rolling S	Stones Pinball)80 <u>3</u> -5000-B8
Plastics Kit includes:	Plastic Sets (830-6130-XX)
Decals*Kit (for Rolling S	tones Pinball)80 <u>2</u> -5000-B8
Decals Kit includes: D	ecal Set (820-6580-XX)
Mylar*Kit (for Rolling St	ones Pinball)80 <u>2</u> -5001-B8
Mylar Kit includes: Po	p Bumper (820-6584-00)


<sup>\*</sup>Attention: No individual Plastic or Decal can be ordered separately, unless noted otherwise. Plastics & Decals are subject to change without notice during and / or after production. Key Fobs subject to availability and may or may not be included in the plastic set. All designs, shapes & pieces used subject to change without notice. Kit contents subject to change. Service Bulletin(s) will announce any critical changes, if warranted. The last 2-digits shown on plastics or decals

# arts Identification

# **ROLLING STONES PREMIUM PARTS:**

Pivot Hinge Chrome (Left Style)	535-7999-06
Pivot Hinge Chrome (Right Style)	535-7999-07
Speaker Grill Chrome	535-8081-04-0
Chrome Legs with Leveler Asm	500-5921-10
White Ceramic Pinball	260-5012-00
Front Molding Lockdown Asm	500-6881-00
Front Molding (Chrome) No Button Hole	500-6882-02-02
Bracket, Playfield Support Slide	535-6862-05
Start Button	500-6388-44-TL

# Backbox [ S.A.M. System ] - Parts [

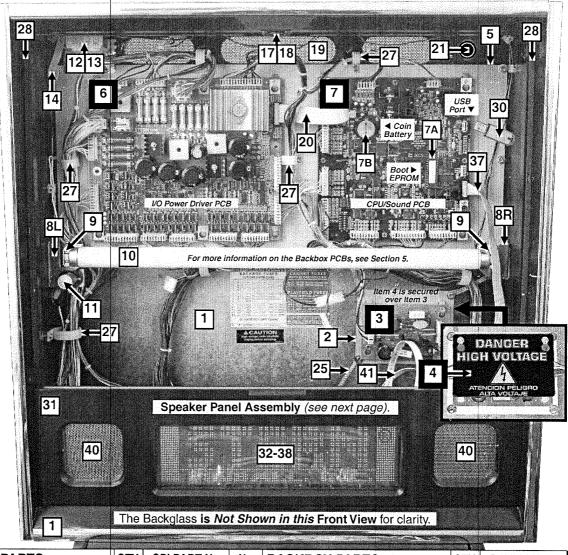

Nr. BACKBOX PARTS	QTY. SPI PART Nr.	Nr. BACKBOX PARTS	QTY. SPI PART Nr.
1 BackboxRolling Stones™ (No Parts)  Item 1 Note: Chrome T-Molding is installed and cannot be Fuse Description (820-6384-00) and High Voltage Caution (	1 525-5631-17-B8 ordered separately. JL) (820-6082-01) Decals.	Starter - Fluorescent (FS2 Light) Starter Base (with leads) [on Item 8L]	1 165-5011-01 1 077-5213-00
2 PCB Metal Mounting Plate [Display] 3 Display Power Supply PCB Item 3 is secured to @ bottom by: #8-32 X 3/8" SHWH Sy 4 Plastic Cover [DANGER HIGH VOLTAGE] Items 3 & 4 are secured to @ top by: 1-1/4" X 3/8" Plastic	1 830-6053-00	Item 11 is secured to Item 8L by: #4-40 X 1/2* PPH MS (\$ 12 Ballast Mounting Plate	1 535-8657-00 1 010-5015-00
(254-5000-05) and #8-32 X 1-3/4" SHWH Ser. (Zinc) (Qiy. 2)  5 PCB Metal Mounting Plate [I/O+CPU]  Items 2 & 5 are secured to Item 1 by: #8 X 1/2" SHWH AE  (234-5101-00) and #10 Washer 7/32" I.D. X .5" O.D. X 1/16"  Note: Where a Wire Clamp (Item 27) is mounted, a #10 Washer  6 I/O Power Driver PCB [S.A.M. Sys.]	(237-5975-28) 1 535-9664-00 s (Zinc) (City. 1/hole) Thick (City. 1/hole) (242-5003-00)	14 Ground Strap (5") 15* Roto Lock Male (on Cabinet) 16 Roto Lock Female (R2-0002-02) Item 16 is secured by: #10-24 X 1-3/4* CBSN (231-5022-0 (240-5207-00), #10-24 X 2" CBSN (231-5045-00) and #10 Washer 7/32" I.D. X .5" O.D. X 1/16* (Gry. 5) (242-5003-0	
7 CPU/Sound PCB [S.A.M. System]  7A: 8MB EPROM #M27C801-100F1  Ordering Note: Programmed EPROM (965-BOO 7B: Coin Cell Battery (CR2430 3V) (0 For USB Memory Stick Information, see Item 30 or  Items 6 & 7 are secured to Item 5 by: #8-32 X 3/6" SHWH	F-SAM) 00-0644-01) the next page.	17 Lock Mounting Plate 18 Lock 5/8" Barrel, 3/4"ø, 1.5" Flat Cam Items 17 & 18 are secured by: #8 X 1/2" TP Torx T20 Black 19 Back Vent Grill 2-1/2" X 18"	1 535-0072-00 1 355-5055-00
(237-5975-00) and 1/4* SIf. Rtn. Spacer White (City 5 [ 1/0 ] 8 Fluorescent Light Bracket (Left Style) 8 Fluorescent Light Brckt. (Right Style)	Qty. 4 [ CPU ]) (254-5007-05) 1 535-7739-00	20 Ribbon Cable, 20-Pin (3.5")  Item 20 connects the I/O Pwr. Drvr. PCB to the CPU/Sound 21 Button Hole Plug (Blk) (Happ #52-6214-00)	
Items 8L & 8R are secured to Item 1 by: #10-24 X 1-1/4" ( (Qry. 2/per) (231-so 12-00), #10-24 Keps Nut (Qry. 2/per) (244 3/4" X 3" Reinforced Strapping Tape (Qty. 1, sold in 12" length	-5207-00) and	tem 21 plugs the Access Hole required if using optional BE  22 Header Sign TOURNAMENT PINBALL  23 Friction Hinge (Black) behind ▲▼	TAbrite \$ign or Data cables. 1 545-6133-00
9 Fluorescent Lamp Holder (Socket) Item 9 is secured to Items 8L and 8R by: #6-32 X 5/8" PP (232-5203-00) Lock-in Fluor. Bulb with Yellow Socket Clip	o (Qty. 1/per) (545-6271-00)	24 Block / Sign & Hinge Stop (Black) Item 22 is sandwiched between Items 23 & 24 through 2 is secured to Item 1 by: #8-32 X 3/8* PPH MS Ext. Sems (	(Zinc) (Qty. 2/per) (232-5301-00)
10 Fluorescent Tube 24" (F20T9CW)	1 165-5061-00	and Item 24 to Items 22-23 by: #8 X 5/8" PPH AB Black (C PARTS TABLE & VIEWS CONTIN	Qty. 2/per) (232-5101-01)

1 036-5454-01


036-5520-00

031-5004-02

535-8081-04

600-5006-25

535-7009-02

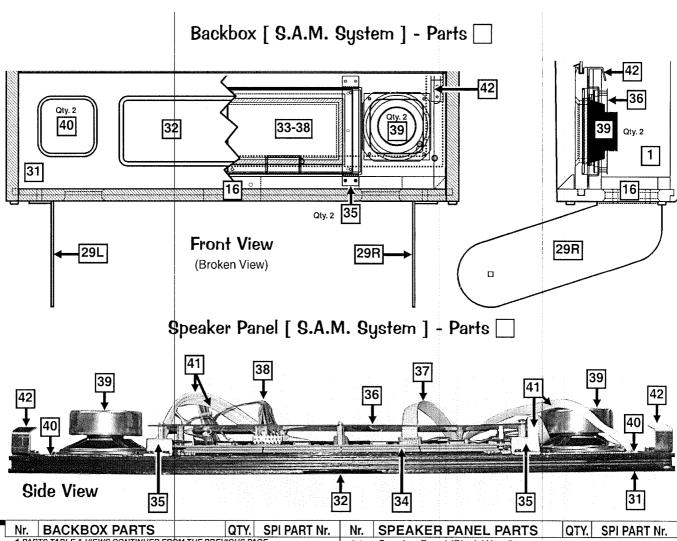

L	┛		_			السبا		
Nr. BACKBOX PARTS	QTY	SPI PART Nr.	Nr.	SPEAKER	PANEL	PARTS	QTY.	SPI PART Nr.
◆ PARTS TABLE & VIEWS CONTINUED	FROM THE PREVIOUS	PAGE.	31	Speaker Pane	el (Black W	/ood)	1	525-5515-00
25 Braided Wire (1-1/2 Feet Item 25 is secured by: Staple 5/16" (Qty		600-5001-00	32 Item 33	Plastic Shield			HOR CONTROL HER TAX THE	545-5884-00 (Qty. 8) (234-5000-00)
26* Zip Cable Tie (Screw Do Item 26 is secured @ inside bot. by: #8		040-5005-00 Qty. 1/per) (234-5101-00)	33* Above	Foam 3/16" T Item 33 is self-adh				626-5026-00 d in 12" Lengths only.
27 Clamps [Multiple Sizes]	15	040-5000 <b>-XX</b>		128 X 32 Dot	Matrix Dis	play PCB	1	520-5052-00
Item 27 secured by: #8 X 1/2" SHWH Al following sizes, replace -XX with: .1/4"			34	/// EURO ONLY	RoH\$ /// 128	X 32 DM Pin		520-5052-04
3/4" Single = -08 (Qty. 4); 1" Single = -09				/// EURO ONLY	RoHS /// Dot	t Matrix Pin-Le	ED Bezel	545-6281-00
28 Foam 3/16" Thick X 1/4" Above Item 28 is self-adhesive. 17.5"s		626-5026-00 12" Lengths only.	Item 34 (254-50	l is secured to Item 000-18) and #6-32 >	1 <b>35 by <i>(at co</i> ( 1/2" SHWH</b>	orners): 3/16" Swage (Serr) Z	( 3/8" Spacer ( inc (Qty. 4) (23	Gray (Qty. 4) 7-5976-03)
29L Pivot Hinge (Left Style)	1	535-7999-00	35	Dot Matrix Dis				535-8368-01
29R Pivot Hinge (Right Style)	1	535-7999-01	1915351648790256	is secured to Item	Audicher aufgreuse Luter zust zeiten wir	enémanantan transmission	70.0044094866046604	GRAND NOTICE SECURE OF THE SECURE
Items 29L-29R are secured to Backbox (231-5003-00) and 1/4"-20 Flange Nut (Q			36 Item 36	Plastic Shield Is secured to Item				830-6040-00
Items 29L-29R are secured to Cabinet to (Black) (Qty. 1/per) (254-5042-00), Nylon S	y: Spacer Hex Nut 1/2" (		(254-50		Hex Spacer #	6-32 Tap (Qty.	2) (254-5008-0	4), #6-32 X 1/4" PPH
1/4-20 X 1/2" Carriage Bolt Square Neck Washer 1" O.D. X 1/2" I.D. X 1/16" (Black)	Black) (Oty. 1/per) (231-5	072-00) and		Ribbon Cable	0.1000/00/00/00/00/00/00/00/00/00/00/00/00	V-01000 (1010001021) 2115 (01500000000000000	CRONSTRUGGES DE CRESTOLES D	036-5260-32
30* Memory Stick USB 1.1+ [Gene	pout o menople de la compansión de la comp	970-0064-00	37	/// EURO ONLY	RoHS /// LEI	O Ribbon Cab	le Filter	520-5259-00
Memory Stick USB 1.1+ [Gene	ric] 128MB	970-0128-00	Item 37	7 (14-Pin) connects	the 128 X 32	2 Dot Matrix Dis	play PCB to th	e CPU/Sound PCB.

Display Cable (Wiring Harness)

/// EURO ONLY RoHS /// LED Display Adapter

Speaker (Shid.) 4" 8Ω #MG ELE 4060SH

Speaker Grill (Chrome w/no Artwork)

Ground Strap (25") [ 2 per : Items 35 & 39 ]

Speaker Panel Hook Bracket

Items 39-40 are secured by: #8 X 1/2" SHWH AB (Black) (Qty. 4/per) (234-5101-01)

Memory Stick USB 1.1+ [Generic] 128MB 970-0128-00

Item 30 was not included with your game. Read the inside cover or go on-line for more info.

To order with the latest game code copied onto it, add -98 to the Part Nr. (970-0128-00-98).

File(s) can be downloaded from our website (Files are 25MB or larger, DSL or Fast Modern recommended). Not all manufacturers of Memory Sticks are compatible with our system.

Test it out, if it doesn't work properly, return your purchase and order the memory stick through you local pinball distributor (Stern Prinball Memory Sticks guaranteed compatible).

(ASM. REF. 505-6002-98-98, Items 1-42 Only, [29-30 not included in assembly])

#### Take Note:

\* An asterisk ( \* ) indicates item(s) are not noted in the pictorials.

	` ' '		•				
Nr.	<b>BACKGLASS PARTS</b>	QTY.	SPI PART Nr.	Nr.	BACKGLASS PARTS	QTY.	SPI PART Nr.
j*	Glass (Tempered) 25.906" X 19.18	7" X .125" <b>1</b>	660-5038-02	iv*	Bottom Plastic Lift Channel - 26"	1	545-6313-01
ii*	Rolling Stones™ Film Art	(#98) 1	830-52B8-00	٧*	Plastic Edging (Left/Right) - 18-1/8	2	545-5018-14
iii*	Top Plastic Channel - 26"	1	545-5018-15		I-v are secured to Item I by: Taple (Double-Sided) Only 6" required, sold in 12" lengths only.		) (626-5005-00) 5-5450-00-98 , Items i-v)

38

39

40

41

42


Harness

Parts Identification & Location



PARTS TABLE & VIEWS CONTINUED ON THE NEXT PAGE. >

# Main Playfield Bottom Miscellaneous Parts and Brackets

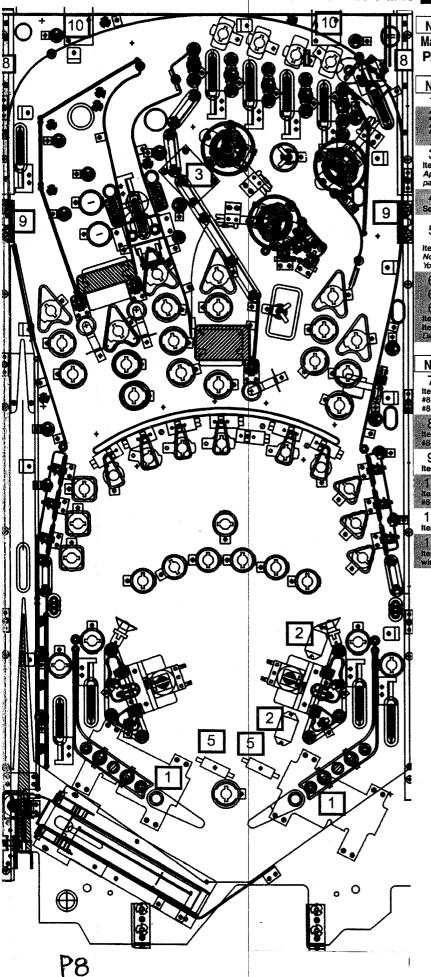

Nr.	THE PLAYFIELD	QTY.	SPI PART Nr.
Main	P/F Screened w/ Inserts & NO Parts	1	830-5100-B8
P/F	P/F Complete w/ Inserts & ALL Parts	1	505-6004-B1-B8

Nr.	MISC. PARTS (BELOW)	QTY.	SPI PART Nr.
1	Insulation Fiche Paper (under Lower Flippers)	2	545-5721-00
2	Relay + Conn. Asm. Amp Suit	2	190-5004-01
2	Relay+ Conn AsmTransporter (Prem)		511-5249-01

PCB, OPTO Transceiver Amplifier 520-5239-01 Item 3 is secured by: #6 X 3/4\* SHWH AB (Zinc) (Cty. 4) (234-5003-00)

Application Note: Required for OPTO Transceiver Pairs (500-6775-01) listed on the next page (... Switches). See the Yellow Pages, PCBs, Pages y 42 – y 43.

	Resistor Assy ne Yellow Pages,	William.	51	1-522	3-00
_	3A 250v Slo-Blo Fuse	2	20	0-500	80-0
Э	Fuse Clin Holder (Socket)	4	20	E E00	n 01

Item 5 is secured by: #6 X 1/2\* PPH AB (City, 1/per) (237-5805-00)

Note: Item 5, Fuse Clip Holder (Socket) 205-5000-01 is part of a set of 12 (205-5000-12).

You can order them as individuals (...-01) or a set of 12 (...-12).

6 Diod	e Terminal Strip 3-Lug (8	10) Isolated	055-5204-03
6 Diod	e Terminal Strip 5-Lug (8	13) Isolated	055-5204-05
6 Diod	e Terminal Strip 7-Lug (8	24) Isolated	055-5204-07
Items 6B-6C a	re secured by: #6 X 3/8 HWH	AB Zinc (Otv. 1-2/per)	(234-5000-00)

#### MISC. BRACKETS (BELOW) QTY. SPI PART Nr.

Bracket, Playfield Support Slide

/ Bracket, Playlied Support Slide 535-6862-05 ttem 7 is secured by: #10 X 1/2\* HWH A (Zinc) (Qty. 2/per) (237-5817-00), #8-32 X 5/8\* SHWH Swage (Zinc) Wax (Qty. 1/per) (237-5975-03) and #8-32 T-Nut (Qty. 1/per) (240-5101-00)

8 Bracket, Edge Slide (Extended) 2 535-5988-01 ttem 8 is secured by: #4 X 1/2\* PFH (Zinc) (Qty. 5/per) (237-5840-00) and #8-32 T-Nut (Qty. 2/per) (240-5101-00)

Bracket, Pivot Pin Welded Assembly 500-5329-03 Item 9 is secured by: #8-32 X 5/8" SHWH Swage (Zinc) Wax (Qty. 2/per) (237-5975-03)

10 Bracket: Back Panel Mounting 2 535-8964-00 Item 10 is secured by: #8 X 1/2" SHWH AB (Zinc) (Chy 2/per) (234-5101-00) and #8-32 T-Nut (Chy 2/per) (240-5101-00) For a 3D View ; See the Blue Pages, Page b 23


Bracket, Hole Protect (center up-post) 0 535-0289-00

tem 11 secured under the playfield by: #8 X 1/2" SHWH AB (Zinc) (Oty. 2) (234-5101-00)

12 Tie Post (White Nylon) 3-1/2" 9 545-5253-01

Reim 12 is secured by: #6 X 5/8" SHWH AB Green (City 1/per) (234-5002-00) and wiring with Cable Tie, 5-1/2" (City. 1/per) (040-5001-02)



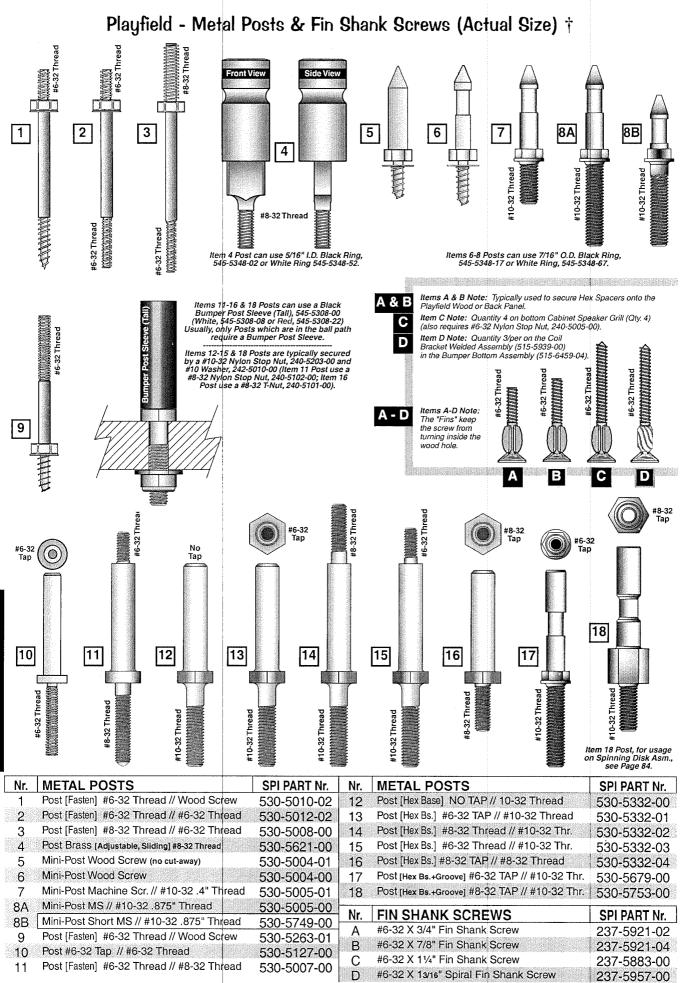

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.


# Playfield - Nylon Stop, KEPS, Hex, T-, Flange, Pal\* & Wing Nuts\* (Actual Size) †


			,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
Nr.	NYLON STOP NUTS*	SPI PART Nr.	$\otimes$	
N1	#6-32 Nylon Stop Nut	240-5005-00		
N2	#6-32 N.S. Nut (with 1/4" Hex Body)	240-5010-00		
13	#8-32 Nylon Stop Nut	240-5102-00		
N4	#10-32 Nylon Stop Nut	240-5203-00		<b>,</b> ♠,
<b>N</b> 5	#10-24 Nylon Stop Nut	240-5206-00		14 1
tem N n the (	15 used with #10-24 X 1-3/4" Carriage Bolt Square Neck Black Cabinet for the Roto Lock (Male) (355-5006-01).	(231-5022-00) located		
V6	#4-40 Nylon Stop Nut	240-5303-00		
N7	#4-40 (18/8 Stainless) Nylon Stop Nut	240-5303-01		
N8	5/16"-18 Nylon Stop Nut	240-5316-00		
۱r.	KEPS NUTS*	SPI PART Nr.		~~~
<del>(</del> 1	#6-32 Keps Nut (with Star Washer)	240-5008-00	E 2003	₹⋒}
(2	#6-32 Keps Nut (with 1/4" Hex Body)	240-5011-00	100	الركيسي الم
\ <u>^</u>	#8-32 Keps Nut	240-5104-00		
K4	#10-32 Keps Nut	240-5208-00	را ا	<b>A</b>
<b>\</b> 5	#10-24 Keps Nut	240-5207-00	<del>1000 1001</del>	K 1
K6	#4-40 Keps Nut	240-5318-00		
	•			
۷r.	HEX NUTS*	SPI PART Nr.		
1	#6-32 Hex Nut (No Star Washer)	240-5004-00	(OY)	$(\bigcirc)$
12	#8-32 Hex Nut	240-5103-00		
13	#10-32 Hex Nut	240-5201-00		
<del>1</del> 4	#10-24 Hex Nut	240-5202-00		.▲
tem H he Ca	14 used with #10-24 X 1" Carriage Bolt Square Neck Black (23 binet for the Side Armor Rear (towards Backbox).	1-5021-00) located in		пі
H5	#10-32 X <sup>3</sup> / <sub>8</sub> " Hex Nut	240-5209-00		
-15 -16	3/4-16 Hex Nut	240-5315-00		
H7	#2-56 Hex Nut	240-5301-00		
-i.8	<sup>7</sup> ⁄ <sub>8</sub> "-14 Hex Nut	240-5317-00		
Nr.	T-NUTS*	SPI PART Nr.	OR.	
T1	#6-32 T-Nut	240-5002-00	(ap)	(
т Т2	#6-32 T-Nut (with Side Cut Off)	240-5002-00	996	499
г2 Г3	#8-32 T-Nut	240-5002-01	$\sim$	
го Т4	#10-32 (Black Oxide) T-Nut	240-5101-00		<b>A</b>
т <del>4</del> Т5	#10-32 T-Nut (with Side Cut Off)	240-5205-00		1 1
T6	#10-32 X 5/16" 3-Prong T-Nut	240-5205-00		
T7	#10-24 T-Nut	240-5200-00		
<u>\r.</u>	FLANGE NUT*	SPI PART Nr.		
F1 em F1	1/4" X 20 Flange Nut I used with 1/4-20 X 1-1/4 Sq. Neck Carriage Bolt Black (231-5	240-5300-00 5003-00) located in the	10/11	
abine	t for the SIde Armor (Front) and Pivot Hinges.			
Nr.	PAL NUTS*	SPI PART Nr.		<b>≜</b> F 1
P1	Plastic Pal Nut (on Flipper Buttons)	240-5003-00		• •
P2	Metal Pal Nut (on Flipper Buttons)	240-5003-01		
	Shown	<del></del>		
Nr.	WING NUTS*	SPI PART Nr.		
<b>W</b> 1	#6-32 Wing Nut	240-5001-00		
N2	#8-32 Wing Nut	240-5100-00		
N3	#10-24 Wing Nut	240-5211-00		
N4	1/ <sub>4</sub> "-20 Wing Nut	240-5302-00		

240-5324-00

W5 1/4"-20 Toggle Wing

Not Shown

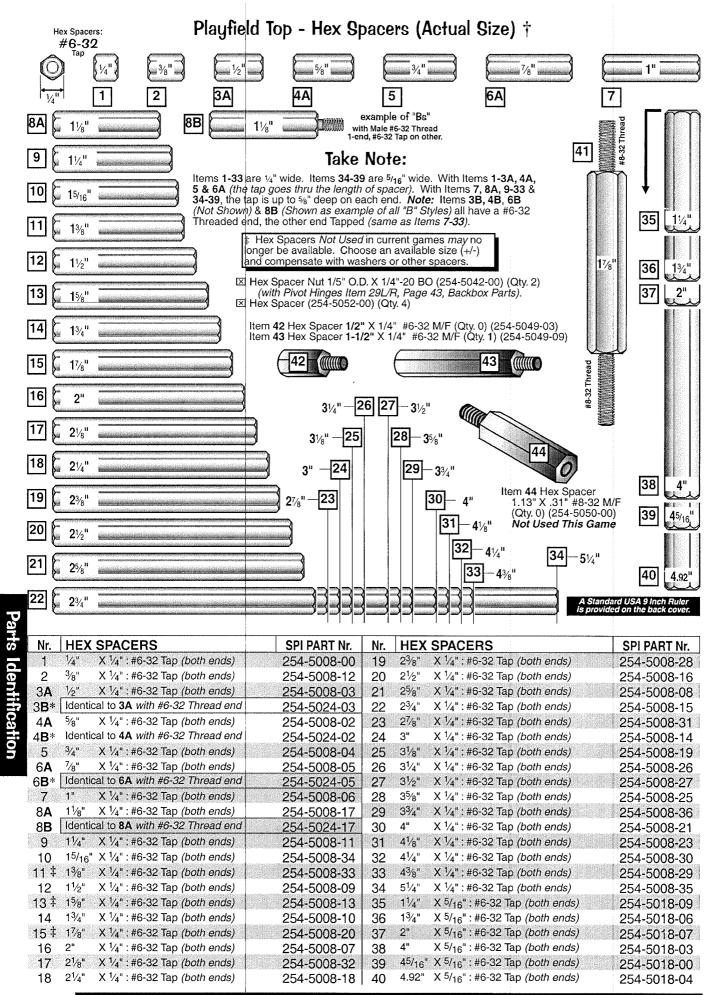

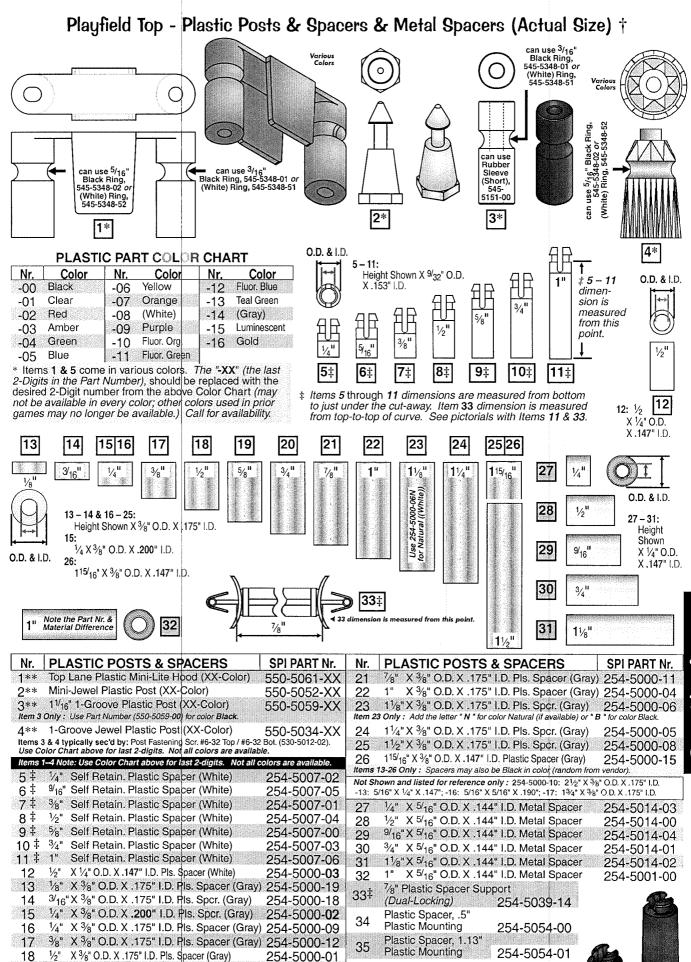


254-5000-14


254-5000-07


X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)


X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)

19 20

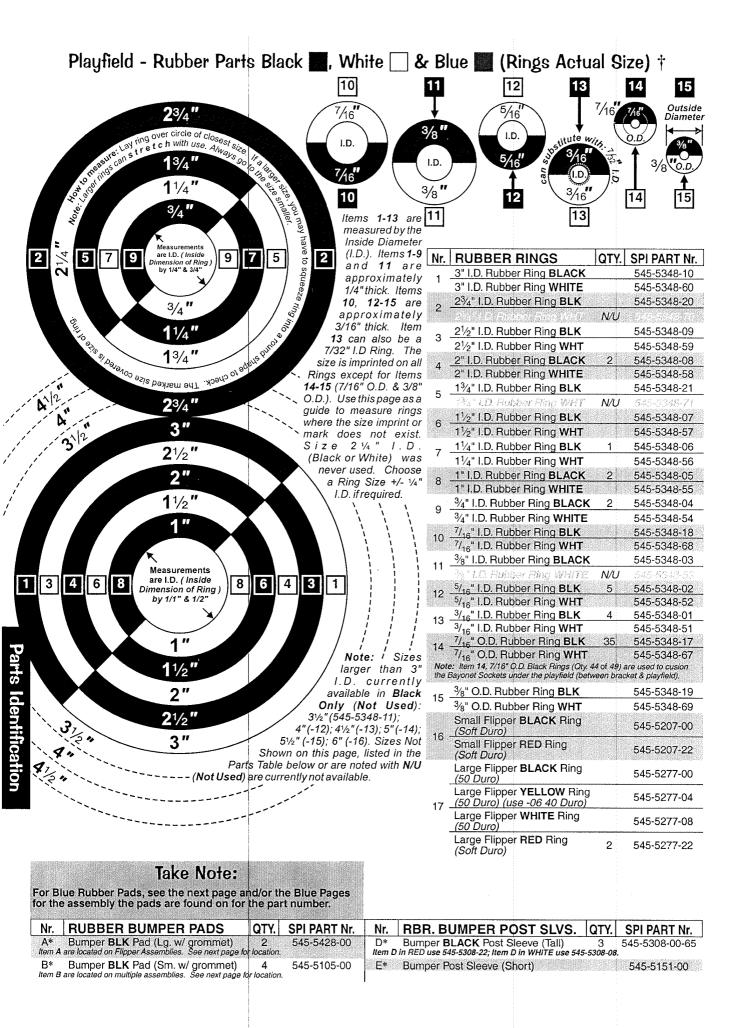

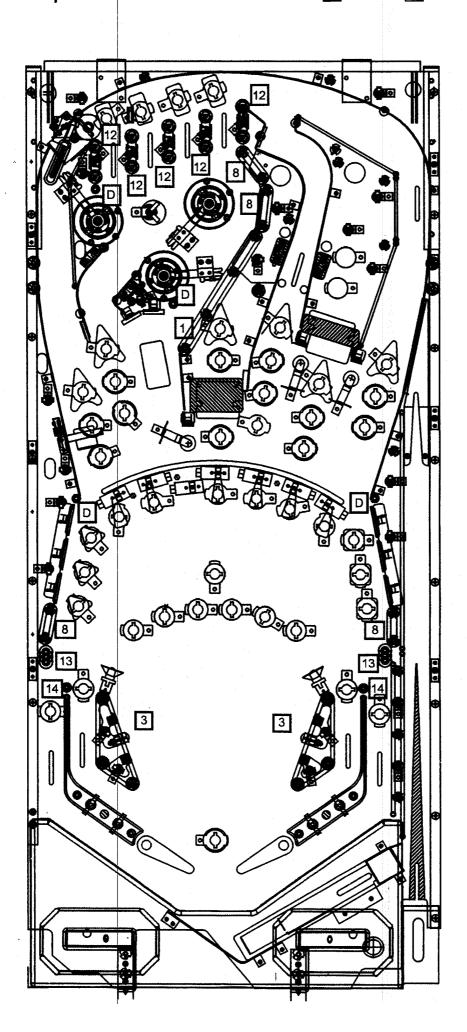

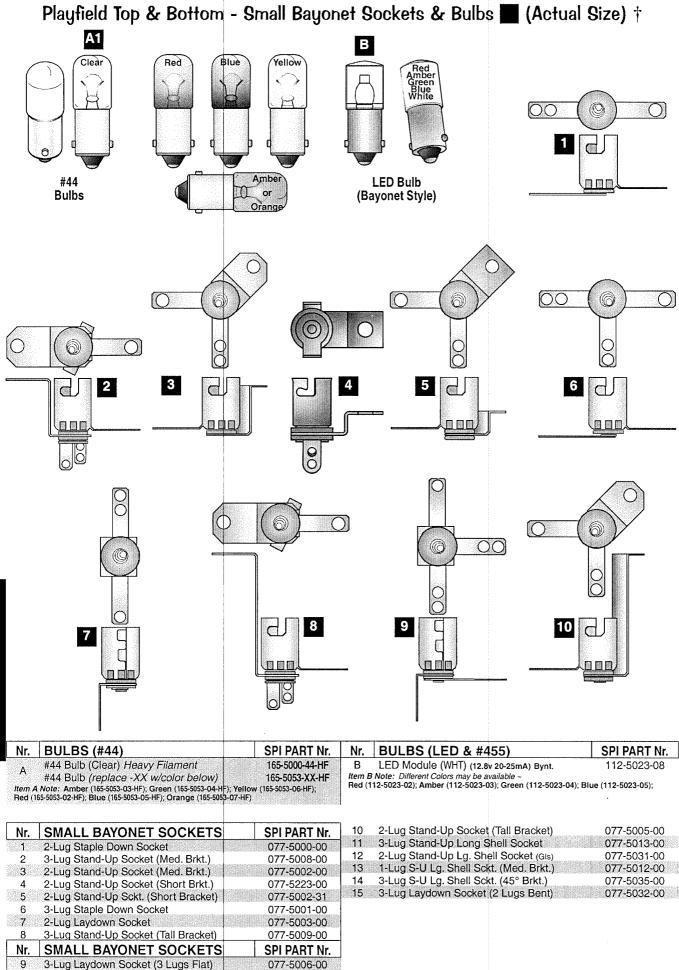

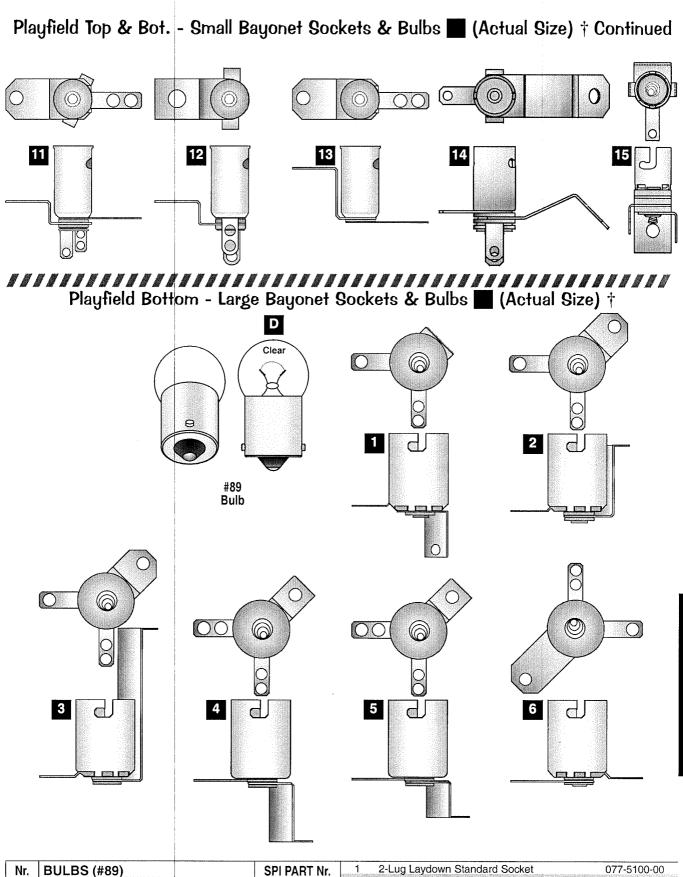

Nr.	BULBS (#89)	SPI PART Nr.	2-Lug Laydown Standard Socket	077-5100-00
D	#89 Bulb Heavy Filament	165-5000-89-HF	2 2-Lug Stand-Up Short Socket	077-5101-00
05.01.0 <del>1.0</del> 0.000	noo Baib ricary i namen	100 0000 05111	3 2-Lug Stand-Up Long Socket	077-5102-00
			4 2-Lug Stand-Up Rev. Mount Socket	077-5103-00
			5 2-Lug Stand-Up Rv. Mnt. Short Socket	077-5106-00
			6 2-Lug Straight Leg Socket	077-5107-00

Nr. LARGE BAYONET SOCKETS SPI PART Nr.

#### **Backbox Wiring**

- ► Coils Detailed Chart Table
- ➤ Backbox I/O Power Driver Board Detailed Wiring Diagram
  ➤ Backbox Board Layout Wiring Diagram

⇒ 128 X 32 Dot Matrix Display PCB (USA)	
⇒ 128 X 32 Dot Matrix C#S-LED // EURO ONLY RoHS /	/

#### Playfield Wiring

- ▶ General Illumination Circuit Detailed Wiring Diagram
   ▶ Playfield Switch Wiring Diagram
   ▶ Playfield Lamp Wiring Diagram

- ▶ Playfield Terminal Strips, Fuses & Misc. Wiring Descriptions & Locations
   ▶ #-Flipper Circuit Wiring Diagram

#### Cabinet and Coin Door Wiring

- ► Transformer Power Wiring Diagram
  ► Cabinet Wiring Diagram


- ▶ Coin Door Wiring Diagram
   ▶ Cabinet Universal Voltage Jumper Plugs (for use with Universal AC Cable, 036-5530-00 ONLY)

## **COILS DETAILED CHART TABLE**


	High Current Coils G	oup 1	Drive Transisto	Driver Output PC	Power Line Color	Power Line Connection	Power	Drive Transistor Control Line Colo	D.T. Control	Coil GA-Turn
#1	TROUGH UP-KICKER		Q1		YEL-VIO	J10-P9/10	1	1	J8-P1	or Bulb Type 26-1200 090-5044-ND
#2	AUTO LAUNCH		Q2		YEL-VIO	J10-P9/10	50VDC	ļ	J8-P3	24-940 090-5036-ND
#3	CENTER LOCKUP (UP)		Q3	<b>A</b>	YEL-VIO	J10-P9/10	50VDC		J8-P4	26-1200 090-5044-ND
#4	CENTER LOCK UP (LA	ТСН)	Q4	I/O Power	YEL-VIO	J10-P9/10	50VDC	BRN-YEL	J8-P5	32-1800 090-5031-00
#5	MAGNET (LEFT)		Q5	Driver	VIO-YEL	J10-P8	50VDC	BRN-GRN	J8-P6	22-600 090-5076-00
#6	LEFT CONTROL GATE		Q6	₩	YEL-VIO	J10-P9/10	50VDC		J8-P7	32-1250 090-5060-0
#7	MAGNET (RIGHT)		Q7		VIO-YEL	J10-P8	50VDC		J8-P8	22-600 090-5076-00
#8	SHAKER MOTOR (OPT	IONAL)	Q8		RED-WHT	J17-P7	16VAC	BRN-GRY	J8-P9	502-5027-00
	High Current Coils Gr	oup 2	Drive	Driver Output PCE	Power Line	Power Line	Power	Drive Transistor	D.T. Control	Coil GA-Turn
#9	LEFT POP BUMPER		Q9	Output PCE	YEL-VIO	J10-P9/10		Control Line Color BLU-BRN	Line Connect J8-P1	or Bulb Type 26-1200 090-5044-ND
#10	RIGHT POP BUMPER		Q10		YEL-VIO	J10-P9/10		BLU-RED	J8-P2	26-1200 090-5044-ND
#11	BOTTOM POP BUMPER	?	Q11	<b>A</b>	YEL-VIO	J10-P9/10		BLU-ORG	J8-P4	26-1200 090-5044-ND
#12			Q12	I/O Power			,	BLU-YEL	J8-P5	Č.
#13	LEFT SLINGSHOT		Q13	Driver	YEL-VIO	J10-P9/10	50VDC	BLU-GRN	J8-P6	26-1200 090-5044-ND
#14	RIGHT SLINGSHOT		Q14	•	YEL-VIO	J10-P9/10		BLU-BLU	J8-P7	26-1200 090-5044-ND
#15	LEFT FLIPPER (50V F	ED/YEL)	Q15		GRY-YEL~3A	J10-P6/7	50v DC	ORG-GRY	J8-P8	23-1500 090-5062-ND
#16	RIGHT FLIPPER (50V	RED/YEL)	Q16	:	Fuse-RED-YEL BLU-YEL-3A	J10-P6/7		ORG-VIO	J8-P9	22-1080 090-5032-ND
	Low Current Coils Gro	up 1	Drive	Driver Output PCB	Fuse~RED-YEL	Power Line	Power	Drive Transistor	D.T. Control	Coil GA-Turn
#17	LEFT UP / DOWN POST		Q17	Output PCB	Cotor BRN	J7-P1	Voltage 20VDC	Control Line Color	J7-P2	or Bulb Type 26-1200 090-5044-NB
#18	MICK MOTOR RELAY (I	EFT)	Q18		BRN	J7-P1	20VDC	VIO-RED	J7-P3	190-5004-0
#19	MICK MOTOR RELAY (I	RIGHT)	Q19	<b>A</b>	BRN	J7-P1	20VDC	VIO-ORG	J7-P4	190-5004-01
#20	FLASH: BACKPANEL (F	IGHT)	Q20	I/O Power	ORG	J6-P10	20VDC	VIO-YEL	J7-P6	# 89 BULB 165-5000-89
#21	FLASH: BACKPANEL (L	EFT)	Q21	Driver	ORG	J6-P10	20VDC	VIO-GRN	J7-P7	# 89 BULB 165-5000-89
#22	FLASH: RAMP (LEFT)		Q22	▼	ORG	J6-P10	20VDC	VIO-BLU	J7-P8	# 89 BULB 165-5000-89
#23	FLASH: LIPS		Q23		ORG	J6-P10	20VDC	VIO-BLK	J7-P9	# 161 BULB 165-5032-00
#24	OPTIONAL (e.g. COIN M									
	11010 th (0.g. 00114 ly	IETER)	Q24	ł	RED	J16-P4-8	5VDC	VIO-GRY	.J7-P10	COIN METER
			11		RED	J16-P4-8	5VDC	VIO-GRY	J7-P10	COIN METER
	Low Current Coils Gro	up 2	Drive	Driver Output PCB	RED  Power Line Color	Power Line	Power	VIO-GRY  Drive Transistor Control Line Color	D.T. Control	Coil GA-Turn or Bulb Type
	Low Current Coils Gro FLASH: RONNIE	up 2	Drive	Driver Output PC8	Power Line	Power Line Connection	Power	Drive Transistor	D.T. Control	Coil GA-Turn or Bulb Type # 89 BULB 165-5000-89
#26	Low Current Coils Gro FLASH: RONNIE FLASH: POP BUMPER	up 2	Drive Transistor Q25	Output PCB	Power Line Color ORG	Power Line Connection J6-P10	Power Voltage (	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type # 89 BULB 165-5000-89 # 69 BULB 165-5000-89
#26 #27	Low Current Coils Gro FLASH: RONNIE FLASH: POP BUMPER FLASH: CHARLIE	up 2	Drive Transistor Q25 Q26 Q27	Output PC8	Power Line Color ORG	Power Line Connection J6-P10 J6-P10	Power Voltage ( 20VDC	Drive Transistor Control Line Color BLK-BRN	D.T. Control Line Connect J6-P1	Coil GA-Turn or Bulb Type *89 BULB 165-5000-89 #89 BULB 165-5000-89
#26 #27 #28	Low Current Coils Gro FLASH: RONNIE FLASH: POP BUMPER FLASH: CHARLIE FLASH: KEITH	up 2	Drive Transistor Q25 Q26 Q27	I / O Power	Power Line Color ORG	Power Line Connection J6-P10 J6-P10	Power Voltage ( 20VDC	Drive Transistor Control Line Color BLK-BRN BLK-RED	D.T. Control Line Connect J6-P1 J6-P2	Coil GA-Turn or Bulb Type #89 BULB 165-5000-89 #89 BULB 165-5000-89 #89 BULB 165-5000-89
#26 #27 #28 #29	Low Current Coils Gro FLASH: RONNIE FLASH: POP BUMPER FLASH: CHARLIE FLASH: KEITH FLASH: BOTTOM ARCH	up 2 (X2)	Drive Transistor Q25 Q26 Q27	A I / O	Power Line Color ORG ORG	Power Line Connection J6-P10 J6-P10 J6-P10 J6-P10	Power Voltage ( 20VDC 20VDC	Drive Transistor Control Line Color BLK-BRN BLK-RED BLK-ORG	D.T. Control Line Connect J6-P1 J6-P2 J6-P3	Coil GA-Turn or Bulb Type #89 BULB 165-5000-89 #89 BULB 165-5000-89 #89 BULB 165-5000-89 #89 BULB 165-5000-89
#26 #27 #28 #29 #30	Low Current Coils Gro FLASH: RONNIE FLASH: POP BUMPER FLASH: CHARLIE FLASH: KEITH FLASH: BOTTOM ARCH CENTER UP / DOWN PO	up 2 (X2)	Drive Transistor Q25 Q26 Q27	I / O Power	Power Line Color ORG ORG ORG ORG	Power Line Connection J6-P10 J6-P10 J6-P10 J6-P10 J6-P10	Power Voltage ( 20VDC 20VDC 20VDC	Drive Transistor Control Line Color BLK-BRN BLK-RED BLK-ORG BLK-YEL	DT. Control Line Connect J6-P1 J6-P2 J6-P3 J6-P4 J6-P5	Coil GA-Turn or Bulb Type #89 BULB 165-5000-89 #89 BULB 165-5000-89 #89 BULB 165-5000-89 #89 BULB
#26 #27 #28 #29 #30 #31	Low Current Coils Gro FLASH: RONNIE FLASH: POP BUMPER FLASH: CHARLIE FLASH: KEITH FLASH: BOTTOM ARCH	up 2 (X2) OST	Drive Transistor Q25 Q26 Q27 Q28 Q29	I / O Power	Power Line Color ORG ORG ORG ORG ORG	Power Line Connection J6-P10 J6-P10 J6-P10 J6-P10 J6-P10 J7-P1	Power Voltage ( 20VDC 20VDC 20VDC 20VDC	Drive Transistor Control Line Color BLK-BRN BLK-RED BLK-ORG BLK-YEL BLK-GRN	DT. Control Line Connect J6-P1 J6-P2 J6-P3 J6-P4 J6-P5 J6-P6	Coil GA-Turn or Bulb Type #89 BULB 165-5000-89 23-1100


# Backbox I/O Power Driver Board (Coils Q1-Q32) Detailed Wiring Diagram //O FUS


ALL FUSES RATED 250V SLO-BLO
I/O FUSE CHART INFO IN BACKBOX & PAGE DR. 1

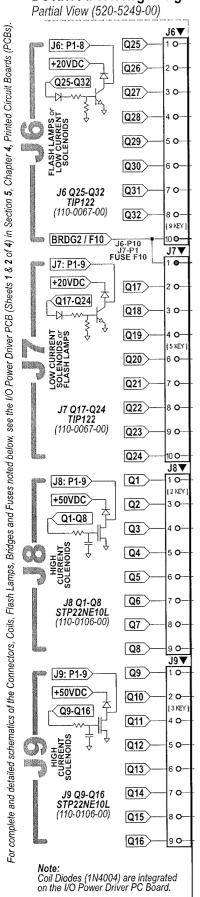


**Backbox** Wiring

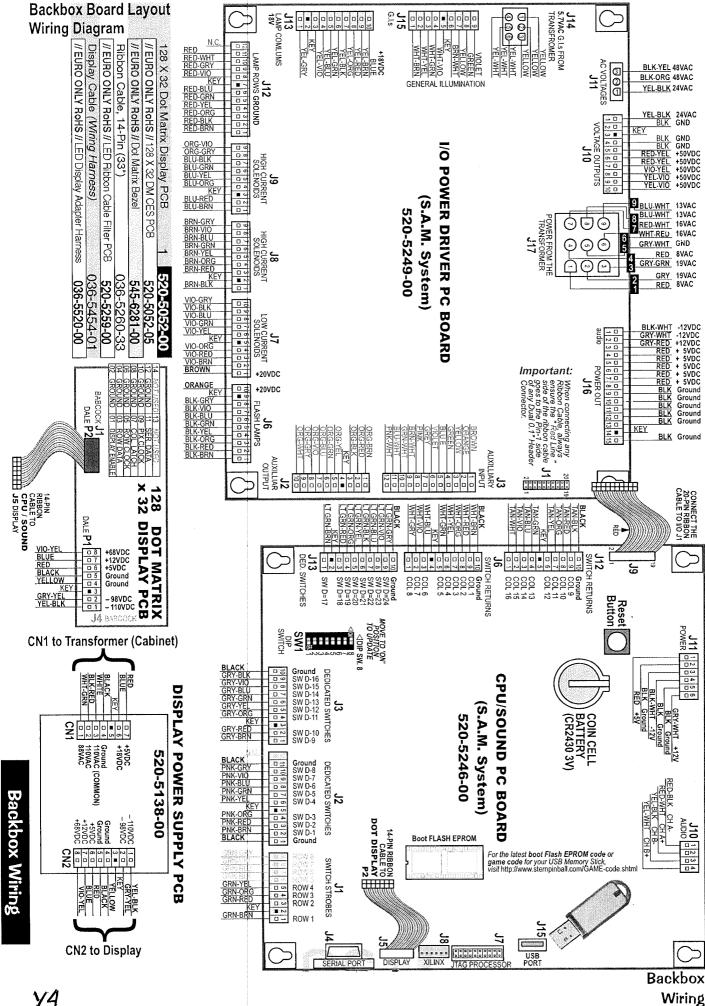


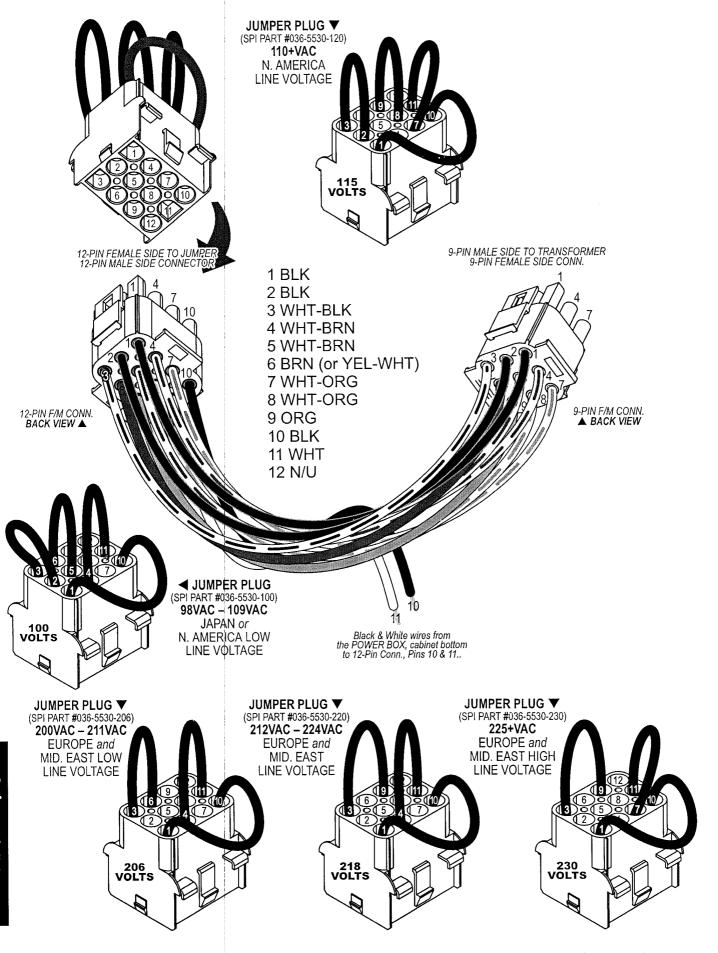

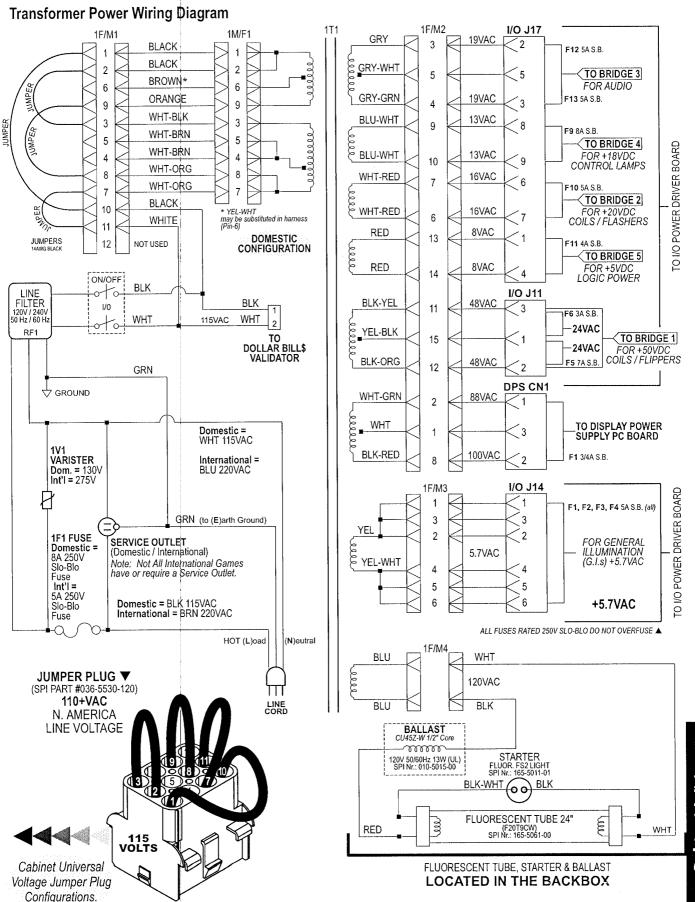


Cabinet and Coin Door Wiring

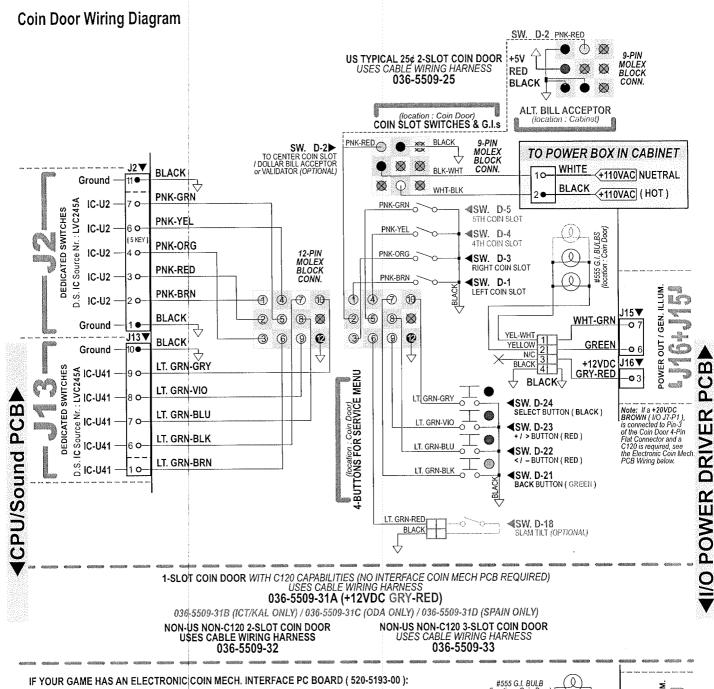


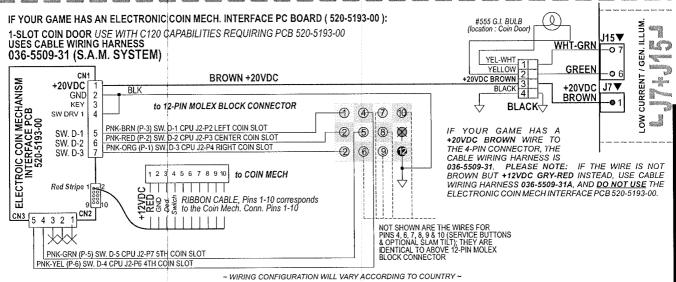


Cabinet and Coin Door Wiring

Wiring

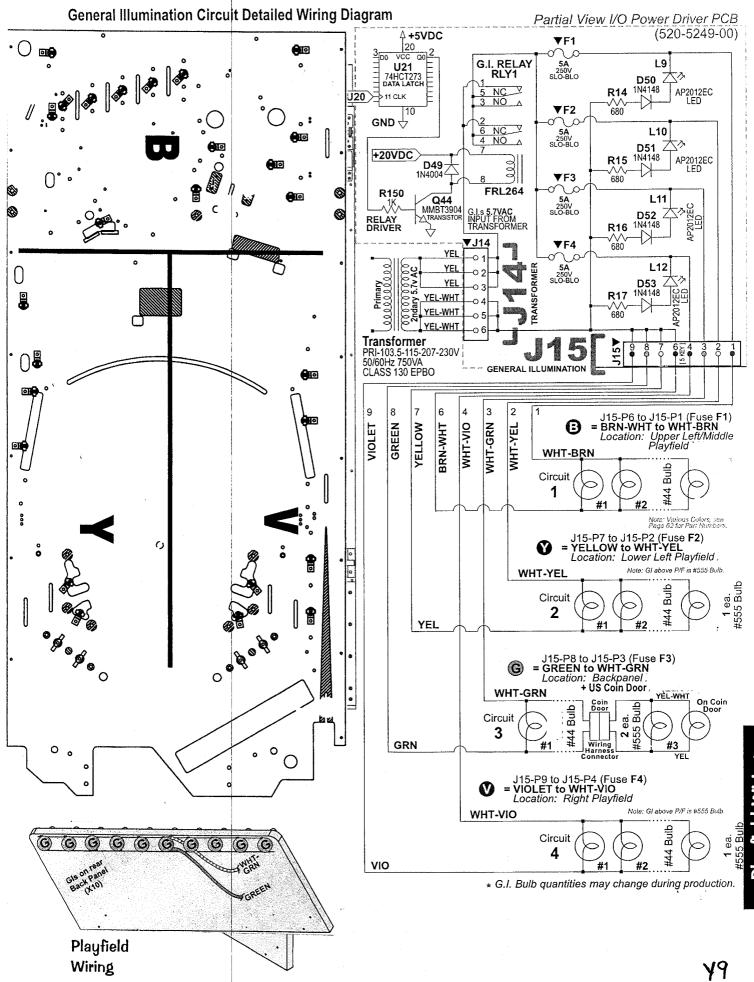

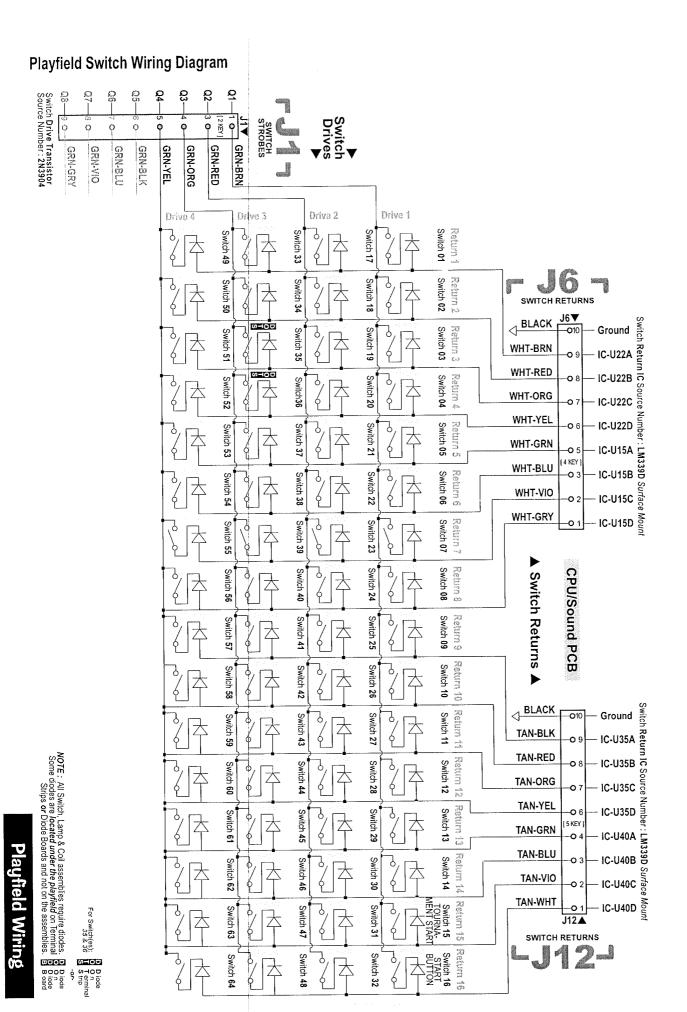


Please NOTe: Switch & Lamp Descriptions may differ slightly than that of the Dol Display due to space restraints Playfield Wiring

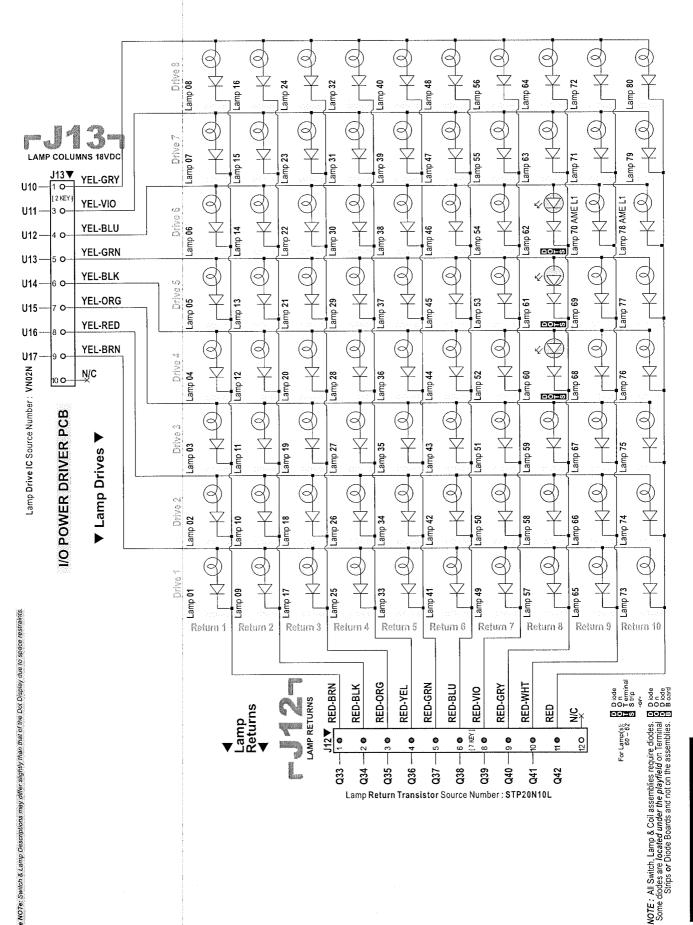

Playfield Wiring

YII

#### **Playfield Terminal Strips**

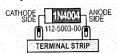


Explanation

All Switches, Lamps & Coils require diodes. Coil diodes are located on the I/O Power Driver PCB (in Backbox). Some diodes from switches or lamps are moved onto Terminal Strips (located under the playfield). This is done where space constraints or excessive vibrations are present. The Switch & Lamp Matrix Grids also note which Switch or Lamp has a diode on a Terminal Strip, noted by DOTS (Diode On Terminal Strip).

**Note:** Some wires 'appear' to be doubled on the lugs. The switches and lamps are in a series, so you may see 1 or 2 wires depending where the switch or lamp is in the string.


# Typical Switch Wiring & Schematic

... with Switch Diode on a Terminal Strip (DOTS)

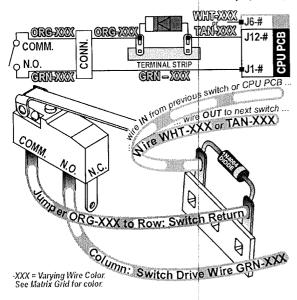


# Typical Lamp Wiring & Schematic ... with Lamp Diode on a Terminal Strip (DOTS)


Usually when a #555 Bulb is used as a Controlled Lamp for a Spot Light.

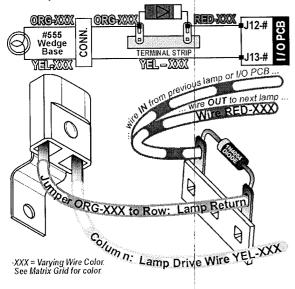


# Typical Lamp Wiring & Schematic


... with Lamp Diode on a Terminal Strip (DOTS)
Usually when an LED Module is used as a Controlled Lamp for a Pop Bumper.

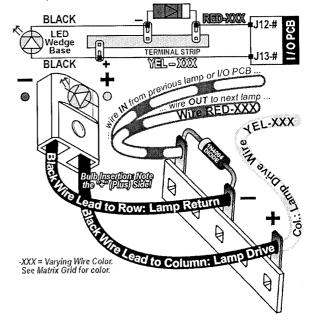


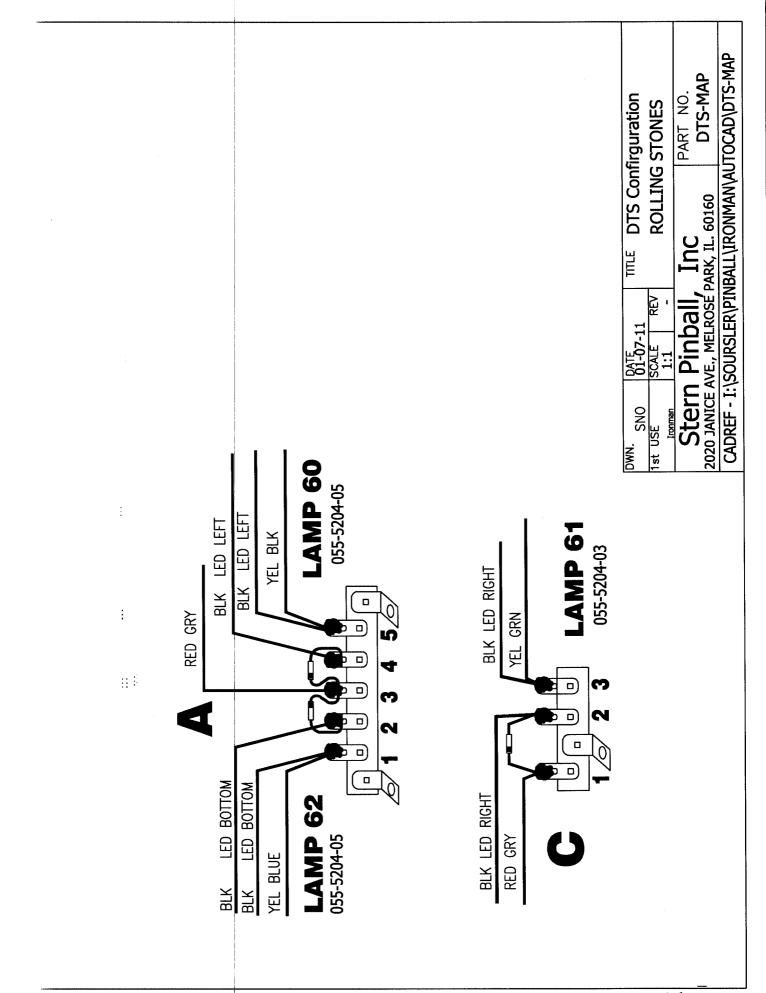


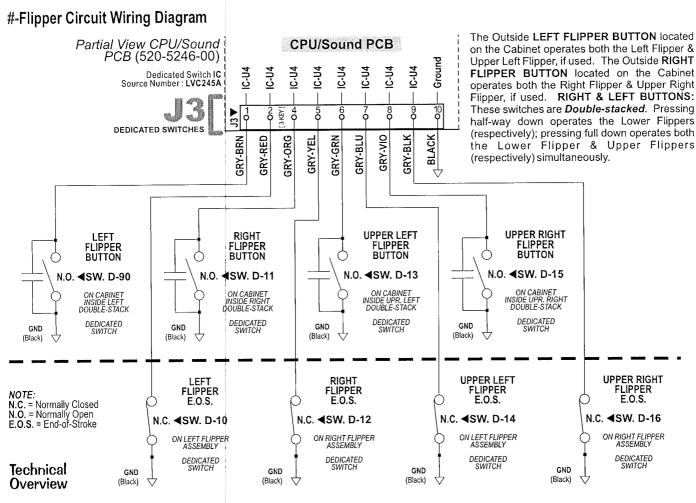



Our *Flipper System* uses one supply voltage (+50VDC) for both *kick* & *hold*. Once the **Game CPU** detects a Flipper Cabinet Switch closure (*during game play*) it applies a 40*msec* pulse to the gate of the Flipper Drive Transistor (STP22NE10L). If it continues to detect a Flipper Cabinet Switch closure (*the player holding the button in*) it will continue to pulse the flipper drive transistor 1*msec* every 12*msecs* for the duration of the hold cycle.

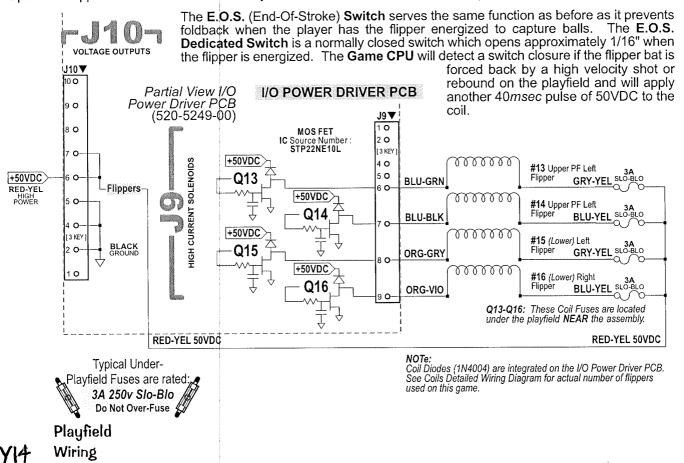

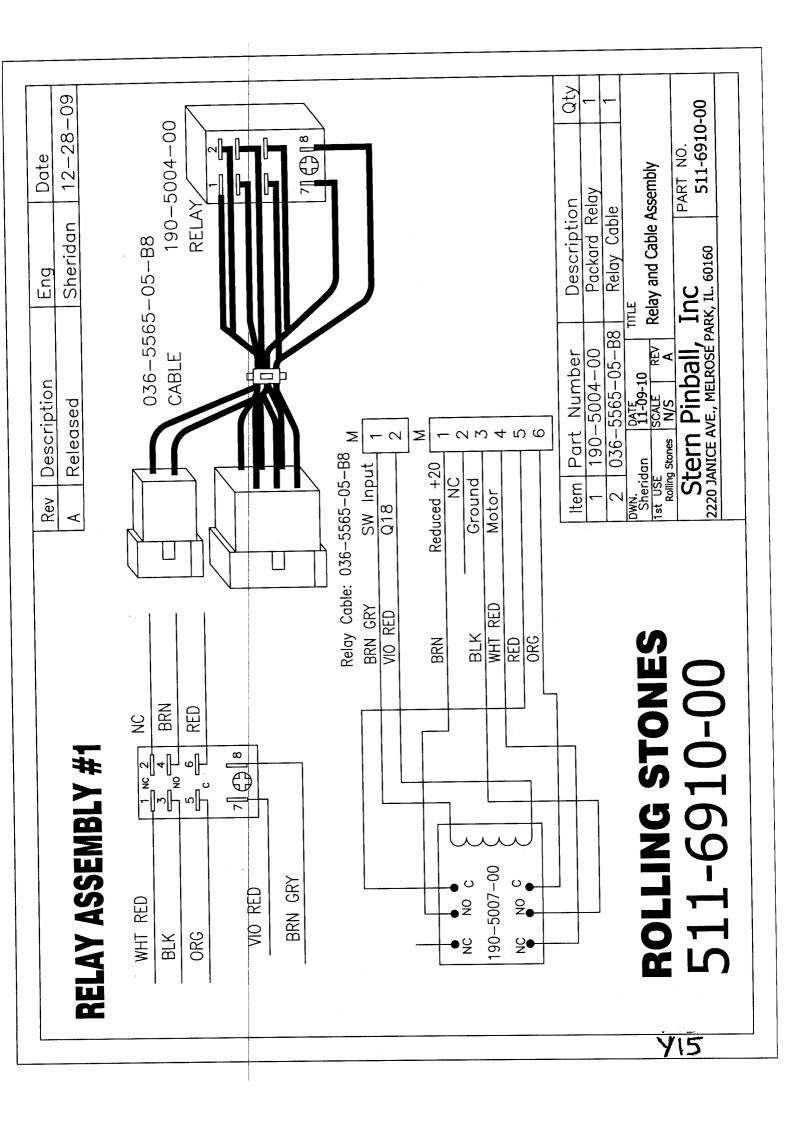


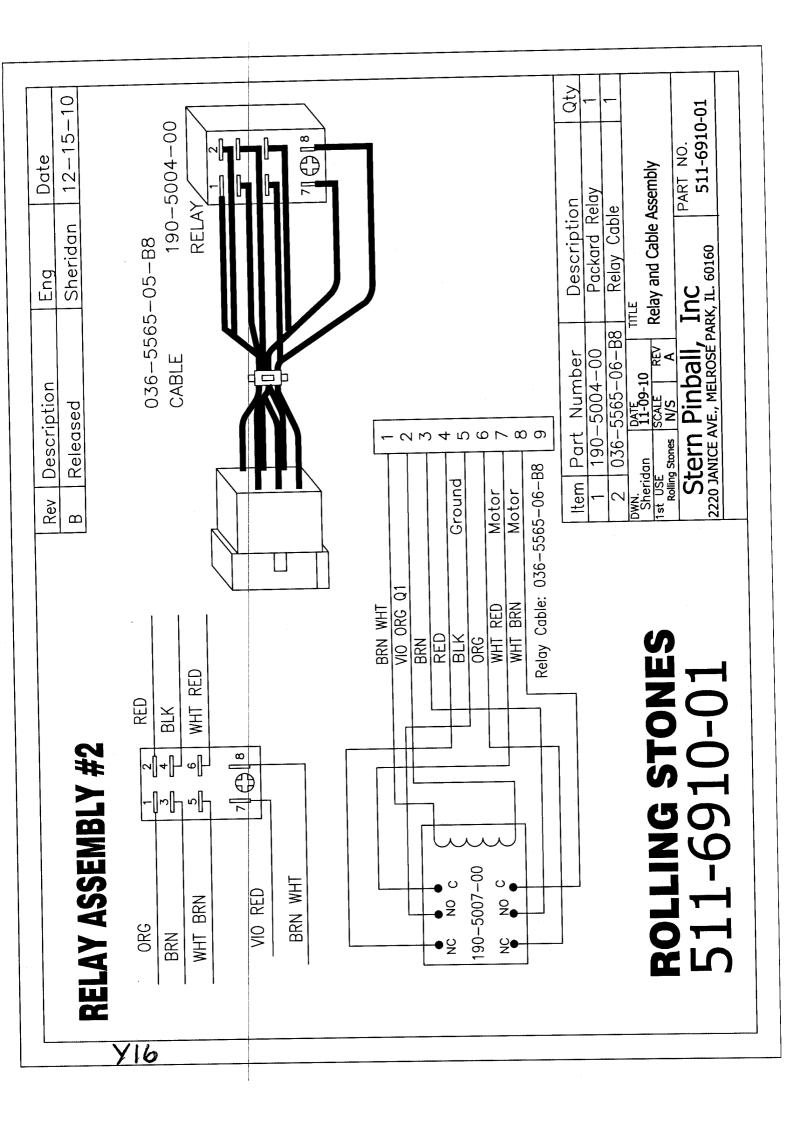

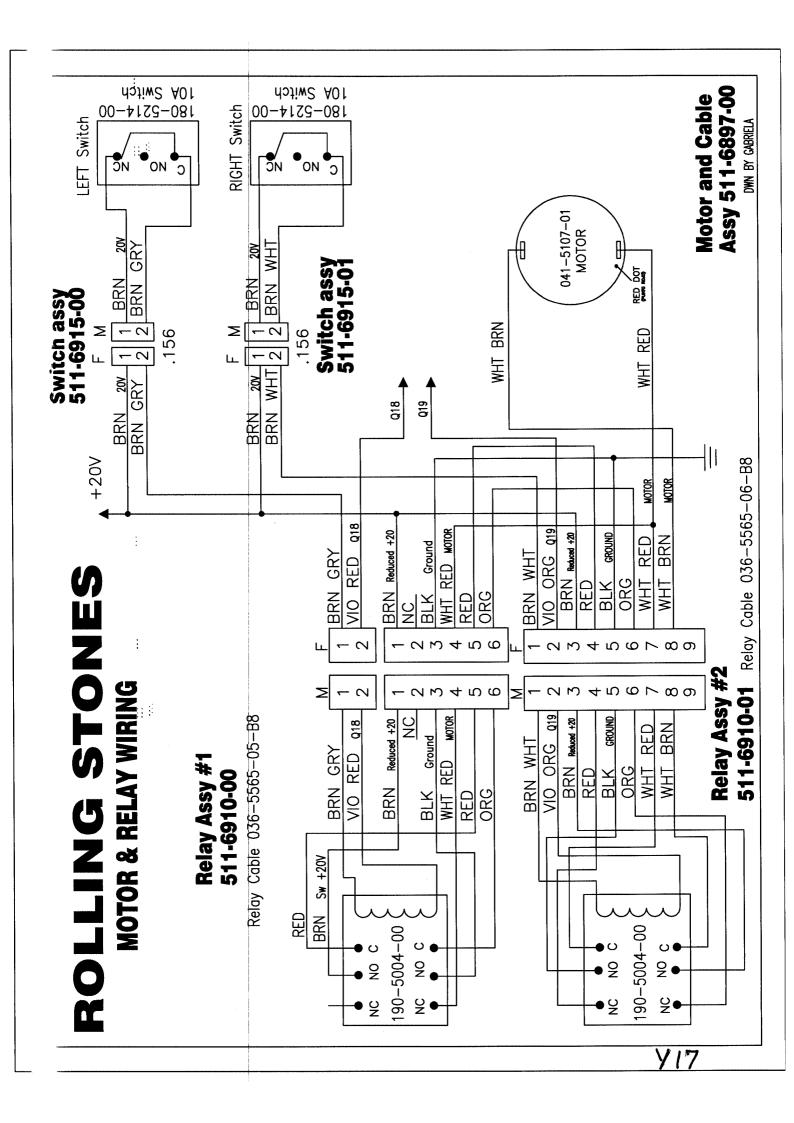

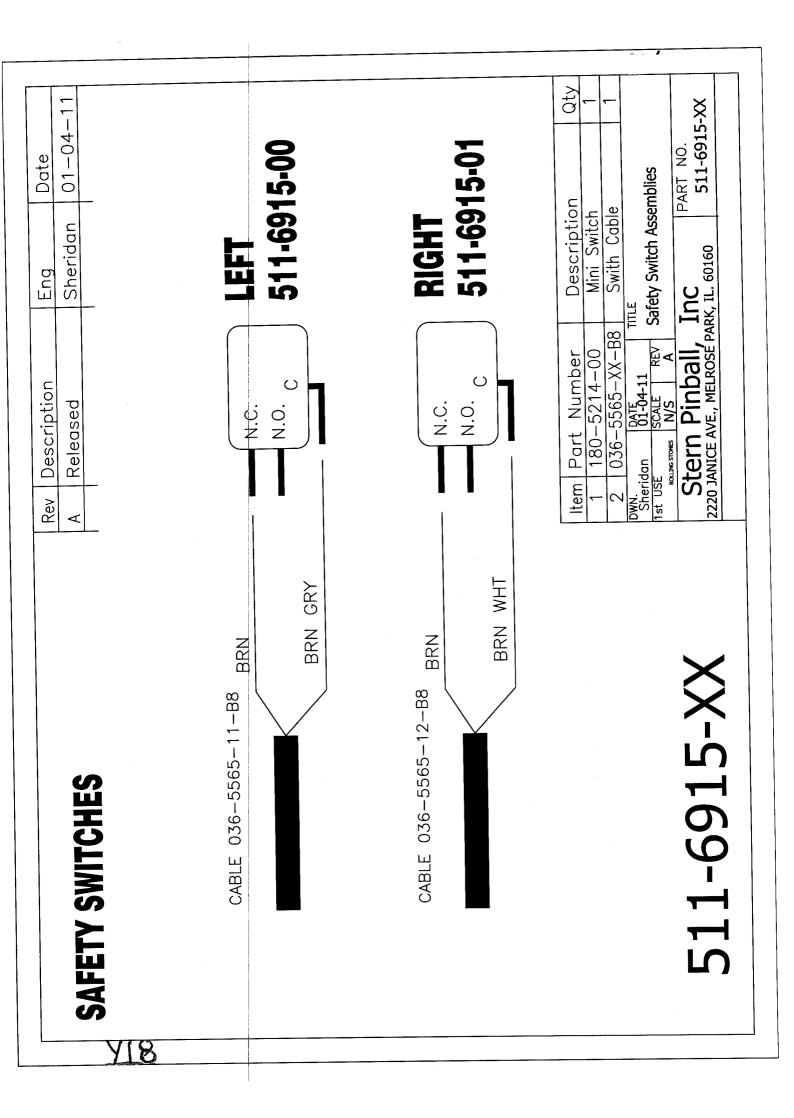


# Rt Magnet +68VDC JBRN GRN Lt Magnet BRN VIO 20 68VDC 40NF10L 40NF10L 1 1 N 4 0 0 4 1N4004 ||| -||1 68VDC 68VDC ž ×× MPSA92 MPSA92 100K 100K **ROLLING STONES PREMIUM** 68VDC 68VDC 100K 100K 520-5316-00 10K 10K 68VDC -||1 **Magnet driver Board** BLK Ground ORG GRN Q5 ORG VIO Q7 VIO YEL +68VDC

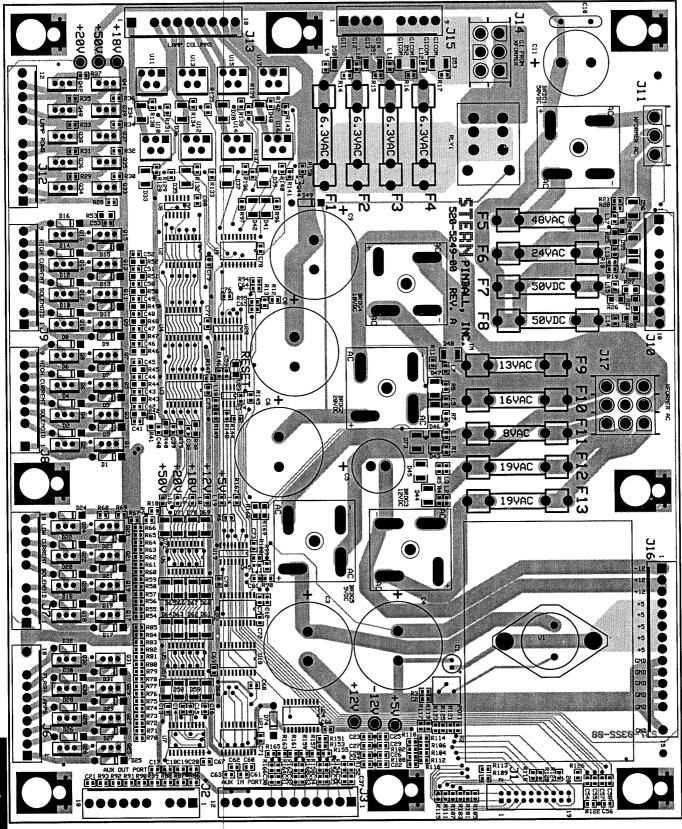

#### I/O POWER DRIVER PCB S.A.M. System (520-5249-00) Parts

				I/O POWER DRIVER PCB S.A	A.M. System (520-5249-00) Parts
ITEM	QTY.	SPI PART NUMBER	(MFG. P.N.)	REF-DESIGNATOR	DESCRIPTION (SM = Surface Mount)
1 2	1 1 22	<b>520-5249-00</b> 121-6001-00 121-6002-00	(101-0001807) (101-0001820)	R9	(includes Items 1-67) Resistor SM 0805 Film 1.5K $\Omega$ 1/10W 5% Resistor SM 0805 Film 100 $\Omega$ 1/10W 5%
3	12	121-6020-00	(101-0001827)	R10, R106, R108, R110, R112, R114, R116, R118 R120, R122, R124, R126, R146 R21, R94, R95, R101, R103, R105, R107, R109,	, Resistor SM 0805 Film 10KΩ 1/10W 5%
4 5	1 20	121-6003-00 121-6022-00	(101-0001845) (101-0001905)	R111, R113, R115, R144 R2 R7, R8, R10, R11, R12, R13, R18, R19, R98, R100, R150, R152, R154, R156, R158, R160, R162, R164, R166, R167	Resistor SM 0805 Film 120 $\Omega$ 1/10W 5% Resistor SM 0805 Film 1K $\Omega$ 1/10W 5%
6 7	2 16	121-6004-00 121-6005-00	(101-0001943) (101-0001849)	R162, R164, R166, R167 R6, R145 R55, R57, R59, R61, R63, R65, R67, R69, R71, R73, R75, R77, R79, R81, R83, R85	Resistor SM 0805 Film 220 $\Omega$ 1/10W 5% Resistor SM 0805 Film 22K $\Omega$ 1/10W 5%
8 9 10	2 3 8	121-6006-00 121-6007-00 121-6013-00	(101-0002012) (101-0002031) (101-0002035)	R3, R149 R1, R4, R5 R151, R153, R155, R157, R159, R161, R163,	Resistor SM 0805 Film 330 $\Omega$ 1/10W 5% Resistor SM 0805 Film 390 $\Omega$ 1/10W 5% Resistor SM 0805 Film 39K $\Omega$ 1/10W 5%
11	9	121-6008-00	(101-0002046)	R165 R96, R97, R99, R117, R119, R121, R123, R125,	Resistor SM 0805 Film 4.7KΩ 1/10W 5%
12	8	121-6014-00	(101-0002065)	R148 R129, R131, R133, R135, R137, R139, R141,	Resistor SM 0805 Film $47\Omega$ 1/10W 5%
13 14	1 8	121-6015-00 121-6009-00	(101-0002071) (101-0002108)	R143 R20 R128, R130, R132, R134, R136, R138, R140,	Resistor SM 0805 Film 47K $\Omega$ 1/10W 5% Resistor SM 0805 Film 6.8K $\Omega$ 1/10W 5%
15	16	121-6010-00	(101-0002116)	R142 R54, R56, R58, R60, R62, R64, R66, R68, R70,	Resistor SM 0805 Film 620 $\Omega$ 1/10W 5%
16 17	4 10	121-6016-00 121-6011-00	(101-0002126) (101-0002296)	R54, R56, R58, R60, R62, R64, R66, R68, R70, R72, R74, R76, R78, R80, R82, R84 R14, R15, R16, R17 R28, R29, R30, R31, R32, R33, R34, R35, R36,	Resistor SM 0805 Film 680 $\Omega$ 1/10W 5% Resistor SM 1206 Film 22K $\Omega$ 1/10W 5%
18 19	8 16	121-6012-00 121-6013-01	(101-0002473) (101-0002378)	R37 R22, R23, R24, R25, R26, R27, R168, R169 R38, R39, R40, R41, R42, R43, R44, R45, R46,	Resistor SM 1206 Film 8.2K $\Omega$ 1/10W 5% Resistor SM 1206 Film 39K $\Omega$ 1/10W 5%
20	16	125-6001-00	(121-0000056)	C2, C66, C67, C68, C69, C70, C71, C72, C73,	Capacitor SM 0805 Cer1UF 50V 10% X7R
21	25	125-6002-00	(121-0000096)	C13, C14, C15, C16, C17, C18, C19, C20, C21, C30, C31, C32, C33, C34, C35, C36, C37, C59,	Capacitor SM 0805 Cer. 470PF 50V 5% NPO
22	18	125-6003-00	(121-0004236)	C60, C61, C62, C63, C64, C65, C81 C7, C12, C38, C39, C40, C41, C42, C43, C44, C45, C46, C47, C48, C49, C50, C51, C52, C53	Capacitor SM 0805 Cer01UF 50V 10% X7R
23	13	125-6004-00	(121-0005318)	C22, C23, C24, C25, C26, C27, C28, C29, C54, C55, C56, C57, C58	Capacitor SM 0805 Cer. 22PF 100V 5% NPO
24 25 26 27 28 29	1 1 1 1 5 34	125-5032-00 125-5034-00 125-5029-01 125-6022-00 125-5036-01 112-6001-01	(131-0003773) (131-0003864) (133-0003741) (134-0003846) (134-0004000) (183-0004374)	R25, R25, R44, R27, R29, R27, R38, R39, R40, R41, R42, R43, R44, R45, R46, R47, R48, R49, R50, R51, R52, R53 C2, C66, C67, C68, C69, C70, C71, C72, C73, C74, C75, C76, C77, C78, C79, C80 C13, C14, C15, C16, C17, C18, C19, C20, C21, C30, C31, C32, C33, C34, C35, C36, C37, C59, C60, C61, C62, C63, C64, C65, C81 C7, C12, C38, C39, C40, C41, C42, C43, C44, C45, C46, C47, C48, C49, C50, C51, C52, C53, C22, C23, C24, C25, C26, C27, C28, C29, C54, C55, C56, C57, C58 C1 C5 C10 C11 C3, C4, C6, C8, C9 D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, D16, D17, D18, D19, D20, D21, D22, D23, D24, D25, D26, D27, D28, D29, D30, D31, D32, D49, D74 BRDG1, BRDG2, BRDG3, BRDG4, BRDG5, G33, Q34, Q35, Q36, Q37, Q38, Q39, Q40, Q41, Q42, C31, C32, C4, C6, C7, C8, C9, C9, C9, C9, C9, C9, C9, C10, C11	Capacitor Tht. Radial Alum. 100UF 25V 20% Capacitor Tht. Radial Alum. 4700UF 35V 20% Capacitor Tht. Disc Cer. 1UF 500V 20% Capacitor Tht. Radial Alum. 330UF 160V 20% Cap. Tht. Rad. Al. 15000UF 35V 20% Snap-In Diode Tht. DO-41 1N4004 400V 1A
30 31	5 10	112-5000-00 110-0088-01	(187-0004700) (203-0003591)	D12, D13, D14, D15, D16, D17, D18, D19, D20, D21, D22, D23, D24, D25, D26, D27, D28, D29, D30, D31, D32, D49, D74 BRDG1, BRDG2, BRDG3, BRDG4, BRDG5, D33, O34, O35, O36, O37, Q38, Q39, Q40,	Bridge Tht. Fullwave 100V 35A MB-35 Fet Tht. TO-220 STP20NE06L NFet 60V 20A
31 32	16	110-0106-00	(203-0003592)	Q41, Q42 Q1, Q2, Q3, Q4, Q5, Q6, Q7, Q8, Q9, Q10, Q11,	Fet Tht. TO-220 20N10L NFet 100V 20A
33 34 35	8	110-0089-00 110-0069-01	(203-0003597) (211-0003589)	Q12, Q13, Q14, Q15, Q16 U10, U11, U12, U13, U14, U15, U16, U17	Fet Tht. PENTAWAT VN02N NFet HighSide 26V 6A Trans. SM SOT-23 MMST3904 NPN 40V 0.2A Transistor Tht. TO-220 TIP122 NPN 100V 5A
36 37 38 39 40 41 42 43 44 45 46 47 48 49 51 51 52 53 54 55 57 58 59	16 31821151211113227111153 1 111	110-0067-00  100-6003-00 100-6000-00 100-5056-00 100-6001-00 100-6002-00 100-0356-00 045- 045- 045- 045- 045- 045- 045- 0	(213-0003565) (221-0000972) (221-0001283) (221-0001283) (221-00013728) (221-0003728) (225-0003582) (315-0003427) (315-0003432) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (315-0003504) (407-0003112) (407-0003112) (407-0003122) (415-0004778) (425-0007755) (448-0004778) (461-0003520) (461-0003524) (461-0003534) (579103B0006	J2, J6, J7, J10, J13 J1 J3, J12 J16 J11 J14 J17 J19, J9, J15 F6, F8 F7, F11 F1, F2, F3, F4, F10, F12, F13 F5 F9 POT1 L18 L4, L6, L8, L16, L19 L1, L2, L3, L5, L7, L9, L10, L11, L12, L15, L17 RLY1  for BRDG 4, BRDG 5	I.C. SM SOIC 74HC245 Oct. Bus. Xcvr. I.C. SM SOIC 75HC245 Oct. Bus. Xcvr. I.C. SM SOIC 74HC773 Oct. D F-F I.C. SM SOIC 74HC773 Oct. D F-F I.C. SM SOIC 74LS74AD SOIC-14 I.C. SM SOIC 74LS74AD SOIC-14 I.C. Tht. TO-3 LM338 5A Adjust. Voltage Reg. Con. Tht. Hdr. 10 Pin, 1 Row. 156" Con. Tht. Hdr. 20 Pin, 2 Row. 1" Con. Tht. Hdr. 12 Pin, 1 Row. 156" Con. Tht. Hdr. 12 Pin, 1 Row. 25" Con. Tht. Pwr. 6 Pin, 2 Row. 25" Con. Tht. Pwr. 9 Pin, 3 Row. 25" Con. Tht. Pwr. 9 Pin, 1 Row. 25" Con. Tht. Hdr. 9 Pin, 1 Row. 156" Fuse 3 Amp 250V Slo-Blo (Glass, Tht. 3AG) Fuse 4 Amp 250V Slo-Blo (Glass, Tht. 3AG) Fuse 5 Amp 250V Slo-Blo (Glass, Tht. 3AG) Fuse 8 Amp 250V Slo-Blo (Glass, Tht. 3AG) Fuse 9 Amp 250V Slo-Blo (Glass, Tht. 3AG) Fuse 9 Amp 250V Slo-Blo (Glass, Tht. 3AG) Fuse 1 Amp 250V Slo-Blo (Glass, Tht. 3AG) Fuse 1 Amp 250V Slo-Blo (Glass, Tht. 3AG) Fuse 1 Amp 250V Slo-
60 61 62 63 64 65 66	4 26 4 2 5	127-5001-00 127-5001-02 127-5001-04 240-5008-00 205-0004-00 237-5504-00 254-5007-05	(503-0004469) (503-0004667) (504-0004610) (507-0004544) (507-0004547)	(Mig. 169" I.D. X 9/32" O.D. X 5/16")	#6-32 Keps Nut Fuseclip with End Stops (+ Ears) #6-32 X 3/4" PPH MS (Zinc) Screw 1/4" Slf. Rtn. Spacer White 5/16" Slf. Rtn. Spacer White

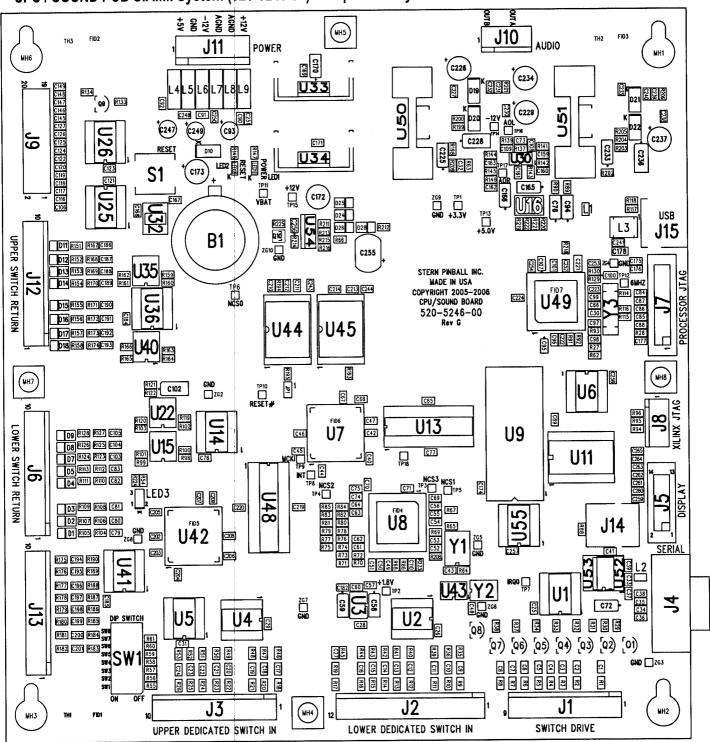

THE ! SOUND	PCR S A M	System	(520-5246-00)	Component Parts
PHASURINI	PUD 3 A W.	OVSIEIII	1324-3244-44	Componentials

ITEM	QTY.	SPI PART NUMBER	(MFG. P.N.)	REF-DESIGNATOR DESCRI	PTION (SM = Surface Mount)
<u>-</u>	1 3	<b>520-5246-00</b> 121-6017-00	(101-0001790)		SM 0805 0.0Ω 1/10W 5%
ż	ž	121-6108-00	(101-0001792)	R201, R206 Resistor	SM 0805 1.0Ω 1/10W 5%
3	24	121-6001-00	(101-0001807)	R20, R21, R22, R23, R24, R25, R26, R175, R176, R177, R178, R179, R180, R181, R182	SM 0805 1.5KΩ 1/10W 5%
4	3	121-6002-00	(101-0001820)	R147, R148, R211 Resistor	SM 0805 Film 100Ω 1/10W 5%
5	24	121-6019-00	(101-0001823)	R64, R66, R67, R68, R70, R71, R72, R73, R74, Resistor R75, R76, R77, R78, R79, R80, R81, R82, R83, R84, R85, R89, R90, R92, R208	SM 0805 100KΩ 1/10W 5%
6	33	121-6020-00	(101-0001827)	R28, R65, R91, R98, R99, R100, R101, R102, Resistor R103, R119, R120, R134, R137, R139, R141, R142, R144, R144, R145, R164, R159, R160, R161, R162, R163, R164, R165, R166, R193, R194, R195, R223, R225	SM 0805 Film 10KΩ 1/10W 5%
7	2	121-6021-00	(101+0001880)	R117, R118 Resistor	SM 0805 15KΩ 1/10W 5%

Parts List Continued Next Page.

Printed Circuit Boards (PCBs)

Sec. 5: PCBs

#### CPU / SOUND PCB S.A.M. System (520-5246-00) Parts Continued **DESCRIPTION (SM = Surface Mount)** OTY. SPI PART NUMBER (MFG. P.N.) ITEM R1, R2, R3, R4, R5, R6, R7, R8, R29, R30, R31, R31, R31, R34, R37, R38, R55, R56, R57, R58, R59, R60, R61, R94, R95, R96, R105, R107, R109, R111, R113, R114, R115, R116, R124, R126, R128, R133, R151, R152, R153, R154, R155, R156, R157, R158, R218, LED2 R104, R106, R108, R110, R112, R123, R125, R127, R167, R168, R169, R170, R171, R172, R173, R174, R213, R214, R215 R198, R200, R203, R205 R45, R86, R88, R121, R122 R69, R129, R130 R69, R129, R130 R69, R129, R130 R61, R104, R104, R116, 8 47 121-6022-00 (101-0001905) 9 19 121-6004-00 (101-0001943) (101-0001849) (101-0001889) (101-0002009) (101-0002012) 121-6005-00 121-6023-00 121-6024-00 121-6006-00 11 12 13 R54, R93 R35, R36, R39, R40, R41, R42, R43, R44, R46, R47, R48, R49, R50, R51, R52, R53, R183, R184, R185, R186, R187, R188, R189, R190 R17, R19 R219, R220, R221, R222 R199, R204, R216 R209 24 121-6013-00 (101-0002035) Resistor SM 0805 Film 39KΩ 1/10W 5% 121-6008-00 121-6014-00 121-6025-00 121-6015-00 (101-0002046) (101-0002065) (101-0002067) (101-0002071) 16 17 18 99 125-6001-00 121-0000056 C243, C244, C248, C250, C251, C252, C253, C254, C257, C258 C28, C57, C60 C29, C260, C261, C262, C263, C264, C265 Rev. G as Mods or back of PCB, Rev. H in place (FCC Caps Plasma Ribbon Cable) C102, C228, C236 C1, C2, C3, C4, C5, C6, C7, C8, C110, C161, C167, C30, C11, C12, C13, C14, C15, C16, C17, C118, C119, C120, C122, C23, C24, C49, C50, C53, C55, C56, C61, C63, C70, C74, C106, C117, C195, C196, C197, C256 C172, C195, C196, C197, C256 C178, C221 C25, C233 C264, C297 C32, C73, C160, C162 C172, C173, C226, C229, C234, C237 C23, C247, C249 C255 L4, L5, L6, L7, L8, L9 L1, L2 L3 C28, C57, C60 Capacitor SM 0805 Cer. 1UF 10V 10% X7R Capacitor SM Case D Tant 22UF 25V 20% Capacitor SM 0805 Cer. 201UF 50V 10% X7R Capacitor SM 0805 Cer. 21F 50V 5% NPO Capacitor SM 0805 Cer. 47PF 50V 5% NPO Capacitor SM Case A Tant 2.2UF 16V 10% Capacitor SM 1206 Cer. 4.7PF 16V 20% Y5V Capacitor SM 1206 Cer. 4.7PF 16V 20% Y5V Capacitor SM 0805 Cer. 33UF 50V +80/-20% Y5V Capacitor SM 0805 Cer. 33UF 50V +80/-20% Y5V Capacitor SM 0805 Cer. 303UF 50V +80/-20% Y5V Capacitor SM 0805 Cer. 47PF 50V 5% NPO Capacitor 125-6013-00 125-6014-00 125-6002-00 (121-0000077) (121-0000086) (121-0000096) 125-6015-00 125-6003-00 125-6016-00 121-0000269 (121-0004236) (121-0004245) (121-0005317) (121-0005318) (121-0006113) (121-0007394) 125-6017-00 125-6004-00 125-6005-00 125-6006-00 4 6 2 10 26 27 28 29 30 31 32 33 34 35 36 37 38 39 125-6018-00 (121-0010097) 125-6016-00 125-6009-00 125-6019-00 125-6010-00 125-6011-00 (121-0010097 (121-0010493) (134-0005415) (134-0007336) (139-0006487) (161-0004959) 63162 125-6012-00 125-6021-00 112-6000-00 (161-0007286) (161-0009686) (181-0004347) Ind.-SM 805 Bead 600Ω 100Mhz 25% 500mA Ind.-SM EP Inductor15uH 1100mA 20% Diode SM MiniMELFDL/LL4148 100V 500mW D1, D2, D3, D4, D5, D7, D8, D9, D11, D12, D13, D14, D15, D16, D17, D18, D24, D25, D26, D28 D10, D19, D20, D21, D22 Q10 1 20 (181-0004478) (201-00068087) (213-0003546) (213-00035687) (221-00037716) (221-00037716) (221-0006578) (221-0006578) (221-0006940) (221-0006940) (221-0007056) (221-0007056) (221-0007056) (221-001738) (221-0010738) (221-0010738) (221-0010738) (221-0010738) (221-0010738) (221-0010738) (221-0010738) (221-0010738) (221-0010978) (221-0010978) (221-0010978) (221-0010978) (221-0010978) (221-0010978) (221-0010978) (221-0010978) (221-0010978) (221-0010978) (221-0010978) 112-6001-00 110-60069-00 110-0069-00 124-6000-00 100-5048-00 100-5048-00 100-6005-00 100-6008-00 100-6009-00 100-6007-00 100-6017-00 100-6017-00 100-6013-00 100-6014-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 100-6011-00 124-6002-00 100-5016-20 124-6003-00 077-5217-00 (301-0004285 (303-0005944 (315-0003511) (315-0004097 (315-0003511) (315-0004097) (315-0004121) (315-0004124) (315-0006776) (315-0006976) (315-0009252) (315-0009520) (315-0009626) (401-0010737 (403-0005489 (421-0010979 (421-0010980 (425-0005320 (425-0010803 515-000-0644-01 165-6003-00 165-6004-00 182-5002-00 85 1 182-5001-00 (450-0004752) 127-5001-00 127-5001-01 237-5909-01 240-5318-00 (461-0003520) (461-0003528) (504-0004604) (503-0004457) 86 87 88 89 90 22444 254-5007-05


## Assemblies & Ramps

#### Optional Kits available through your Distributor:

Flipper Rebuild Kit (Left)
Flipper Base Plate Kit (Left)
Kit includes: Flipper Base Plate (Left) pre-threaded with securing hardware; see the Flipper Drawing for view.
Flipper Rebuild Kit (Right)500-6307-00
Flipper Base Plate Kit (Right)515-6617-00
Kit includes: Flipper Base Plate (Left) pre-threaded with securing hardware; see the Flipper Drawing for view.
Pinball Location Maintenance <u>Standard</u> Kit (for Rolling Stones Pinball)502-600 <u>2</u> -B8
<b>Standard Kit includes</b> : 8 oz. Novus Wax #2 Fine (Red) ( <b>675-0003-01</b> ), Cloth, Rubber Rings (used above playfield), Bulbs (Bulb quantities vary and is limited to 25 per type), Fuses (1/per type) and 4 Pinballs. <b>Note:</b> Quanties, sizes and contents subject to change without notice.
Pinball Location Maintenance <u>Deluxe</u> Kit (for Rolling Stones Pinball)502-600 <u>3</u> -B8
Deluxe Kit includes: Pinball Location Maintenance <u>Standard</u> Kit as described above plus a quantity of Flipper Rebuild Kits. Note: Quantity varies which equals the same quantity of flippers used in this game.  ▲ THIS GAME KIT INCLUDES ( 2 ) FLIPPER REBUILD KITS ▲
Plastics*Kit (for Rolling Stones Pinball)80 <u>3</u> -5000-B8
Plastics Kit includes: Plastic Sets (830-6130-XX)
Decals*Kit (for Rolling Stones Pinball)80 <u>2</u> -5000-B8
Decals Kit includes: Decal Set (820-6580-XX)
Mylar*Kit (for Rolling Stones Pinball)80 <u>2</u> -5001-B8 • Mylar Kit includes: Pop Bumper (820-6584-00)


<sup>\*</sup>Attention: No individual Plastic or Decal can be ordered separately, unless noted otherwise. Plastics & Decals are subject to change without notice during and / or after production. Key Fobs subject to availability and may or may not be included in the plastic set. All designs, shapes & pieces used subject to change without notice. Kit contents subject to change. Service Bulletin(s) will announce any critical changes, if warranted. The last 2-digits shown on plastics or decals



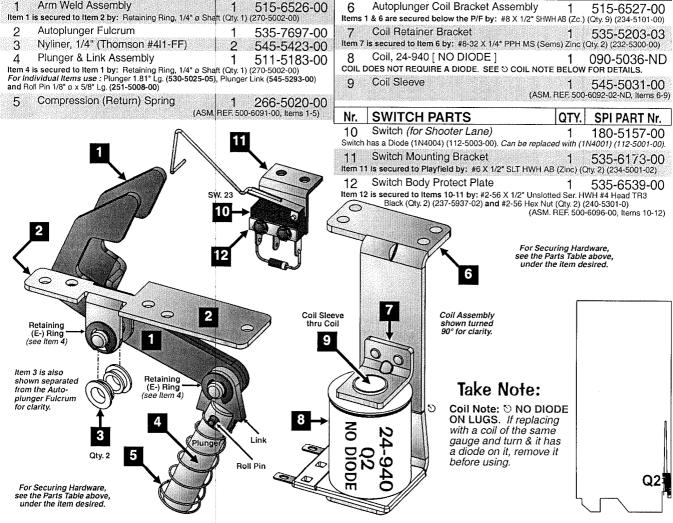


#### 4-Ball Trough Assembly, 500-6318-14-ND (Items 1-13) and Associated Parts: See Parts Table Below.

Ordering Note: Identical to 500-6318-24 with exceptions, see note below Item 13 (Parts Table).

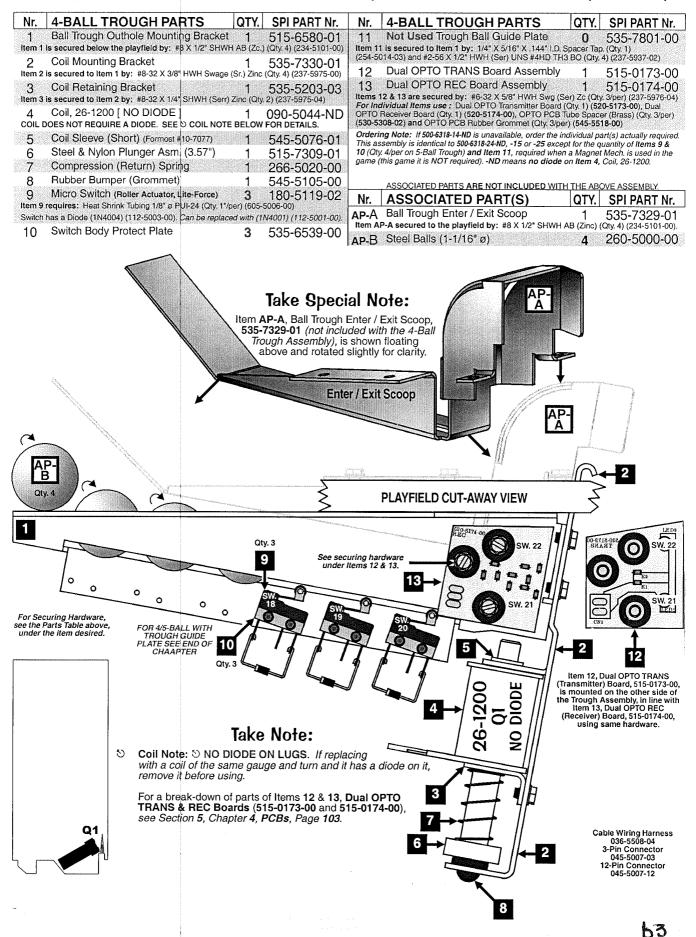


#### 5-Ball ‡ Trough Assembly, 500-6318-25-ND (Items 1-13) and Associated Parts: See Parts Table Below.


Ordering Note: Identical to 500-6318-15 with exceptions, see note below Item 13 (Parts Table).

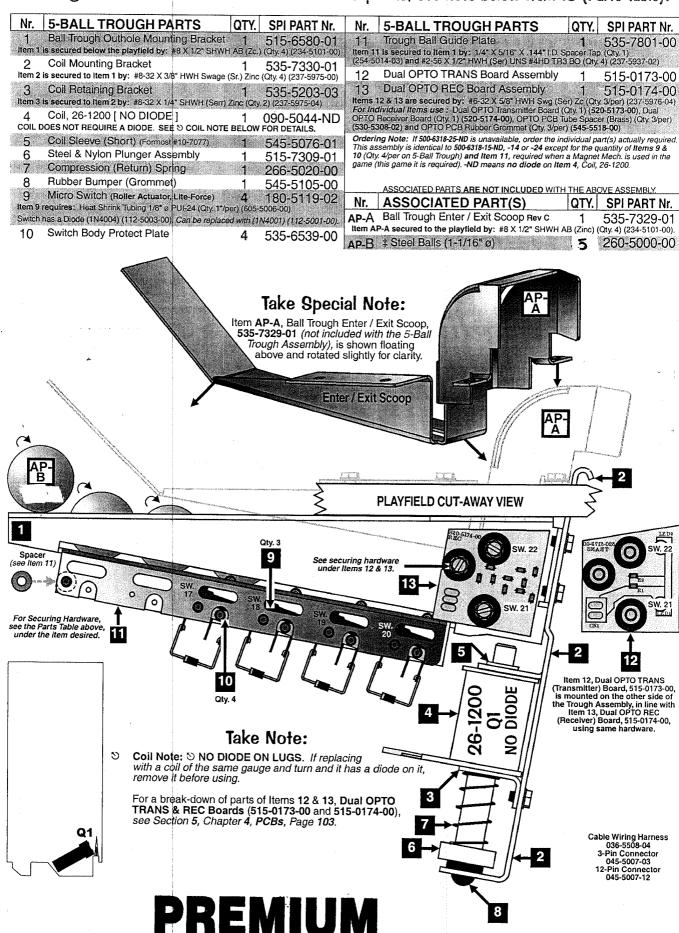


#### Flipper (Left) Assembly, 500-6543-15-ND (Items 1-15) and Associated Parts: White Flipper Bat & Shaft Asm., 515-5133-08-06 (Items AP-A / AP-B)

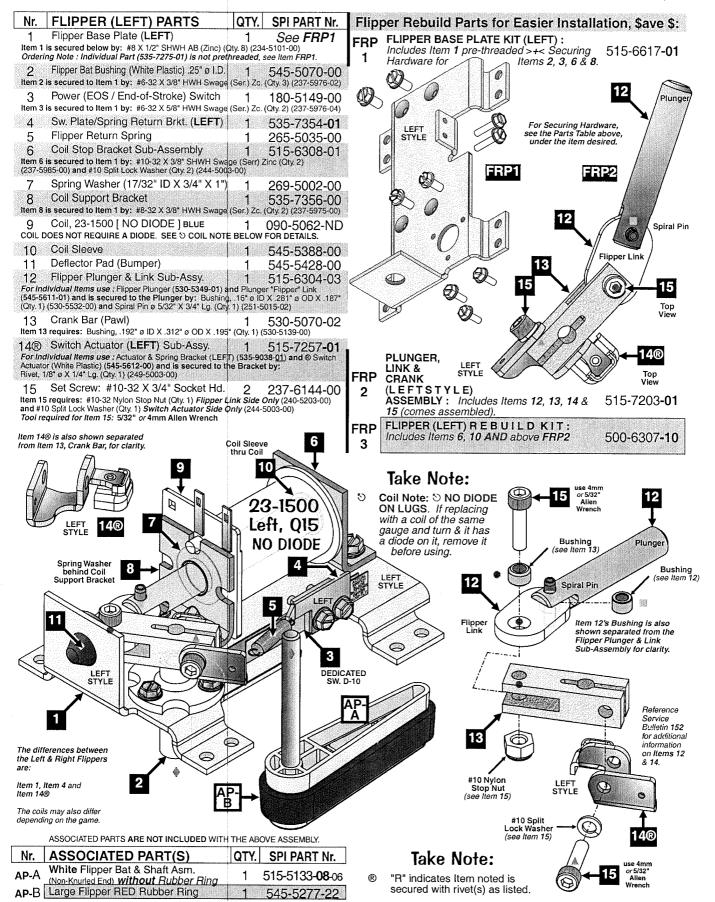


#### Flipper (Right) Assembly, 500-6543-05-ND (Items 1-15) and Associated Parts: Yellow Flipper Bat & Shaft Asm., 515-5133-06-06 (Items AP-A / AP-B)

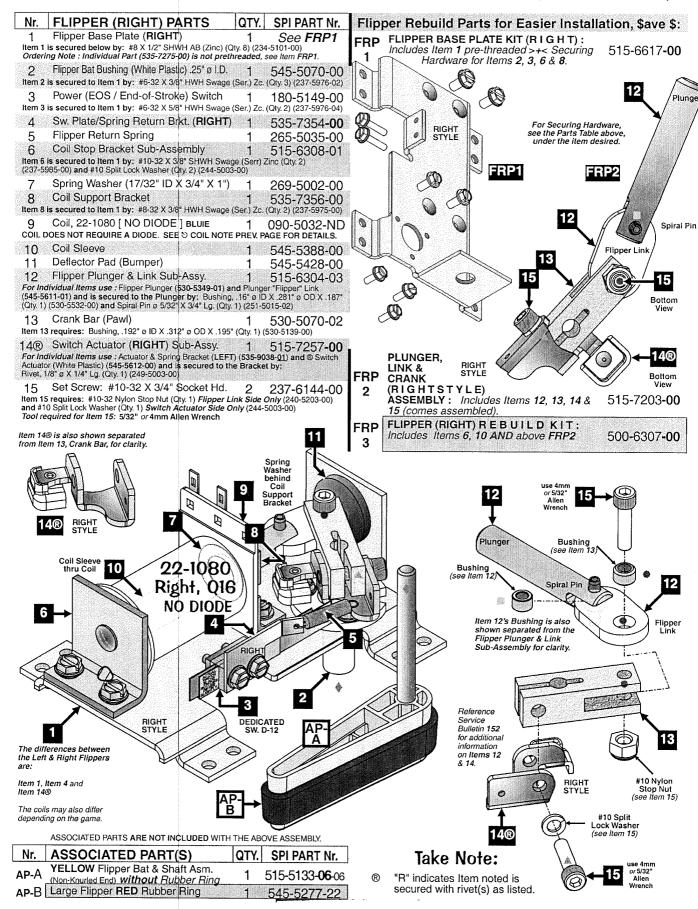

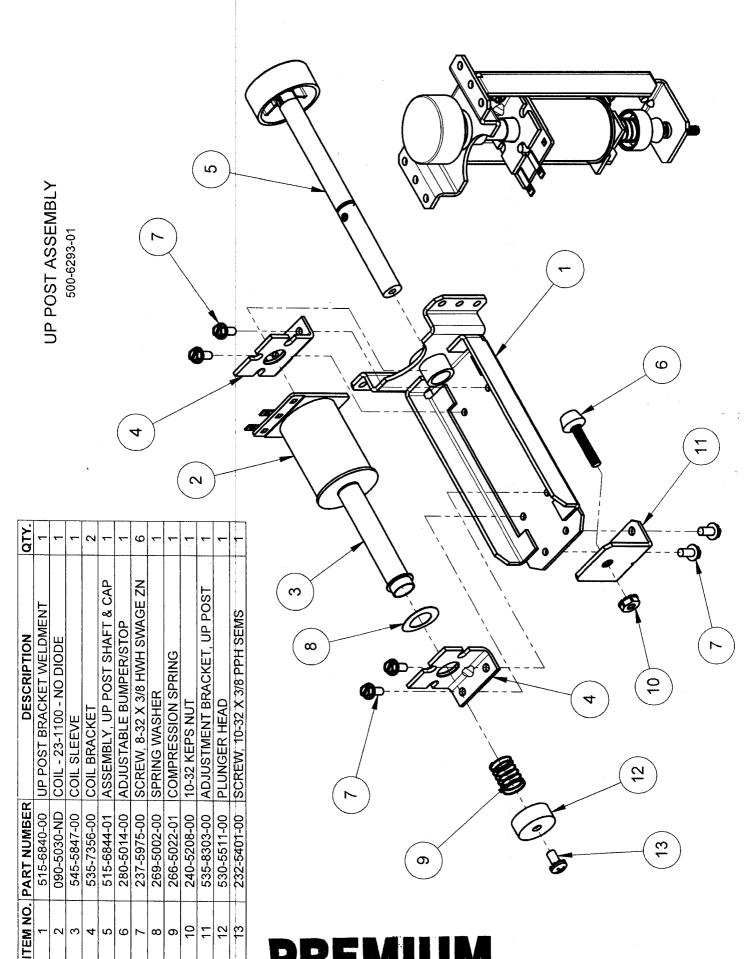


#### PREMIUM


Ball Deflector Assembly, 500-7081-00 (Items 1-7)

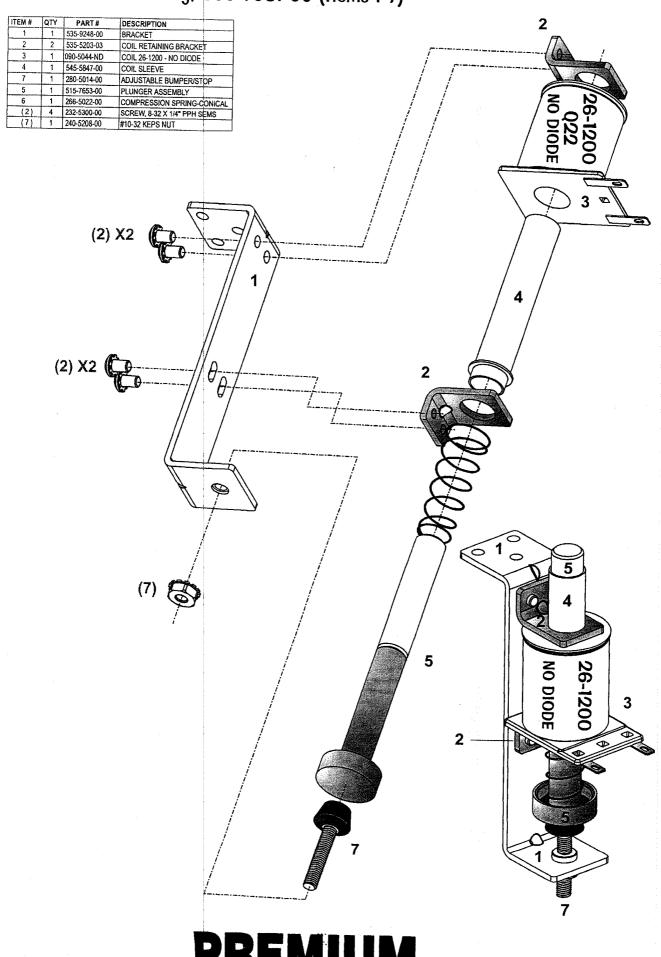

#### Slingshot (Left & Right) Assemblies, 500-5849-00-ND (Qty. 2) (Items 1-9)

Nr.	SLINGSHOT PARTS	QTY.	SPI PART Nr.	Nr.	SLINGSHOT PARTS	QTY.	SPI PART Nr.
1 Item 1	Slingshot Bracket Assembly is secured below the playfield by: #8 X 1/2" SHW		515-5339-01 (Qty. 3) (234-5101-00)	6 7	Compression (Return) Spring Slingshot Stack (Blade) Switch		266-5020-00 180-5054-00
2 Item 2	Coil Retaining Bracket is secured to Item 1 by: #8-32 X 3/8" PPH MS (Ser		535-5203 <b>-</b> 03 2) (232-5301-00)		of the 2 Switches has a Diode (1N4004) (112-5003 e replaced with (1N4001) (112-5001-00).		
3 coil i	Coil, 24-910 [ NO DIODE ] DOES NOT REQUIRE A DIODE. SEE S COIL NOTE		090-5044-ND FOR DETAILS.	8 Items	Switch Body Protect Plate 7 & 8 are secured to Item 1 by: #6-32 X 5/8" HWF	2/per I Swage (Q	535-5045-00 ty. 4) (237-5976-04)
Roll Pi	Coil Sleeve Plunger & Link Assembly dividual Items use: Plunger 2" Lg. (530-5025-01), P n 1/8" e x 5/8" Lg. (251-5008-00) The Plunger Link i	1/per lunger Lin		9® For Inc Arm (5 The Ri	Riveted Arm & Tip Assembly dividual Parts use (requires drilling out rivet & re 15-5341-01), Kicker Tip (545-5216-01) and Rivet, 1. v. Arm is secured to Item 1 by: Retaining Ring, 1/v. ng Note: If 515-5340-01 is unavailable, order the in	1/per reviting) : /8" ø x 1/4" 4" ø Shaft (	515-5340-01 Lg. (249-5003-00) Qty. 1) (270-5002-00)
	etaining Ring, 1/4" ø Shaft (Qty. 1) (270-5002-00) ing Note: If 515-5338-00 is unavailable, order the ind	lividual pa	rt(s) actually required.	require	ng Note: If 500-5849-00-ND is unavailable, order t d. This assembly is identical to 500-5849-02-ND wi Coil, 27-1500 [NO DIODE] (090-5004-ND) instead.		

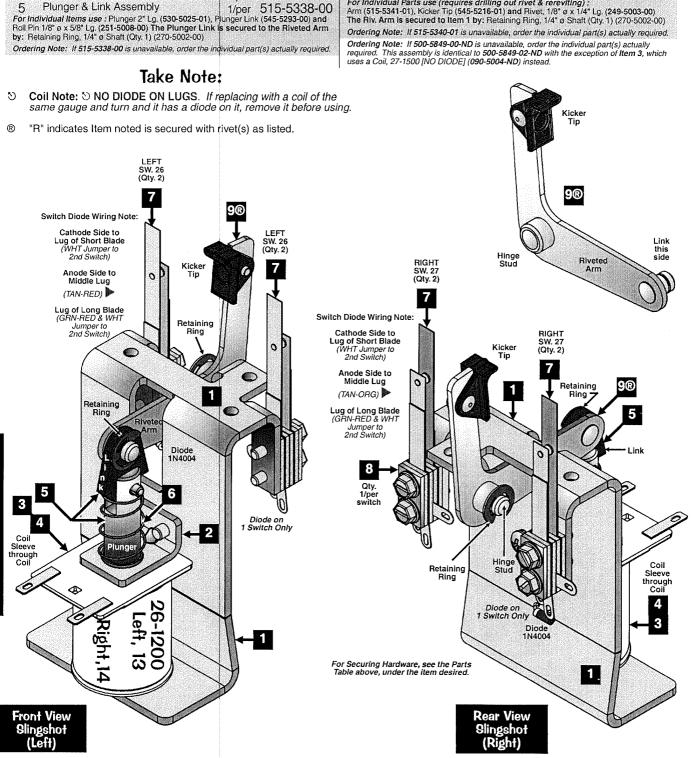

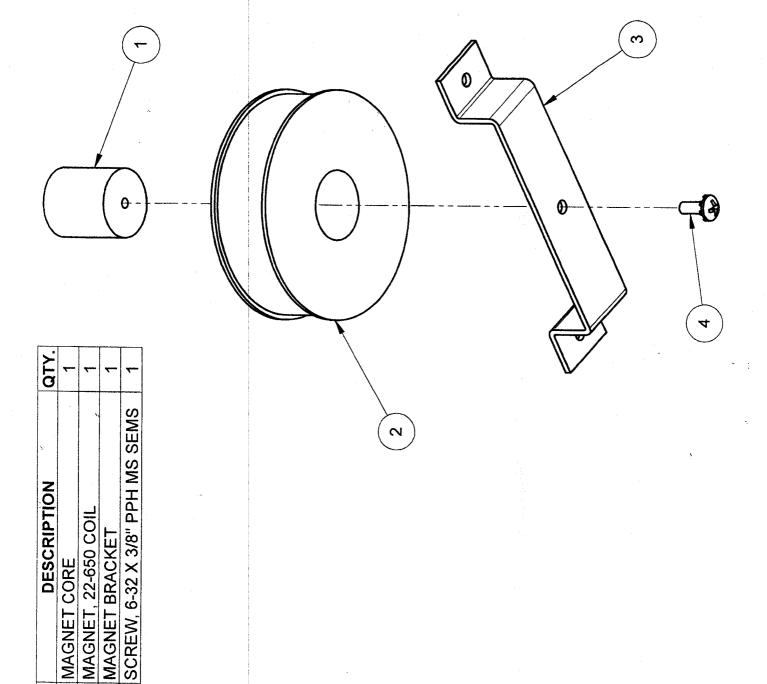

#### PREMIUM

MAGNET, 22-650 COIL MAGNET BRACKET

090-5042-00

8 3 4

535-6637-01


530-5266-01

232-5201-00


MAGNET CORE

ITEM NO. PART NUMBER

511-6896-00

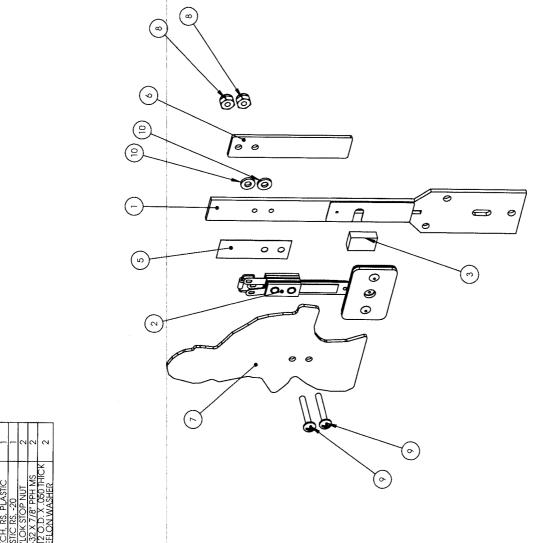

510-5136-00

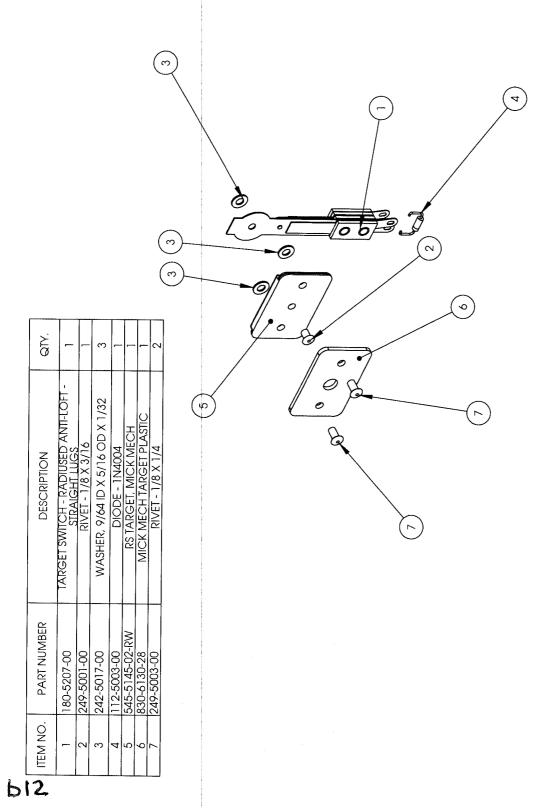


$\overline{}$
ŏ
q.
Ñ
2
Ğ.
Ξ.
S

-		
(		7
	(1)	
	(1)	

ØΤV.

DESCRIPTION
TARGET ARM, RS, MICK MECH
TARGET FLAP, RS MICK MECH
RIVET - 1/8 X 3/16

ITEM NO. PART NUMBER
1 535-0432-00
2 535-5340-00
3 249-5001-00

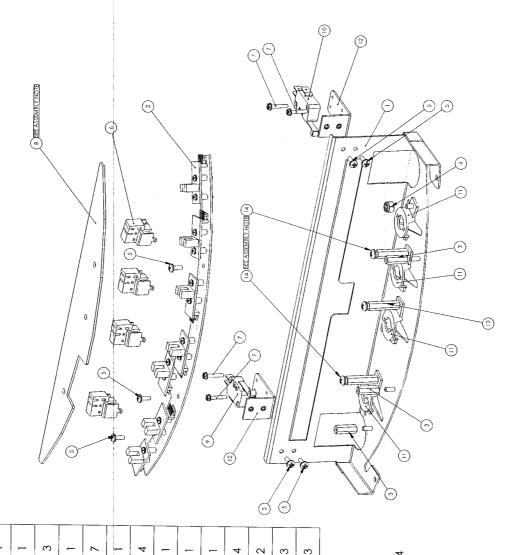

BRKT, SAFETY SW, MICK MECH, RS

SAFTEY SWITCH ASSY - LEFT 5/16 SNAP-ON SOCKET BRKT

545-5760-18

511-6915-00

511-6915-01

SCREW, 8-32 X 3/8" PPH SEMS

HS\_.250, F-F, 8-32

254-5064-00

### ASSEMBLY NOTE:

WIRE GUARD ITEM 8 WILL NEED TO BE REMOVED TO ATTACH THIS ASSEMBLY TO THE BOTTOM PLAYFIELD; DO NOT TIGHTEN 8-32 X 3/8 SCREWS ITEM 14 UNTIL ASSEMBLY HAS BEEN SECURED TO THE PLAYFIELD.

QTY.

DESCRIPTION

515-7752-00 511-6895-00

ITEM NO.

2 8 4 3

Target Rest Brkt, RS Album Mech Opto Plate Assy, RS Album Mech CABLE W/ 4 SOCKETS, RS, MICK MECH

036-5565-07-88

237-5945-00

232-5201-00

SCREW, 4-40 X 5/8" HWH


WIRE GUARD, RS, MICK MECH

SAFTEY SWITCH ASSY - RIGHT

SCREW, 6-32 X 3/8" PPH MS SEMS

HEX SPACER - 3/4"
8-32 NYLON LOCK NUT

254-5008-04

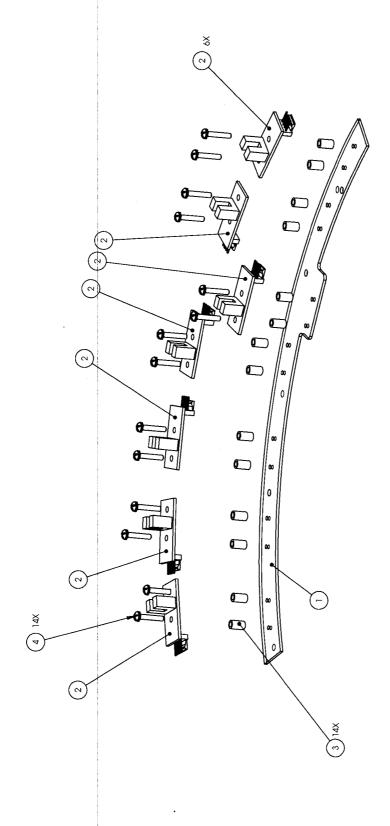


511-6893-00

	TOP PLATE, MOTOR ASSY, MM, RS
DESCRIPTION  Top Plate Motor Brkt, RS Album Mech  6-32 NYLOK STOP NUT  FLIPPER BUSHING  1	
1 515-7754-00 2 240-5005-00 3 545-5070-00	

511-6917-00

617

511-6916-00

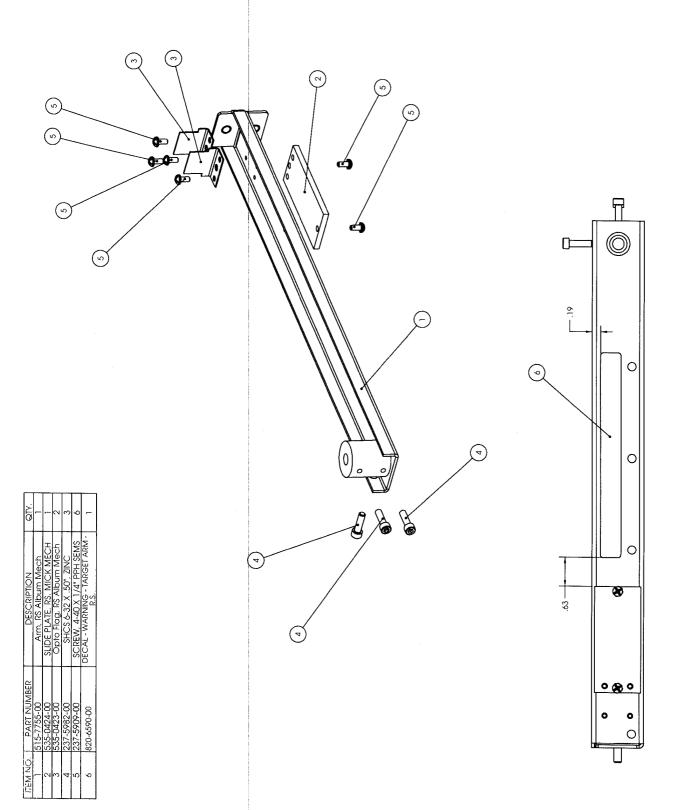



618

515-7/34-00 WELDMENI, BALL LOCK BRACKEI
<b>BEARING BLOCK - BALL LOCK</b>
ASSY, BALL LOCK PLUNGER & BARS
COIL 26-1200 - NO DIODE
COIL SLEEVE
<b>COIL RETAINING BRACKET</b>
COMPRESSION SPRING-CONICAL
SCREW, 8-32 X 1/4" PPH SEMS
<b>PLUNGER HEAD</b>
237-5702-00 SCREW, 10-32 X 1/2 PPH MS
515-7595-00-ND MINI-COIL ASSEMBLY, NO DIODE
237-5975-00 SCREW, 8-32 X 3/8 HWH SWAGE ZN
036-5539-10-B1   CABLE, BALL LOCK MECH


# SSEMBLY, LATCHING BALL LOCK

511-6770-00

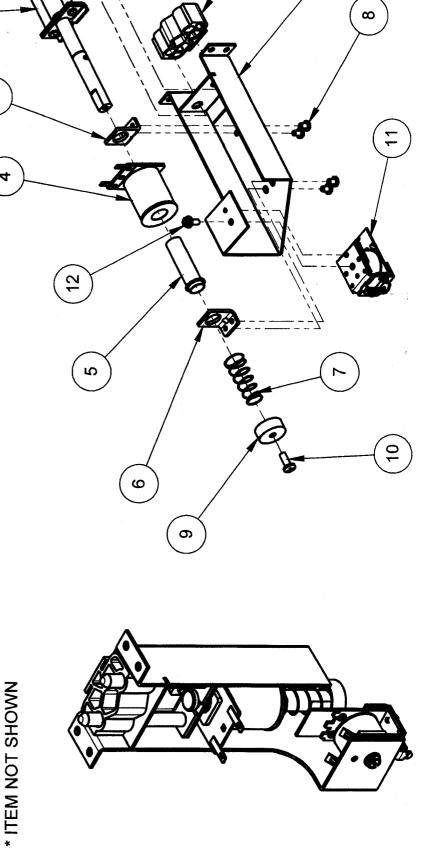


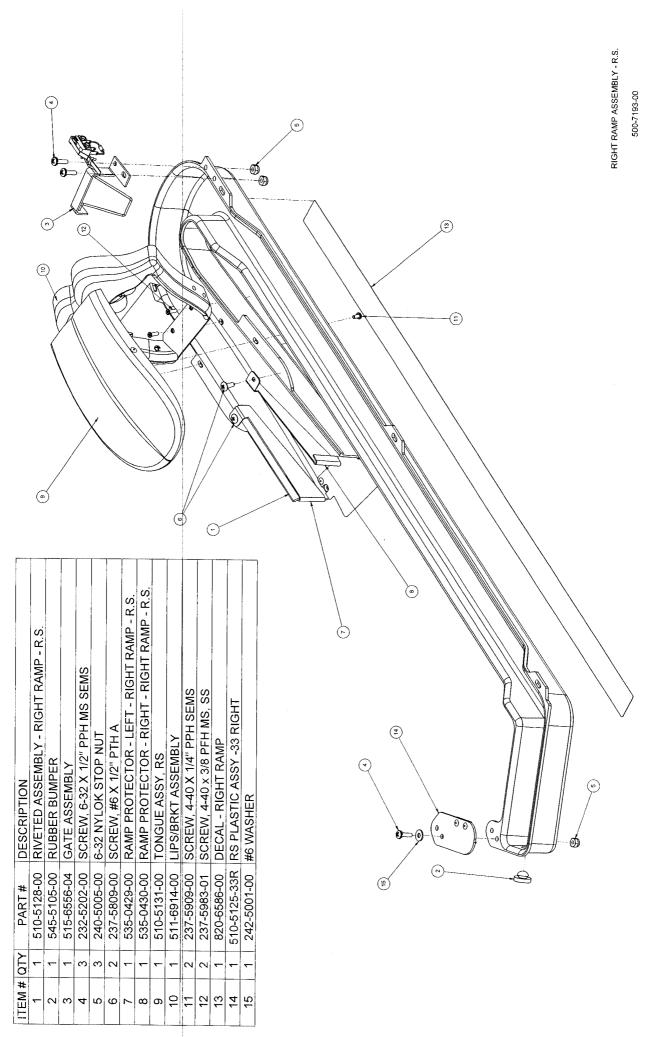


511-6914-00

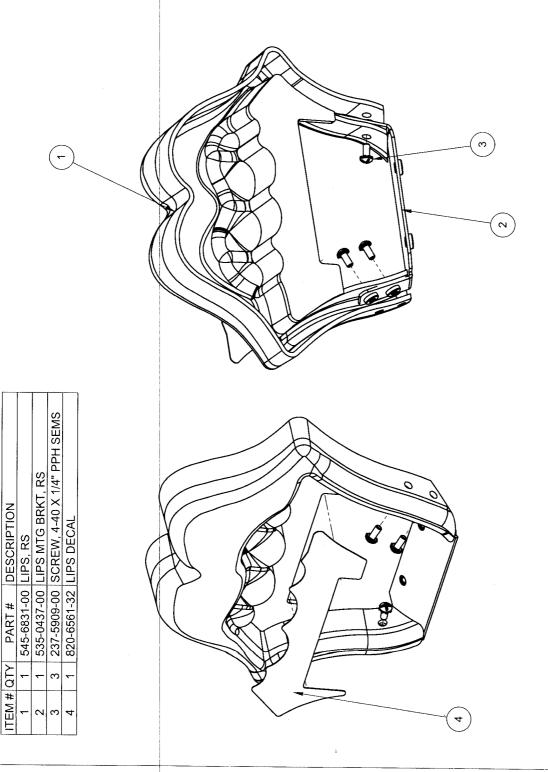

#### Left Control Gate Asm., 511-5033-00 & Right C.G. Asm. 511-5033-01 (Items 1-8)

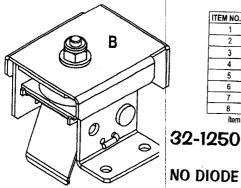

PART NUMBER	DESCRIPTION	QTY.
535-9847-00	BRACKET, ELEC GATE, RAIL MOUNT	1
090-5060-01-ND		1
535-9577-00		1
242-5005-00	# 8 WASHER	1
240-5102-00	# 8-32 NYLON LOCK NUT	1
535-5372-00	REBOUND HINGE PIN	+
535-9682-00	GATE - ELECTRIC (MAGNET)	1
530-5702-01	CLEVIS PIN W/ RING 3/16"D X 1-1/2"	1
	090-5060-01-ND 535-9577-00 242-5005-00 240-5102-00 535-5372-00 535-9682-00 530-5702-01	535-9847-00 BRACKET, ELEC GATE, RAIL MOUNT 090-5060-01-ND MINI-COIL W/CORE - 32-1250, YELLOW 535-9577-00 COVER, ELECTRIC GATE 242-5005-00 #8 WASHER 240-5102-00 #8-32 NYLON LOCK NUT 535-5372-00 REBOUND HINGE PIN 535-9682-00 GATE - ELECTRIC (MAGNET)

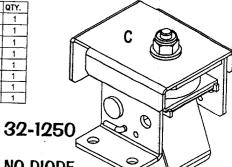

511-5033-00 Control Gate (Left Style)

Parts are Identical Individually. Assembled as shown for Left and Right applications.

NO DIODE NO DIODE

3

